

Use Cases for Plug-in Vehicle Communication as a Distributed Energy Resource

RATIONALE

This document will use both SAE J2836/1™ (charging the PEV using existing and optimized Utility programs) and SAE J2836/2™ (DC charging) as a basis and then add the additional information for the Plug-In Electric Vehicles (PEV) to function as a Distributed Energy Resource (DER). It is expected that including DER functions to a PEV provides a more complete solution to Smart Charging that includes Reverse Power Flow and other opportunities to stabilize the local grid distribution network and its transformers.

This is the first version of this document and completes step 1 effort that captures the initial objectives of the SAE task force. The intent of step 1 is to record as much information on “what we think works” and publish. The effort will continue to step 2 that allows public review for additional comments and viewpoints, while the task force also continues additional testing and early implementation. Results of step 2 effort will then be incorporated into updates of this document and lead to a republished version.

TABLE OF CONTENTS

1.	SCOPE.....	4
1.1	Purpose.....	4
2.	REFERENCES.....	6
2.1	Applicable Documents	6
2.2	Related Publications	6
3.	DEFINITIONS	9
4.	TECHNICAL REQUIREMENTS.....	13
4.1	Relationship of SAE J2836/3™ to SAE J2836/1™	14
4.2	Types of Reverse Power Flow	16
4.3	Communications for Reverse Power Flow.....	30
4.4	Inverter-based Distributed Energy Resources	42
4.5	Use Cases and V2G Applications.....	48
4.6	Considerations for Utility Use Case U6 - Basic Distributed Energy Resource	58
4.7	Considerations for Use Case U7 - Advanced Distributed Energy Resource.....	72
4.8	Considerations for Use Case PEV4 - PEV as a Distributed Energy Resource.....	85
5.	NOTES.....	97
5.1	Marginal Indicia	97

SAE Technical Standards Board Rules provide that: “This report is published by SAE to advance the state of technical and engineering sciences. The use of this report is entirely voluntary, and its applicability and suitability for any particular use, including any patent infringement arising therefrom, is the sole responsibility of the user.”

SAE reviews each technical report at least every five years at which time it may be revised, reaffirmed, stabilized, or cancelled. SAE invites your written comments and suggestions.

Copyright © 2013 SAE International

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SAE.

TO PLACE A DOCUMENT ORDER: Tel: 877-606-7323 (inside USA and Canada)
Tel: +1 724-776-4970 (outside USA)
Fax: 724-776-0790
Email: CustomerService@sae.org

SAE WEB ADDRESS:

<http://www.sae.org>

**SAE values your input. To provide feedback
on this Technical Report, please visit
http://www.sae.org/technical/standards/J2836/3_201301**

APPENDIX A	USE CASE PEV4.....	98
APPENDIX B	USE CASE PR2.....	107
APPENDIX C	USE CASE U6	119
APPENDIX D	USE CASE U7	121
APPENDIX E	INFORMATION DEFINITIONS	126
APPENDIX F	ACRONYMS	129
FIGURE 1	PURPOSE OF DOCUMENT.....	5
FIGURE 2	SUMMARY OF DETAILED USE CASES	15
FIGURE 3	EXPORTABLE POWER PANEL FOR V2L.....	19
FIGURE 4	V2H AND V2G WITH ON-BOARD INVERTER	21
FIGURE 5	SYSTEM ARCHITECTURE FOR DC LEVEL 1 V2G.....	23
FIGURE 6	SYSTEM ARCHITECTURE FOR DC LEVEL 2 V2G.....	24
FIGURE 7	V2H AND V2H-X REVERSE POWER FLOW.....	25
FIGURE 8	DC MICROGRID	28
FIGURE 9	INTERFACES WITH INVERTER OF A DER DEVICE	30
FIGURE 10	KEY PARAMETERS FOR MANUAL CONTROL.....	33
FIGURE 11	OPTIONS FOR MANUALLY CONTROLLING START UP	33
FIGURE 12	OPTIONS FOR MANUALLY CONTROLLING TERMINATION.....	34
FIGURE 13	RELATIONSHIP OF THE UTILITY, PREMISES, AND PEV	34
FIGURE 14	COMMUNICATION WITH EVSE INVERTER.....	36
FIGURE 15	COMMUNICATION WITH PEV INVERTER	37
FIGURE 16	EXTERNAL INVERTER DETAILS.....	38
FIGURE 17	TYPICAL FAST CHARGING PROFILE	39
FIGURE 18	EXAMPLE OF INFORMATION EXCHANGE.....	41
FIGURE 19	IEEE 1547 LIMITS	43
FIGURE 20	USE CASES AND V2G APPLICATIONS	48
FIGURE 21	ELEMENTS THAT DEFINE OPERATIONAL BANDWIDTH	51
FIGURE 22	POWER AND BATTERY CHARACTERISTICS.....	58
FIGURE 23	BASIC ELEMENTS OF THE INV4 POWER SETTING COMMAND	60
FIGURE 24	EXAMPLE OF INV4 COMMAND SEQUENCING.....	61
FIGURE 25	PARAMETERS THAT DEFINE PEV CHARGING REQUIREMENTS.....	63
FIGURE 26	RELATIONSHIP OF CHARGING PARAMETERS	64
FIGURE 27	FORWARD POWER FLOW MEASURES	65
FIGURE 28	REVERSE POWER FLOW MEASURES.....	66
FIGURE 29	EFFECT OF INDUCTANCE AND CAPACITANCE	72
FIGURE 30	COMPONENTS OF COMPLEX POWER VECTOR.....	73
FIGURE 31	MINIMUM POWER FACTOR	76
FIGURE 32	VAR AND POWER FACTOR ZONES	77
FIGURE 33	VOLTAGE REFERENCE OFFSET.....	78
FIGURE 34	STRUCTURE OF AN AUTONOMOUS FUNCTION.....	81
FIGURE 35	ARRAY FUNCTIONS.....	81
FIGURE 36	LVRT AND HVRT CONCEPT	82
FIGURE 37	EXAMPLE OF LVRT IMPLEMENTATION.....	83
FIGURE 38	BUSINESS DEALS ASSOCIATED WITH V2G APPLICATIONS.....	87
FIGURE 39	PEV4 DER PROCESS CHART	89
FIGURE 40	ELEMENTS OF ACTIVE SESSION.....	91
FIGURE 41	THREE TIERS OF V2G APPLICATIONS.....	95

TABLE 1	INVERTER CHARACTERISTICS.....	17
TABLE 2	REVERSE POWER FLOW OUPUT	18
TABLE 3	SCENARIOS FOR USE CASE PR2	29
TABLE 4	UTILITY USE CASES	50
TABLE 5	EXAMPLES OF OPERATIONAL BANDWIDTH	51
TABLE 6	EXAMPLES OF V2G APPLICATIONS	53
TABLE 7	RECOMMENDED PEV INFORMATION FOR U6	68
TABLE 8	ACTIVE POWER SETPOINT COMMAND PARAMETERS	69
TABLE 9	LEVELS OF ENGAGEMENT	70
TABLE 10	POWER FACTOR SIGN CONVENTIONS	75
TABLE 11	RECOMMENDED PEV INFORMATION FOR FIXED POWER FACTOR.....	79
TABLE 12	FIXED POWER FACTOR SETPOINT COMMAND PARAMETERS	79
TABLE 13	RECOMMENDED PEV INFORMATION FOR FIXED VAR FUNCTION	80
TABLE 14	FIXED VAR COMMAND PARAMETERS	80
TABLE 15	CHARACTERISTICS OF PEV4 SCENARIOS	95
TABLE A.1	OVERVIEW OF PEV4 SCENARIOS	98
TABLE A.2	PEV DIRECT SCENARIO.....	99
TABLE A.3	EVSE DIRECT SCENARIO	101
TABLE A.4	PEV EVSE DIRECT SCENARIO	103
TABLE A.5	PEV EVSE RELAY SCENARIO.....	105
TABLE B.1	OVERVIEW OF PR2 SCENARIOS	107
TABLE B.2	SCENARIO PR2-V2G-DER-AC	108
TABLE B.3	SCENARIO PR2-V2G-DER-DC.....	109
TABLE B.4	SCENARIO PR2-V2G-DER-WL	110
TABLE B.5	SCENARIO PR2-V2G-MAN-AC	111
TABLE B.6	SCENARIO PR2-V2G-MAN-DC	112
TABLE B.7	SCENARIO PR2-V2G-MAN-WL	113
TABLE B.8	SCENARIO PR2-V2H-MAN-AC-NEMA	114
TABLE B.9	SCENARIO PR2-V2H-MAN-DC	116
TABLE B.10	SCENARIO PR2-V2L-MAN-AC-NEMA.....	117
TABLE B.11	SCENARIO PR2-V2L-MAN-DC	118
TABLE C.1	USE CASE U6 EXAMPLE	120
TABLE D.1	FIXED POWER FACTOR EXAMPLE	122
TABLE D.2	FIXED VAR EXAMPLE	123
TABLE D.3	LOAD AUTONOMOUS FUNCTION EXAMPLE	124
TABLE D.4	ACTIVE AUTONOMOUS FUNCTION EXAMPLE	125

1. SCOPE

This SAE Information Report establishes use cases for a Plug-in Electric Vehicle (PEV) communicating with an Energy Management System (EMS) as a Distributed Energy Resource (DER). The primary purpose of SAE J2836/3™ is to define use cases which must be supported by SAE J2847/3. This document also provides guidance for updates to SAE J2847/2 to allow an inverter in an EVSE to use the PEV battery when operating together as a distributed energy resource (DER).

1.1 Purpose

The title of this document suggests that its primary purpose is to present use cases for communication with a PEV as a DER. This is true, but this document will also provide a broader view of the issues associated with reverse power flow and how a PEV as a DER can serve the bulk grid, the distribution system, and a customer premises.

Distributed Energy Resources are small, modular Distributed Generation (DG) or energy storage systems that provide electric capacity or energy where it is needed on the distribution grid. A PEV using a "utility-interactive inverter" can be hooked up in parallel with the primary grid power and it is considered to be a Distributed Energy Resource (DER). The use of a PEV as a DER will be called Vehicle to Grid (V2G). The term is often associated with the concept of an aggregator coordinating the power flow of many PEVs to provide frequency regulation for the bulk grid. However, V2G is not just about the bulk grid. The V2G and DER functionality can also be used by a facility energy management system to offset other facility loads during periods of peak demand. These are only two of many possible V2G applications.

Even if a PEV is not capable of reverse power flow, it can still be used as a DER device to allow for active control of charging for grid purposes. The use of a variable load for grid purposes is sometimes called Demand Dispatch or Demand Management. This can be considered to be a single-sided use of a DER device and is no different than a generator that can only vary power output.

A PEV could also serve as a power source for tools or other devices, where grid power is not available, or provide emergency backup power for a home following a loss of grid power. These are all off-grid applications. This is all about pure reverse power flow and it can be engaged manually using controls and displays provided by the vehicle manufacturer. For these applications the vehicle is just like a portable standby generator.

In all of the discussion of the benefits of reverse power flow and the use of a PEV as a DER, it is important to always remember that the primary purpose of the energy stored in the vehicle battery is transportation. While it may be acceptable for a stationary grid storage unit to discharge all afternoon and recharge at night, a PEV participating in a V2G application may need to be fully charged by the end of the workday. The use cases for a PEV serving as a DER will need to account for two objectives: serving the grid in a V2G application and also having enough energy by the time of departure to meet its transportation needs.

Figure 1 provides an overview of the purpose of the document. A stationary, grid-connected, energy storage system (ESS) is shown at the top of the diagram. It is considered to be a distributed energy resource (DER). There is a great deal of work going on to integrate ESS units into the grid. A plug-in electric vehicle (PEV) with an on-board inverter looks like the stationary ESS and can be considered to be a DER device. This system is shown in the middle of the diagram. The possible use of reverse-flow capable PEVs, as inverter-based ESS units, has generated significant interest. This potential use of PEVs has become known as vehicle to grid (V2G). Alternatively, the inverter could be located externally in the electric vehicle supply equipment (EVSE) in which case the PEV battery is only used to supply or absorb DC power as required by the inverter. This system concept is shown at the bottom of the figure.

It is often assumed that the premises network will use the Smart Energy Profile 2.0 (SEP2) for communication and the PEV will be able to use this protocol for communication directly through the EVSE to the Energy Services Interface (ESI). The ESI can be thought of as the gateway between the premises network and the outside systems. This SEP2 assumption may not be true for many premises networks, in which case the EVSE will need to translate messages from the protocol used by the local network into SEP2 used by the PEV. SAE J2847/3 will define the communications between the EVSE and the PEV for those cases where the inverter is on-board the PEV. It is expected that the EVSE to PEV communications would be by power line carrier (PLC) on the control pilot. If the premises network uses SEP2 and the EVSE is not needed to perform protocol translation for the PEV, it may be possible for the PEV to use a wireless link directly to the network.

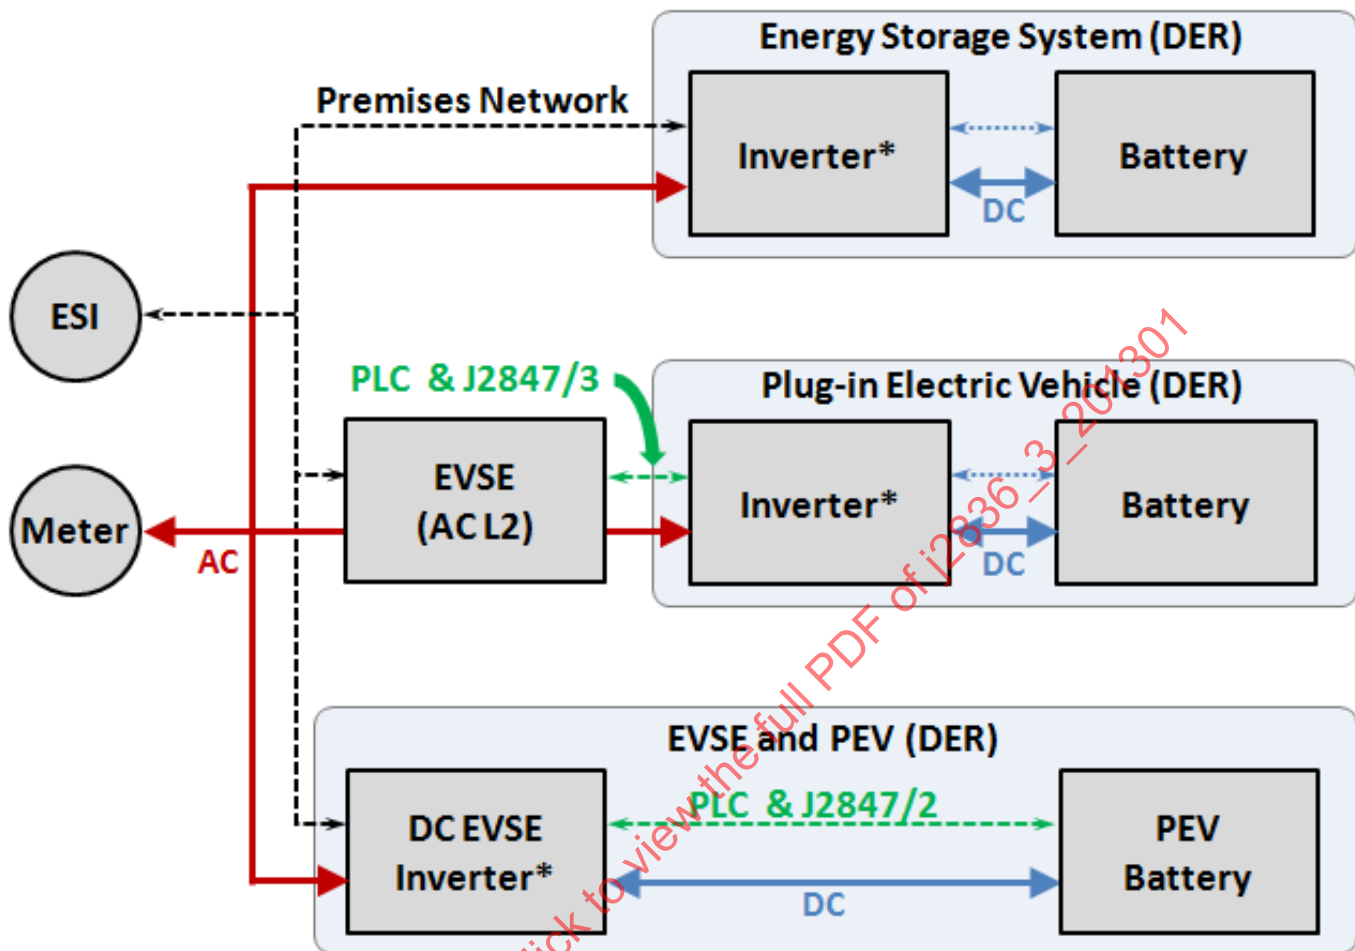


FIGURE 1 - PURPOSE OF DOCUMENT

When the inverter is located in the EVSE it will need to directly interact using the network protocol. This could be SEP2 but in many sites it could be a different protocol. The use cases in this document and J2847/3 could help with the design of the EVSE communications, but there are other documents such as IEC TR 61850-90-7 that could be directly used by the EVSE manufacturer. An external inverter will need to interact with the battery management system (BMS) of the PEV. This will be similar to the communications used for fast charging as defined by J2847/2, but the focus will be very different and changes will be required for DER use. For fast charging, the PEV BMS manages the charging current using the data link. For DER use, the inverter will draw from the battery or push into the battery whatever current is needed to perform its DER function. In this case the BMS defines limits for the inverter, but does not manage the inverter power conversion.

2. REFERENCES

2.1 Applicable Documents

The following publications form a part of this specification to the extent specified herein. Unless otherwise indicated, the latest issue of SAE publications shall apply.

2.1.1 SAE Publications

Available from SAE International, 400 Commonwealth Drive, Warrendale, PA 15096-0001, Tel: 877-606-7323 (inside USA and Canada) or 724-776-4970 (outside USA), www.sae.org.

J2836/1™ Use Cases for Communication Between Plug-in Vehicles and the Utility Grid

2.2 Related Publications

The following publications are provided for information purposes only and are not a required part of this SAE Technical Report.

2.2.1 SAE Publications

Available from SAE International, 400 Commonwealth Drive, Warrendale, PA 15096-0001, Tel: 877-606-7323 (inside USA and Canada) or 724-776-4970 (outside USA), www.sae.org.

SAE J1715 Hybrid Electric Vehicle (HEV) & Electric Vehicle (EV) Terminology

SAE J1772™ SAE Electric Vehicle and Plug in Hybrid Electric Vehicle Conductive Charge Coupler

SAE J2836/2™ Use Cases for Communication between Plug-in Vehicles and Off-Board DC Chargers

SAE J2836/5™ Use Cases for Communication between Plug-in Vehicles and their Customers

SAE J2836/6™ Use Cases for Wireless Charging Communication between Plug-in Electric Vehicles and the Utility Grid

SAE J2847/1 Communication between Plug-in Vehicles and the Utility Grid

SAE J2847/2 Communication between Plug-In Vehicles and Off-Board DC Chargers

SAE J2847/3 Communication for Plug-in Vehicles as a Distributed Energy Resource

SAE J2847/5 Communication between Plug-in Vehicles and their Customers

SAE J2847/6 Wireless Charging Communication between Plug-in Electric Vehicles and the Utility Grid

SAE J2894/1 Power Quality Requirements for Plug-In Electric Vehicle Chargers

SAE J2931/1 Digital Communications for Plug-in Electric Vehicles

SAE J2931/4 Broadband PLC Communication for Plug-in Electric Vehicles

SAE J2954 Wireless Charging of Electric and Plug-in Hybrid Vehicles

2.2.2 American National Standards Institute (ANSI)

Available from American National Standards Institute, 25 West 43rd Street, New York, NY 10036-8002, Tel: 212-642-4900, www.ansi.org.

ANSI C84.1 American National Standard for Electric Power Systems and Equipment – Voltage Ratings (60 Hertz)

2.2.3 Electric Power Research Institute (EPRI) Publications

Available from EPRI, 3420 Hillview Avenue, Palo Alto, California 94304 (www.epri.com)

Common Functions for Smart Inverters, EPRI, Palo Alto, CA: 2011. 1023059.

2.2.4 IEEE Publications

Available from IEEE, 445 Hoes Lane, Piscataway, NJ 08854-4141 (www.ieee.org)

IEEE 1547TM Standard for Interconnecting Distributed Resources with Electric Power Systems

IEEE 1547.1TM Standard for Conformance Test Procedures for Equipment Interconnecting Distributed Resources with Electric Power Systems

IEEE 1547.2TM Application Guide for IEEE Standard 1547TM, IEEE Standard for Interconnecting Distributed Resources with Electric Power Systems

IEEE 1547.3TM Guide for Monitoring Information Exchange and Control of Distributed Resources with Electric Power Systems

IEEE 1547.4TM Guide for Design, Operation, and Integration of Distributed Resource Island Systems with Electric Power Systems

IEEE 1547.6TM Recommended Practice for Interconnecting Distributed Resources with Electric Power Systems Distribution Secondary Networks

IEEE 1547.7TM Guide to Conducting Distribution Impact Studies for Distributed Resource Interconnection

IEEE 1547.8TM Recommended Practice for Establishing Methods and Procedures that Provide Supplemental Support for Implementation Strategies for Expanded Use of IEEE Standard 1547

2.2.5 International Electrotechnical Commission (IEC) Publication

IEC publications are available from ANSI, 25 West 43rd Street, New York, NY 10026-8002 (www.ansi.org)

IEC 61850 Communication networks and systems for power utility automation - *Part 7-420*, Basic communication structure – Distributed energy resources logical nodes

IEC 61850 Communication networks and systems for power utility automation - *Part 90-7* IEC 61850 object models for photovoltaic, storage, and other DER inverters

2.2.6 National Fire Protection Association Publication

Available from the National Fire Protection Agency, 1 Batterymarch Park, Quincy, MA 02169 (www.nfpa.org)

NFPA 70®, National Electrical Code® (NEC®)

2.2.7 NIST Smart Grid Interoperability Panel PAP-07

Available only from PAP-07 website at <http://collaborate.nist.gov/twiki-sggrid/bin/view/SmartGrid/PAP07Storage>

Advanced Power System Management Functions and Information Exchanges for Inverter-based DER Devices, Modeled in IEC 61850-90-7

2.2.8 Underwriters Laboratories Publication

Available from Underwriters Laboratories Inc., 333 Pfingsten Road, Northbrook, IL 60062 (www.ul.com)

UL 1008 Standard for Transfer Switch Equipment

UL 1741 Standard for Inverters, Converters, Controllers and Interconnection System Equipment for Use with Distributed Energy Resources

2.2.9 ZigBee Alliance Publication

Available from ZigBee Alliance, 2400 Camino Ramon, Suite 375, San Ramon, CA 94583 (www.zigbee.org)

Smart Energy Profile 2.0 Marketing Requirements Document

Smart Energy Profile 2.0 Technical Requirements Document

Smart Energy Profile 2.0 Application Protocol Specification

SAENORM.COM : Click to view the full PDF of J2836-3-201301

3. DEFINITIONS

This document builds on J2836/1TM and should be considered to be a supplement to that document for the purpose of reverse power flow and for the PEV serving as a distributed energy resource for the grid. Terms that are first introduced in this document, or that are particularly relevant to reverse power flow or the use of a vehicle as a distributed energy resource, or that are modified from the definitions provided in J2836/1TM are defined in this section. Please see J2836/1TM and J1715 for the definition of other terms.

3.1 BIDIRECTIONAL CONVERTER

A bidirectional converter is the term used for a device that can convert from AC to DC in one direction to serve as a battery charger and then be capable of being reversed and convert from DC to AC in the other direction to serve as an inverter. The device needs to be able to act as either a voltage source or a current source when providing AC power. The power conversion electronics can be located in the vehicle or in an external unit.

3.2 DEMAND RESPONSE AND LOAD CONTROL (DRLC)

Demand Response and Load Control is a common function set used to control shedding load on demand from the electric grid. It is a more active form of load management than price signals and can be used to target specific high load devices. A plug-in vehicle can serve as a variable or interruptible load while charging and participate in DRLC programs.

3.3 DISTRIBUTED ENERGY RESOURCES (DER)

Distribute Energy Resources are small, modular Distributed Generation (DG) and storage technologies that provide electric capacity or energy where it is needed on the distribution grid. DG, which includes gensets, solar panels, and small wind turbines, only serve as a source of energy. Storage is a unique form of DER because, unlike pure DG, the unit can provide either energy or variable demand. Plug-in vehicles are DER storage systems.

3.4 ELECTRICAL COUPLING POINT (ECP)

Each DER unit has an ECP which is the point of electrical connection between the DER source of energy (generation or storage) and the local electrical power system (EPS).

3.5 ENERGY MANAGEMENT SYSTEM (EMS)

The term Energy Management System (EMS) is used in this document to describe a computer system that can communicate with a PEV or EVSE for the purpose of controlling the charging or discharging of the PEV battery. An EMS can exist at several tiers: customer premises, distribution level, or system level. These computer systems may go by other names, but the term EMS will be used generically in this document.

3.6 EXPORTABLE POWER PANEL (EPP)

An Exportable Power Panel (EPP) is a vehicle-mounted set of NEMA receptacles that is used to provide power to external loads (V2L). The cords from the loads are plugged into the EPP receptacles. An AC L1 cordset or a portable AC L2 EVSE can be plugged in to the EPP to provide V2V capability. The EPP can be used to connect the vehicle to a home backup power port to provide V2H capability following a grid failure.

3.7 FORWARD POWER FLOW (FPF)

Forward Power Flow means the direction of energy for Charging a Vehicle.

3.8 FOUR-QUADRANT CONVERTER

This term refers to an electronic device that can produce or absorb both active and reactive power. When a PEV is discharging the device serves as an inverter converting DC current to AC current. It can displace the AC current waveform relative to the AC voltage waveform to generate or absorb reactive power, depending on whether it leads or lags the supplied current relative to the grid voltage. The device converts AC power to DC current to charge the PEV battery. It can also shift the consumed current relative to the grid voltage waveform to produce or absorb reactive power.

3.9 POINT OF COMMON COUPLING (PCC)

This is point where the local (premises) and utility electric power systems connect. This would normally be at the electric meter.

3.10 POWER FACTOR (TOTAL, DISPLACEMENT, AND DISTORTION)

Displacement power factor is defined as the ratio of active (or real) power in Watts to apparent power in Volt-Amps at the fundamental frequency (50Hz / 60 Hz). It is a measure of the phase shift that occurs between line voltage and line current when the AC line is loaded with a linear load having reactive characteristics, such as an AC motor. The line current is sinusoidal in shape, but either leads or lags the line voltage in phase.

Apparent Power is the vector sum of Active Power and Reactive Power (in VAR – Volt Amps Reactive). Active and Reactive Power are two sides of a right triangle with Apparent power as the hypotenuse. The angle between Apparent Power and Active Power vectors is the phase angle between the voltage and current waveforms. If the voltage and current are perfectly aligned, then only Active Power is transferred – this is a Power Factor of unity and is the most efficient for transfer of energy.

Distortion Power Factor is the ratio of fundamental current to total RMS current. The line current distortion is normally the result of non-linear loading of the AC line. Total power factor is the product of displacement power factor and distortion power factor. If voltage distortion is negligible, total power factor is equal to the displacement power factor.

3.11 POWER FACTOR CORRECTION

Generally Power Factor Correction means compensating for any reactive power associated with power conversion to achieve a Power Factor close to unity for the system. A power converter can be designed to control the phase angle between voltage and current during either charging or reverse power flow. This functionality can be used to correct for low power factor of a premises. It can also be used help support voltage on the Distribution or Transmission System.

3.12 REGULATION SERVICES (FREQUENCY REGULATION)

Regulation services are used to continuously fine-tune the balance of active power (Watts) between power generation and demand. In many power markets, this function, called frequency regulation or automatic generation control (AGC), is priced separately from power generation and procured as an ancillary service (another such service is spinning reserves). The grid operator needs to be able to ensure generators ramp output up or down in real time to match system's active power needs. Much of this is done by the system operator forecasting load and scheduling generators to match the anticipated load – this is done one day ahead for each hour of the following day, then it is corrected one hour ahead during that day, and further corrected during every (real time) five minute block during the hour. However, if the load exceeds the supply all of the generators slow down (or droop) under the load and the frequency drops. The system operator computers measure the drop and instantly command (using AGC) some generators to increase output to exactly match the load and return the grid frequency to the target of 60 Hz. The reverse happens if the load is less than scheduled generation at any instant. Some generators are scheduled to provide frequency regulation by operating at less than full capacity and modulating output up or down in response to AGC commands. A grid-tied energy storage system can charge or discharge in response to AGC commands to provide the same service. (NOTE – Voltage Support is different than Frequency Regulation and requires the ability to generate or absorb Reactive Power (VARs)).

3.13 REVERSE POWER FLOW (RPF)

Reverse Power Flow means the direction of energy for discharging a Vehicle.

3.14 VEHICLE TO GRID (V2G)

When vehicle power is fed into the bulk electric grid or a microgrid, we refer to it as “Vehicle-to-Grid” power, or V2G. V2G is the only mode that allows a vehicle to return power to a home, business, or charge station which is actively connected to the grid. This could be at home or remote locations and initiated for contract driven ancillary services (regulation, peak shaving, reserves, etc.). A PEV in V2G operation is considered by utilities to be a Distributed Energy Resource (DER). For the provision of ancillary services to the grid, V2G is really about bidirectional flow and not just reverse flow. The term V2G includes the special case where only the rate of charging can be dynamically controlled by the utility – sometimes this is referred to as V1G.

V2G can also be used solely within the home by a home energy management system to manage the power demand of the home on the external grid – this is not a V2H application because the vehicle and home loads are still connected to the grid. A vehicle on-board inverter must operate as a current source that is synchronized to the voltage waveform of the grid when providing AC power through the J1772™ connection to the EVSE. It must stop power conversion if the grid voltage or frequency falls outside of IEEE 1547™ limits.

3.15 VEHICLE TO HOME (V2H) USING AN ON-BOARD INVERTER

Vehicle to Home describes the capability of a vehicle to act as a backup “generator” for selected critical loads in a home following the failure of the power grid. The vehicle on-board inverter regulates the voltage and frequency and the power flow is routed to NEMA receptacles on the vehicle exportable power panel. A power cord plugs into a NEMA receptacle on the vehicle panel and to the home’s electrical service through a transfer switch that isolates the critical loads to be powered by the vehicle from the grid. The loads served by the vehicle on board inverter must be disconnected from the grid before any power can be provided to these loads. The inverter output must be disconnected from the vehicle J1772™ connector to prevent voltage from being applied to the connector pins. The J1772™ connection to the EVSE cannot be used for V2H using the on-board inverter because the AC EVSE must receive power from the premise to operate. However, if another power source is regulating the voltage and frequency for an islanded home and powering the AC Level 2 EVSE, the vehicle can engage through the EVSE in V2G mode using its on-board inverter.

3.16 VEHICLE TO HOME (V2H-X) USING AN EXTERNAL INVERTER

Vehicle to Home using an external inverter and DC reverse flow from the vehicle through the J1772™ connection is called V2H-X in this document. An external EVSE inverter can be designed to use an internal battery to operate its control pilot and other electronics when grid power is not available. This inverter could regulate voltage and frequency when it is not connected to the bulk grid and it could act as a current source if it is operating in V2G mode into a live grid or microgrid. An EVSE and premises that is V2H-X capable can seamlessly switch between V2G and V2H-X. Grid-tied inverters used with home solar (PV) systems have this mode switching capability today and can even automatically operate the transfer switch to isolate the home from the grid. The vehicle cannot discriminate between V2G and other modes. It is all just reverse DC flow and the full responsibility for compliance with IEEE 1547 rests with the EVSE. It is also possible to design a portable battery powered inverter unit to provide V2L-X and V2V-X capability using the vehicle J1772™ receptacle for DC reverse power flow.

3.17 VEHICLE TO LOAD (V2L) USING AN ON-BOARD INVERTER

Vehicle to load means the transfer of energy from the Vehicle to a Load. This can be used to support power to tools and other items not connected to a home or the grid. The vehicle on-board inverter regulates the voltage and frequency and the power flow is routed to NEMA receptacles on the vehicle exportable power panel. The inverter output must be disconnected from the vehicle J1772™ connector to prevent voltage from being applied to the connector pins.

3.18 VEHICLE TO VEHICLE (V2V) USING AN ON-BOARD INVERTER

Vehicle to Vehicle means the transfer of energy from one vehicle to another. This could be related to jump starting or other energy transfer needs between vehicles. The vehicle on-board inverter regulates the voltage and frequency and the power flow is routed to NEMA receptacles on the vehicle exportable power panel. The inverter output must be disconnected from the J1772™ connector to prevent voltage from being applied to the connector pins. An AC Level 1 cordset is plugged into a NEMA 120 VAC receptacle on the source vehicle exportable power panel and connected to the vehicle J1772™ receptacle of the receiving vehicle.

3.19 VOLTAGE SUPPORT

Voltage support is performed at two levels – at bulk generation and transmission level by the system operator and at the feeder level by the distribution utility. At the transmission system level Voltage Support is an Ancillary Service related to the compensation of Reactive Power (VARs). Some generators are capable of producing or absorbing reactive power in addition to providing real power. There are also special devices that apply a variable capacitive load at transmission levels to compensate for the inductance of transmission lines and reactive loads. At the feeder level, voltage must be controlled from the substation to the end of the feeder. This is generally done with a tapped transformer that can adjust the head end voltage. Capacitors are installed along feeders to compensate for reactive power. Sometimes these can be switched. A device called a distributed static compensator can be used to dynamically provide reactive power compensation. A stored energy system with a capability to control both real and reactive power flow (a four quadrant power converter) can provide Voltage Support at system level (like a generator) or at a distribution level (like a distributed static compensator or tapped transformer and switched capacitor bank).

SAENORM.COM : Click to view the full PDF of J2836_3_201301

4. TECHNICAL REQUIREMENTS

This major section discusses issues and considerations related to pure reverse power flow (discharging) under manual control and the use of a PEV as a distributed energy resource (DER) for use in various types of Vehicle to Grid applications. While this section is called "Technical Requirements" it is part of an information report, not a standard or even a recommended practice, and cannot be used to define actual requirements. Some of the discussion may read like requirements, which in some cases is a reflection that requirements in some existing standards may apply or in other cases just provides guidance for actual standards that may need to be written. The primary purpose of this section is to suggest functionality that may need to be considered for implementation in either an inverter located in either the PEV or EVSE. It also defines use cases to serve as a guide for communication requirements that would be documented in J2847/3 for communication between an EMS and a PEV on-board inverter. These same use cases could also serve as a guide for communication requirements between an external inverter in the EVSE and an EMS. J2847/3 could be used for the EVSE to EMS communication, but the SAE documents are primarily focused at communication with the PEV. For the external inverter communication between the EVSE and the PEV battery management system will be documented in an update of J2847/2. This section reviews some of the considerations needed for reverse DC power flow to an external inverter.

Section 4.1 describes the relationship of this document to J2836/1TM. One top level use case (PEV4) and three detailed use cases (PR2, U6, and U7) are introduced.

Section 4.2 discusses the basic types of pure reverse power flow (V2G, V2H, V2L, and V2V). PEV on-board and EVSE external power conversion are reviewed. This section provides guidance for the detailed use case PR2, Customer Discharges the PEV.

Section 4.3 discusses general issues related to communications for reverse power flow. Data entry and manual control of reverse power flow are reviewed. The architecture for communication between an EMS and the inverter in the PEV and the EVSE are described. Considerations for communication between an external EVSE inverter and the PEV battery management system are also reviewed.

Section 4.4 reviews work being done by EPRI and IEC regarding the use of advanced inverter functions in DER devices.

Section 4.5 discusses V2G applications behind the meter, for the distribution feeder, and for the entire electric power system. The concept of operational bandwidth is described and its relationship to the different V2G applications. The relationship of the SAE use cases to the different V2G applications is shown.

Section 4.6 provides considerations for use case U6 (Basic DER) which is concerned with the control of active (charging or bidirectional) power by an EMS during a V2G application.

Section 4.7 discusses power factor and reactive power. It provides considerations for use case U7 (Advanced DER). U7 provides functions for direct control of power factor or reactive power. It also provides autonomous functions.

Section 4.8 discusses considerations for the top level use case PEV4 (PEV as a DER). PEV4 considers the broad process flow from enrollment as a DER device in a V2G application, active participation in a V2G application, to payment for the services rendered, and to contract termination. It deals with considerations for conflict resolution where multiple allocations are running concurrently.

4.1 Relationship of SAE J2836/3TM to SAE J2836/1TM

This document builds on the use cases and general requirements described in SAE J2836/1TM and must be read in that context. This is not a standalone document and should be considered to be a supplement to J2836/1TM for the purpose of reverse power flow and for the PEV serving as a distributed energy resource (DER) for the grid. Because of the timing of updates to the various documents in the SAE J2836TM and SAE J2847 series, there may be some temporary inconsistency between the documents. In the event of any inconsistency, the most recently released document should be used for guidance. For example, J2836/1TM provides a detailed use case E (General Registration and Enrollment Process) for enrolling a PEV in any utility program. This use case should apply to reverse flow applications as well as to charging, for which it was originally written, but it may need to be updated in a future release of SAE J2836/1TM to accommodate any new information needed for reverse power flow. It is more appropriate to update this use case than to create a new standalone detailed use case in SAE J2836/3TM for basic enrollment.

SAE J2836/1TM identifies four top level use cases in the main document and then provides a detailed description of each in its Appendix A. "Customer Attributes" (PEV0) applies to reverse power flow and it even identifies a "Specific Function" for "Discharge" (PR2). The remaining three top level use cases, "Utility Provides Services to PEV Customer" (PEV1), "Customer Connects PEV to Premises Energy Portal" (PEV2), and "Customer Enrolls in a PEV Demand Side Management Program" (PEV3), do not specifically mention the use of the PEV as a DER device. There are many elements of PEV0 through PEV2 that should apply to a PEV serving as a DER device and these top level use cases may need to be extended to include DER functionality. PEV3 is more specialized for demand management programs. A new top level use case "PEV as a Distributed Energy Resource" (PEV4) is discussed in section 4.8 and defined in Appendix A of this document.

SAE J2836/1TM also identifies seventeen detailed use cases. Figure 2, which is derived from SAE J2836/1TM, shows these detailed use cases. A comprehensive description for most of these use cases is provided in Appendix B of that document. Use cases were not provided in Appendix B for Discharge (PR2), Diagnostics (PR3), or Vehicle Manufacturer Specific (PR4). They are described in the PEV0 use case, but they are not listed in the main body of the document. Use Case "Customer Discharges the PEV" (PR2) is discussed in section 4.2.11 and defined in Appendix B of this document.

The basic enrollment use case (E), the three PEV connection and energy transfer use cases (S1 – S3), and the four location use cases (L1 – L4) all apply to reverse power flow and DER applications. Some modifications to each of these might be required to specifically accommodate reverse flow but they are all relevant. There are no EVSE connections or locations that are unique to reverse power flow to the utility grid.

SAE J2836/1TM defines five specific utility programs. At present these are all associated only with charging. "Time of Use Program" (U1), "Real Time Pricing Program" (U3), and "Critical Peak Pricing Program" (U4) are all informational utility programs that allow the PEV to make informed decisions about when to charge to minimize the cost of charging. There is no active control of start or stop of PEV charging by the utility. The PEV owner benefits from reduced cost of charging. The utility benefits by incentivizing the PEV owner to shift charging to off-peak periods. These use cases have no direct role to play for execution of DER functionality but it is possible that price signaling could be used with DER functionality to gate participation of the PEV.

The "Discrete Event Program" (U2) allows the utility to stop charging during a demand response event. This is a rare event with significant advanced notice. The top level use case PEV3 uses the Discrete Event Program. U2 has no role to play for DER applications although U2 and PEV3 describe ancillary service type programs and provide some guidance for how DER functionality can be used for other ancillary services.

The "Optimized Energy Transfer Program" (U5) allows direct management of the start and stop and the power level used during a PEV charging session. It authorizes a power level for charging but does not require the PEV to actually charge at that authorized value. In most cases the PEV would charge at the highest authorized power (within the control pilot and charger constraints) but the use case doesn't require it.

Use Case "Basic Distributed Energy Resource" (U6) is discussed in section 4.6 and defined in Appendix C of this document. It provides for the capability to control both forward (charging) and reverse (discharging) active power flow to a commanded value. The actual communication messages required to implement U6 may allow U5 to be an optional subset of this use case.

Use Case “Advanced Distributed Energy Resource” (U7) is discussed in section 4.7 and defined in Appendix D of this document. This extends U6 to provide the capability for a PEV to also adjust reactive power. This use case will allow for the EMS to command active and reactive power and it will also allow for autonomous operation using DER curves. The utility will communicate with the PEV to engage the automatic mode and to select the specific schedules and parameters to be used during the automatic mode.

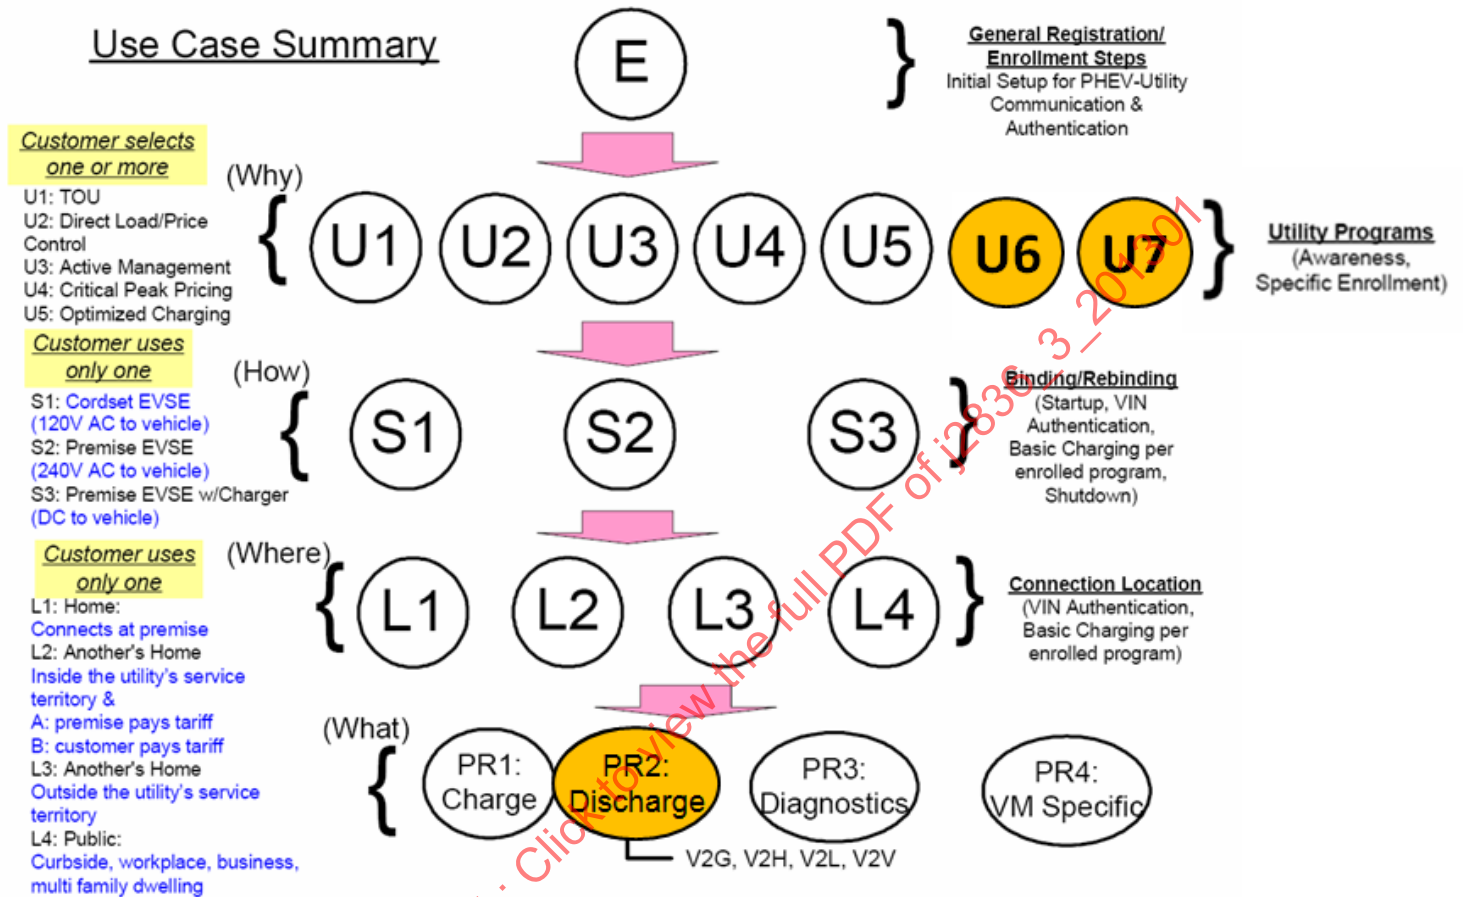


FIGURE 2 - SUMMARY OF DETAILED USE CASES

4.2 Types of Reverse Power Flow

AC power is generated from a DC source, such as a traction battery, using a device called an inverter. For operation as an off-grid, standalone power source, the inverter regulates the frequency and voltage and the connected loads determine the current flow from the inverter. A grid-connected inverter must act as a current source and synchronize to the frequency of the grid voltage waveform. The grid voltage and frequency are far too stiff for a single inverter to shift them. Bidirectional Converter is the term used for a device that can convert from AC to DC in one direction to serve as a battery charger and also be capable of being reversed and convert from DC to AC in the other direction to serve as an inverter. A grid-tied power converter can be designed to either lead or lag its sourced current relative to the grid voltage during either charging or inverter operation. This is called a Four Quadrant Converter. For simplicity the bidirectional and four quadrant converters are often just referred to as an “inverter” when discussing reverse power flow. That convention will be followed here.

The purpose of a plug-in electric vehicle (PEV) and the energy stored in its battery is transportation. All other uses of the vehicle and the energy stored in its battery are secondary to that primary purpose. Consuming the energy, or even delaying the start or extending the time for charging the battery, increases the risk to the customer that the vehicle will not be able to perform its intended purpose if an unexpected need for travel arises. In all of the discussion of the benefits of reverse power flow and the use of a PEV as a distributed energy resource, it is important to always remember that the primary purpose of the energy stored in the vehicle battery is transportation.

Pure reverse power flow is very useful for powering tools or other devices at a remote site where grid power is not available; this capability is called Vehicle to Load (V2L). A Plug-in Electric Vehicle (PEV) can also use pure reverse power flow to provide a “jump start” to another PEV; this capability is called Vehicle to Vehicle (V2V). Vehicle to Home (V2H) describes the capability of a PEV to act as a backup “generator” for selected critical loads in a home following the failure of the power grid. The PEV is connected to the home’s electrical service through a transfer switch that isolates the critical loads to be powered by the PEV from the grid. Because these are all off-grid applications, the on-board or external inverter must regulate both the voltage and the frequency and it is the connected loads that determine how much energy flows from the vehicle battery. This is all about pure reverse power flow and it can be engaged manually using controls and displays provided by the vehicle manufacturer.

Vehicle-to-Grid (V2G) is the only mode that allows a PEV to return power to a home, business, or charge station which is connected to a live grid. When an inverter is connected to the bulk grid it must be synchronized with the grid frequency and it must act as a current source. If there is a power failure the inverter must automatically turn off. This is for the safety of workers that may be repairing downed lines. A small, modular storage device connected to the grid can be considered to be a Distributed Energy Resource (DER). The real value of a PEV to the grid is its ability to serve as a DER device and provide precisely controlled bidirectional power flow – not just reverse flow. The term V2G is often associated with the concept of an aggregator precisely coordinating the bidirectional power flow of many PEVs as DER devices to provide frequency regulation for the bulk grid. But this is only one of many possible V2G applications.

The most basic V2G operation is for a homeowner to simply manually start a vehicle’s on-board inverter and set a steady power output. The homeowner might want to use the PEV to offset a home air conditioner load during an afternoon peak and then recharge the PEV battery at an off peak time. The net power flow into the home may still be positive – although it is possible that a utility could allow and compensate a homeowner for reverse flow from the home under a net metering program. While it may be possible to manually control reverse flow for this purpose, it is much more effective to use a home energy management system (EMS). Communication between the EMS and the PEV is required to allow the EMS to control the PEV reverse flow to manage the total demand at the meter. When the PEV is providing reverse power flow based on instructions from a home EMS it is serving as a DER device. It is not appropriate to refer to this as capability as V2H, as is sometimes done, because V2H (as defined by this document) requires the PEV to be isolated from the grid. V2H is for emergency backup or for homes that are not connected to the grid.

Article 625.26, Interactive Systems, of the National Electrical Code (NEC) provides that “electric vehicle supply equipment and other parts of a system, either on-board or off-board the vehicle, that are identified for and intended to be interconnected to a vehicle and also serve as an optional standby system or an electric power production source or provide for bi-directional power feed shall be listed as suitable for that purpose. When used as an optional standby system, the requirements of Article 702 shall apply, and when used as an electric power production source, the requirements of Article 705 shall apply.” Article 702, Optional Standby Systems, applies to V2H and Article 705, Interconnected Electric Power Production Sources, applies to V2G. The on-board or off-board inverter is considered to be a “utility-interactive inverter” for which there are special requirements in the NEC Article 705. The inverter characteristics for each type of reverse power flow are summarized in Table 1. There are three basic types of reverse power flow: V2G, V2H, and V2L (where V2V is a special case of V2L).

TABLE 1 - INVERTER CHARACTERISTICS

Type of Reverse Power Flow	Inverter Characteristics			
	Grid State	Output	Frequency	NEC®
V2G	Grid-Tied	Current	Synch	705
V2H	Off-Grid	Voltage	Regulate	702
V2L(V)	Off-Grid	Voltage	Regulate	N/A

The utility-interactive (grid-tied) inverter must conform to *UL 1741*. For utility-interactive equipment, *UL 1741* is intended to supplement and be used in conjunction with *IEEE 1547™* and *IEEE 1547.1™*. *IEEE 1547.4™* was released in July 2011 and this could apply to certain V2G applications. *IEEE 1547.8™* is currently being developed and will introduce new advanced capabilities for utility-interactive inverters that could also impact V2G operations.

When an on-board inverter is used for V2G, the AC power flows directly through the SAE J1772™ coupler to the EVSE and to the live grid. A utility-interactive inverter in the EVSE can draw DC reverse power through the SAE J1772™ coupler or it could possibly use SAE J2954 wireless transfer equipment. For off-grid applications using a vehicle on-board inverter, AC power could be routed to a vehicle-mounted, exportable power panel (EPP) which would provide standard NEMA receptacles similar to those found on a portable generator.

The SAE J1772™ coupler could not normally be used for off-grid applications because the EVSE control pilot circuit would not have power and the vehicle could not engage in power transfer. This is true for both an on-board inverter and DC reverse flow to an external inverter. However, if the EVSE is modified to use an internal “cold start” battery to operate its control pilot and other electronics when grid power is not available, V2H can be achieved. Because an external EVSE inverter is part of the premises infrastructure and may even control the transfer switch, this use of a modified EVSE to engage in DC reverse flow is low risk. The external inverter could automatically change from current mode V2G to voltage mode V2H after the island is created. It is recommended that an on-board inverter always operate as a utility-interactive (V2G) inverter when using the SAE J1772™ coupler, and therefore the inverter could not engage in V2H mode even with a modified EVSE.

The types of reverse power flow available for each combination of inverter configuration and transfer portal are summarized in Table 2 and each will be discussed in more detail in the following subsections.

TABLE 2 - REVERSE POWER FLOW OUTPUT

Inverter	Reverse Power Flow Output		
	J1772™ Conductive Transfer to EVSE	J2954 Wireless Transfer to EVSE	Exportable Power Panel
On-Board	V2G		V2H, V2L(V)
External	V2G	V2G	
Modified External*	V2H, V2L(V)		

* EVSE uses battery power to start reverse power flow.

4.2.1 Vehicle to Load (V2L) with Exportable Power Panel

Vehicle to Load (V2L) describes the basic capability of a PEV to use an on-board inverter to power external loads that are plugged into the receptacles on a vehicle-mounted, exportable power panel (EPP). V2L is the basic off-grid capability and V2H and V2V are special V2L applications. The EPP provides standard NEMA receptacles, such as NEMA 5-15R for 120 VAC 15 Amp service, NEMA 5-20R for 120VAC 20 Amp service, and NEMA 14L-30 for 240 VAC 30 Amp service. Panels such as this are found on portable generators. The appropriate protective devices for the receptacles must also be provided in the PEV. The on-board inverter regulates both the voltage and frequency for the off-grid applications.

Safety interlocks should be provided to prevent the inverter from applying AC voltage to the SAE J1772™ receptacle pins when it is regulating voltage and frequency for the NEMA receptacles. For example, switches could be provided in the PEV to route power to the exportable power panel and isolate the mains (L1 and L2) of the SAE J1772™ receptacle. Figure 3 shows a configuration for interconnecting with the exportable power panel. An EVSE would not normally be connected to the PEV during V2L operation, but it is possible that the PEV could be connected to an EVSE and the switches (S1 and S2) prevent injecting voltage into the grid.

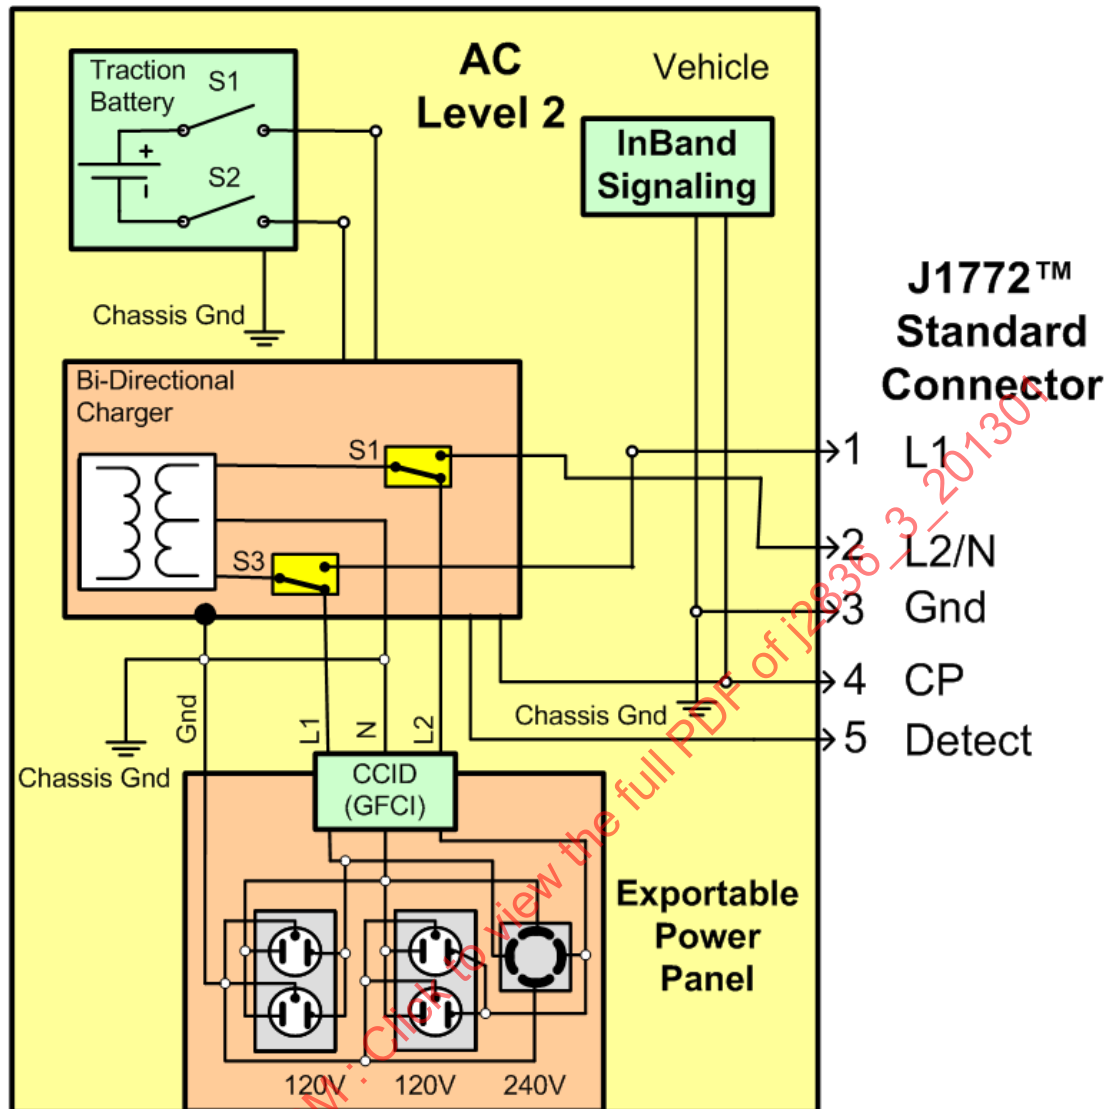


FIGURE 3 - EXPORTABLE POWER PANEL FOR V2L

4.2.2 Vehicle to Vehicle (V2V) with Exportable Power Panel

Vehicle to Vehicle (V2V) power flow is similar to a vehicle getting a “jump start”. A battery electric vehicle (BEV) will not move without usable energy in its battery. There may be occasions where a BEV needs some additional energy at a location where a power outlet is not available for even AC Level 1 charging. This is never required for a plug-in hybrid electric vehicle (PHEV) because it can always travel using its gasoline engine. In an emergency it may be desired for a PHEV or BEV to transfer some energy to a stranded BEV. The simplest way to do this is to plug the BEV AC Level 1 cordset into a NEMA 120V outlet on the source PEV’s EPP. This V2V is really V2L with a PEV as the external load. A portable AC Level 2 EVSE could be plugged into a NEMA 240 VAC receptacle on the EPP.

Service vehicles will be needed to provide power to stranded BEVs. It is possible that these vehicles could be plug-in electric vehicles, although they can easily be conventional vehicles. These vehicles are really mobile commercial charge stations. This is not really a V2V application. The service vehicle can directly generate the AC power using an engine mounted or dedicated generator. It could also carry an energy storage system and a DC fast charger. There are many ways to do this. It’s not relevant where the mobile charger gets the energy. It is just a mobile charge station and connects to the stranded vehicle using the standard SAE J1772™ interface for charging. The service vehicle could incorporate both an AC Level 2 EVSE and a DC charger. A DC charger would be the most useful for a road call, but some vehicles may not be capable of DC charging.

4.2.3 Vehicle to Home (V2H) with Exportable Power Panel

Vehicle to Home (V2H) describes the capability of a PEV to serve as a backup “generator” for selected critical loads in a home following the failure of the power grid. An on-board inverter regulates the frequency and the voltage. Power is routed from the inverter to a vehicle-mounted, exportable power panel (EPP) which provides standard NEMA receptacles similar to those found on a portable generator. A cable connects the PEV to the home backup power port.

An example of a V2H installation is shown in Figure 4. This figure also shows the PEV connected through an EVSE for V2G which will be discussed in the next section. The PEV would not normally be hooked up to the EVSE and to the backup power port at the same time. This is not a safety concern because inverter must be disconnected from the SAE J1772™ coupler whenever the inverter is engaged in V2H operation using the EPP. The EVSE and the home's backup power port could be located such that it is not even possible to connect both at the same time.

This is the same type of installation used with any backup generator. Article 702 of the National Electrical Code (NEC), Optional Standby Systems, applies to integration of the PEV with the home. After a power failure the homeowner positions the PEV near the home's backup power port and connects it to a vehicle 240 VAC NEMA outlet with a special cable. The transfer switch isolates the critical load panel from the grid and connects it to the backup power port. If the critical loads were not disconnected from the grid during V2H operation, it could cause safety issues for repair personnel. The PEV inverter is then started and begins producing power for the home during the emergency.

The on-board inverter should never be allowed to operate as a “utility interactive inverter” when using the NEMA outlets. It should only operate as a standby system and regulate voltage and frequency. Also voltage should not be applied to the pins of the SAE J1772 coupler when it is being applied to the EPP. An automatic transfer switch should not be used because this could allow grid power to be applied back through the vehicle outlet when power is restored. NEC Article 702.4 requires the PEV inverter to have adequate capacity and rating to supply all of the equipment intended to be operated at one time.

If a home has a renewable energy power system that is designed to switch over to become the voltage and frequency source for an islanded home following a grid failure, this could cause problems if the PEV is connected in parallel using V2H mode. In this case both inverters would be independently setting the voltage and frequency for the home. This could create stability and load balancing problems. The PEV could be connected through the EVSE in V2G mode if it was downstream of the transfer switch, but it is likely that the inverter would trip out in a weak microgrid. An external system may be able to perform load balancing by adjusting the voltage and frequency setpoints of the sources.

NOTE: For this version of the document, it will be assumed that the PEV will be the sole power source for any off-grid operation.

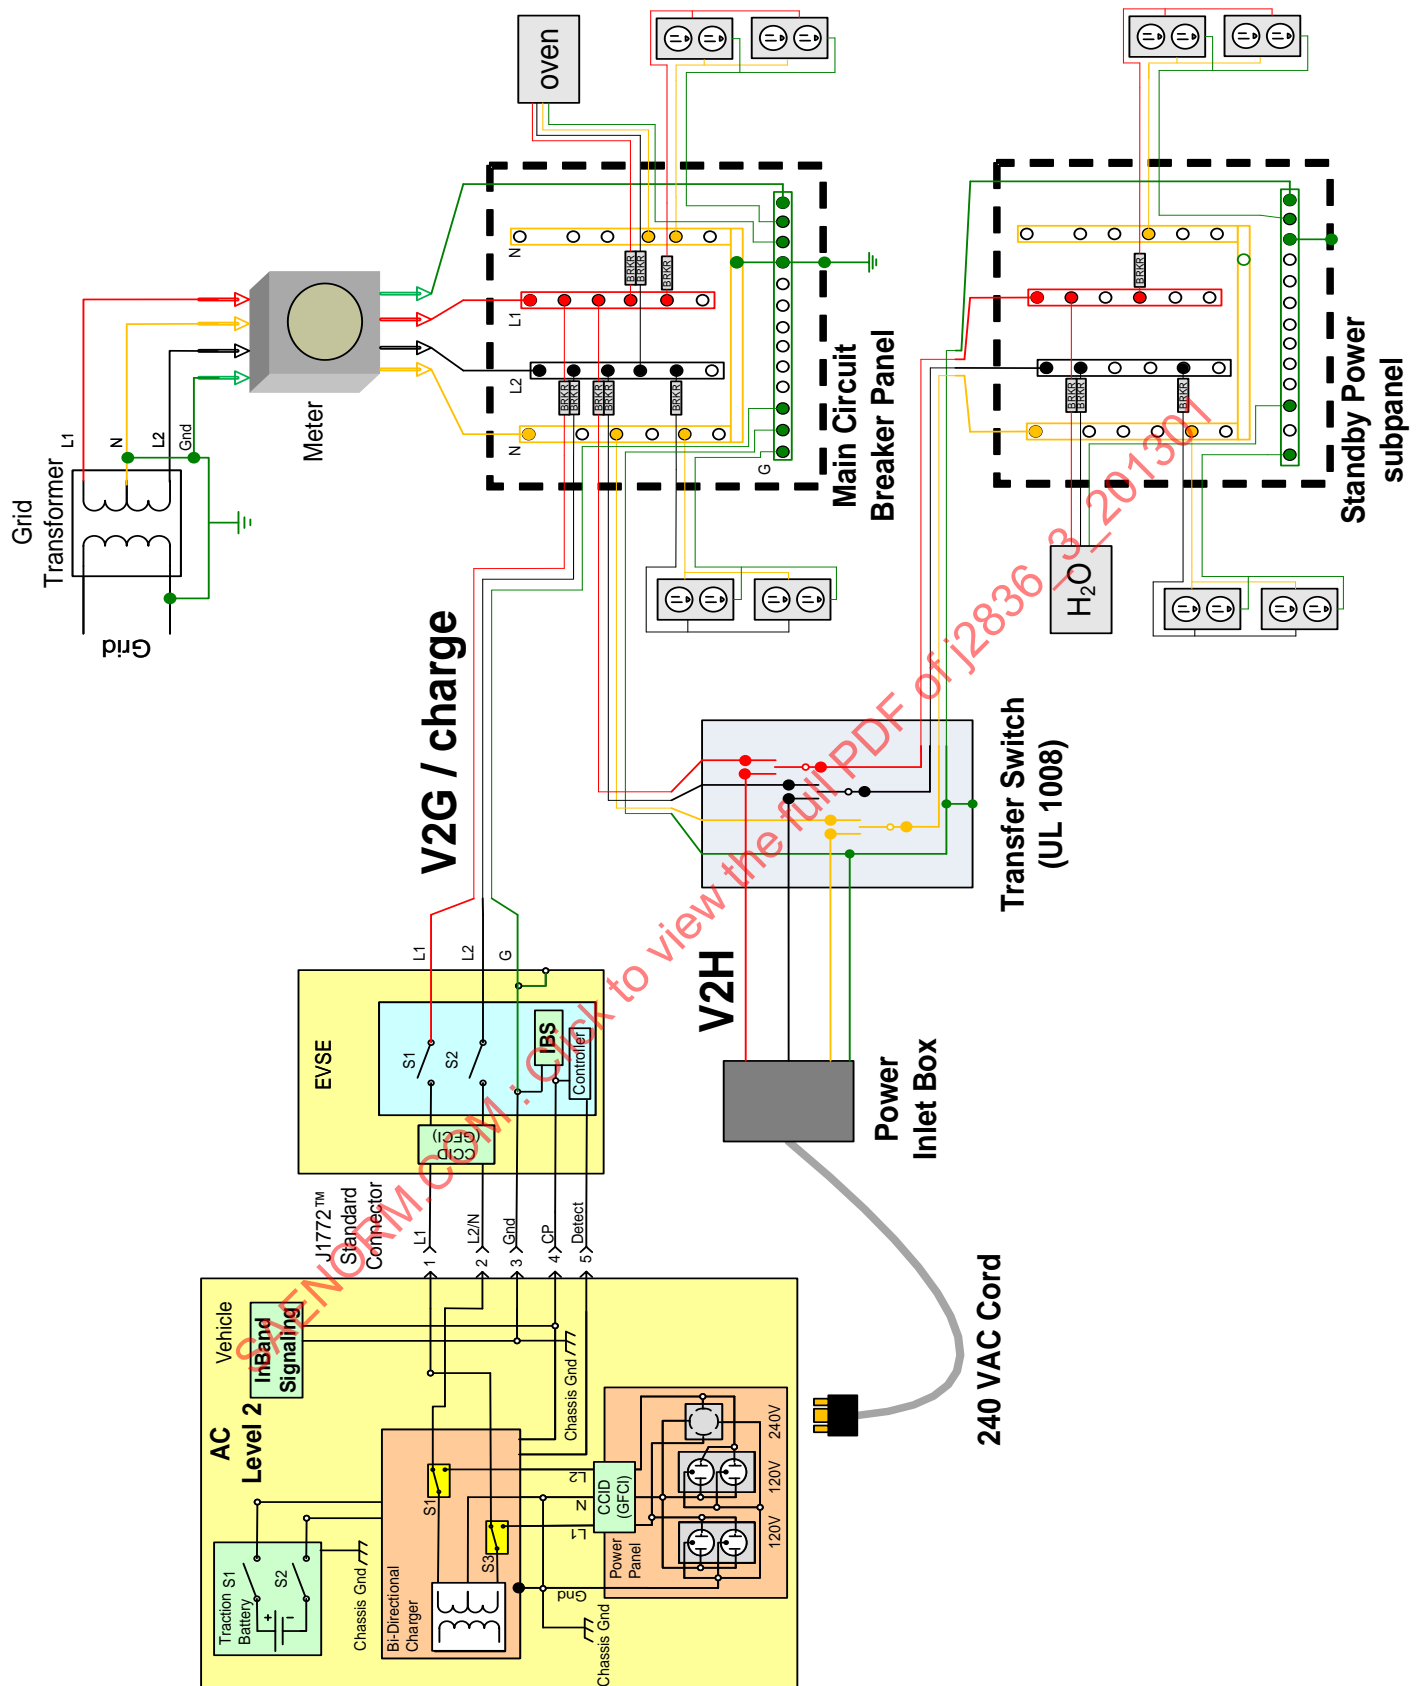


FIGURE 4 - V2H AND V2G WITH ON-BOARD INVERTER

4.2.4 Vehicle to Grid (V2G) using On-Board Inverter

An example of the integration of a PEV with an on-board inverter and an AC Level 2 EVSE for V2G is shown in Figure 4. The L1 and L2 lines from the EVSE are connected to circuit breakers in the main circuit panel of the premises across 240 VAC. If the home does not support backup power there will not be a transfer switch leading to a separate panel for critical loads. The transformer serving the home will perform the balancing of the 120V loads at the premises. No current will pass on the ground circuit from the panel to the EVSE to the PEV. The neutral and earth ground are connected at a single point in the main panel.

This figure also shows the use of a PEV as an optional standby source for V2H which is discussed in another section. The PEV would not normally be hooked up to the EVSE and to the backup power port at the same time. This is not a safety concern because the outlets on the EPP must be disconnected from the inverter whenever the inverter is engaged in V2G operation. The EVSE and the backup power port could be located such that it is not even possible.

No changes should be required to any AC Level 2 EVSE to allow for reverse AC power flow from an on-board, utility-interactive inverter into a live grid. The SAE J1772™ control pilot engagement logic will work equally to connect the PEV for either charging or reverse flow. The current limit set by the control pilot will be identical for both forward and reverse flow. The inverter must not source more current than allowed by the control pilot. The normal default should always be for the PEV to engage in charging. The operator must always enable the reverse power flow. This would normally be accomplished using vehicle controls and displays.

The on-board inverter could be a bidirectional or four quadrant converter. A utility-interactive inverter operates as a current source and synchronizes its output to the grid frequency. In North America, where the grid frequency is 60 Hertz, the inverter must cease operation in less than 160 milliseconds if the grid frequency drops below 59.3 Hertz or rises above 60.5 Hertz. The inverter must cease operation within two seconds if grid voltage drops to less than 88% of nominal and within one second if grid voltage increases above 100% of nominal. For 240 VAC service these limits are 211.2V and 264 V. The inverter must cease operation in less than 160 milliseconds if the voltage drops below 50% or rises above 120% of nominal. Once the inverter trips it is not allowed to reengage for five minutes after the grid frequency and voltage return within limits. The normal allowable voltage variation along a distribution feeder is to maintain voltage within 95% and 105% of nominal (ANSI C84.1 Range A Limits).

Reverse flow must not be allowed when using an AC Level 1 cordset connected to a standard outlet in the premises. A utility-interactive inverter designed to operate into a grid voltage of 240 VAC will automatically prevent reverse flow into a 120 VAC nominal voltage.

For manually controlled, pure reverse power flow, no communication between PEV and EVSE or beyond is required. Steady reverse flow can be completely managed by the vehicle operator using only those PEV controls and displays provided by the vehicle manufacturer. The vehicle operator can set the output power up to the limit established by the control pilot.

The more advanced V2G applications will require the PEV to operate as a DER device. These will require communication with an energy management system (EMS) in the home, at a utility, or with a third party aggregator. The EMS needs to be able to communicate with the PEV inverter to coordinate forward and reverse power flow. The PEV could communicate with an EMS by routing messages through the EVSE to the home area network using Power Line Carrier (PLC) communication on the SAE J1772™ control pilot. The PEV may also be able to directly communicate with the home area network using a wireless link. The PEV communications are further described in SAE J2931/1.

4.2.5 Vehicle to Grid (V2G) using DC Reverse Power Flow

The PEV battery can be used as a source of energy for an external inverter in the EVSE. The external inverter draws DC current from the PEV. Bidirectional power conversion electronics could allow the EVSE to operate as a DC charger and also be capable of acting as a utility-interactive inverter. A four quadrant power converter could also be provided.

The same SAE J1772™ engagement logic will be used for DC charging and discharging. Just as for DC charging, communication is required between the EVSE and the PEV. PowerLine Carrier on the control pilot will be used for digital communication, on the 5% PWM value. Requirements are defined in SAE J2931/1 and SAE J2931/4. The communication messages for controlling reverse power flow will be defined by J2847/2. SAE J2847/2 will require some additional messages or expanded definitions (to allow negative currents, for example) to allow DC reverse flow. If the vehicle's Battery Management System and communication capability are not capable of supporting reverse power flow, reverse flow will not be possible even though the external electronics are capable of generating AC power.

Any EVSE with an inverter will by design support DC reverse power flow. It will include all of the SAE J2847/2 communication capability needed to draw DC reverse power from a PEV that supports DC reverse power flow. It is possible that some PEVs may not support reverse flow from the vehicle battery to the EVSE. The communications may not support it or the vehicle itself may not support it. In this case the PEV and EVSE will only be able to perform DC charging.

For DC charging the SAE J1772™ standard connector can be used and this is called DC Level 1 charging. The connector pins are limited to 80A DC. Figure 5 shows the standard SAE J1772™ connector with external conversion using the DC Level 1 interconnection to the EVSE. With a 500 VDC battery and 80A of DC current, this would transfer power at 40kW. The actual power transfer would be limited by the premises branch circuit rating. A DC Level 1 charger on a 240 VAC 40 amp branch circuit will have an effective power limit of 7.7 kW. The same will be true for reverse flow. An external inverter on a 40 amp circuit will need to limit current to 32 amps (80%) and deliver no more than 7.7 kW to the premises. The EVSE power electronics could potentially be limited to a lower value. And the PEV battery may also constrain the maximum DC current. The maximum transfer will be based on the lower of the ratings established for the battery, the electronics, the branch circuit, the connector rating, and other constraints.

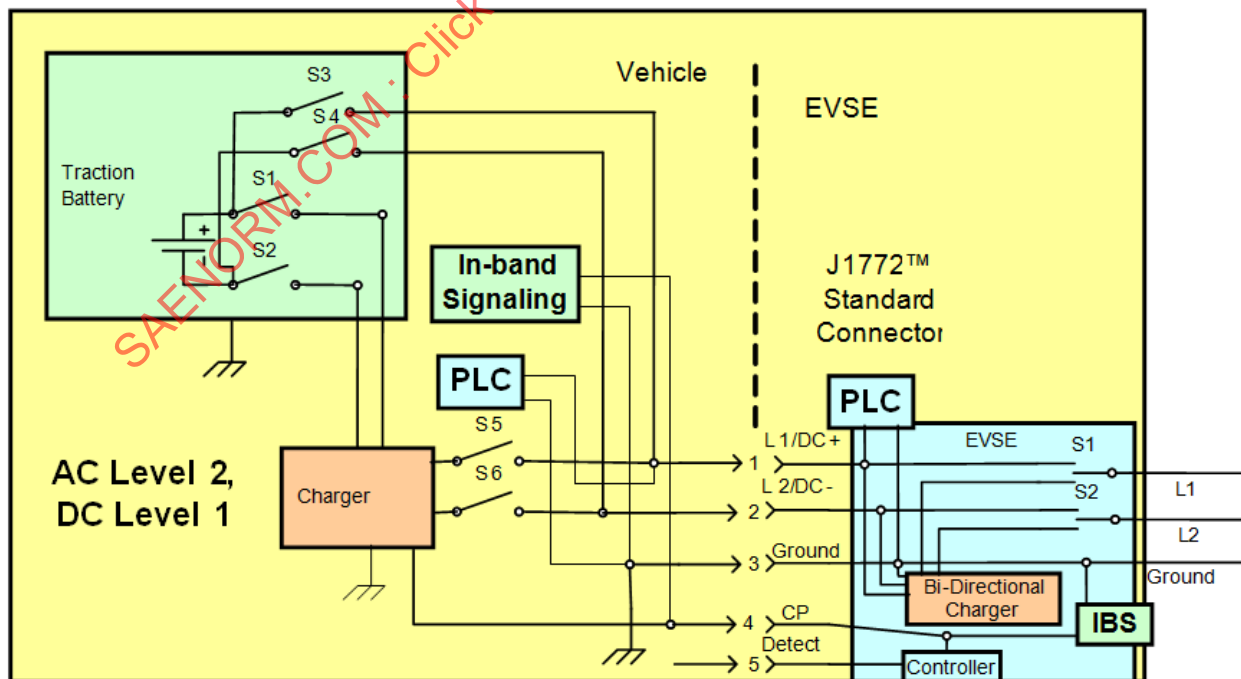


FIGURE 5 - SYSTEM ARCHITECTURE FOR DC LEVEL 1 V2G

Figure 6 shows the combo SAE J1772™ connector with external conversion. The combo connector uses the same core as the standard connector and adds terminals 6 & 7 to accommodate DC Level 2. The combo connector is limited to 200A which would transfer power at 100 kW for a 500 VDC battery. Again, the rating of the EVSE, the circuits supplying the EVSE, and the current limits set by the battery management system will govern the actual maximum transfer capability.

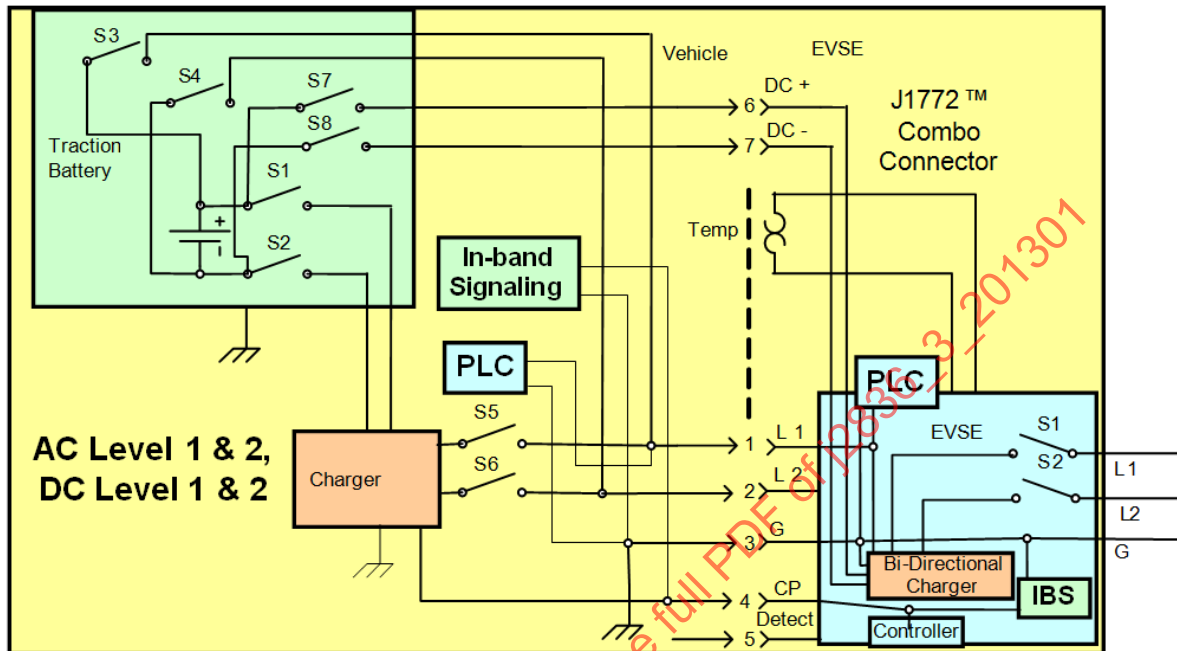


FIGURE 6 - SYSTEM ARCHITECTURE FOR DC LEVEL 2 V2G

While reverse flow and VAR capability can be provided for all DC levels, it is not as likely that DC Level 2 or DC Level 3 charge stations could be effectively used to participate in utility use cases using only the connected PEV as a source of stored energy. These are expensive specialized systems and their purpose is to quickly charge a PEV. PEVs don't generally connect to these charge stations for very long. However, it is possible that a site with several charge stations could draw on reverse flow and VAR capability to help smooth grid power fluctuations as PEVs come and go from the location. It is more likely that a lower cost DC Level 1 EVSE, that can afford to be occupied for extended periods, would be used for V2G applications.

4.2.6 Vehicle to Grid (V2G) using Wireless Reverse Power Transfer

Reverse power flow will be possible using wireless transfer between the vehicle and an external inverter. SAE J2954 will define wireless transfer. SAE J2836/6™ and SAE J2847/6 will define the communication approach for managing the actual wireless power transfer between the vehicle and the external inverter. These documents are similar to SAE J2836/2™ and SAE J2847/2 that define communication requirements for conductive DC power transfer.

4.2.7 DC Reverse Power Flow for Off-Grid Applications (V2H-X, V2L-X)

V2H using a vehicle on-board inverter was described earlier, where power flows from the vehicle to the home transfer switch using the vehicle exportable power panel and not by the SAE J1772™ connection to the EVSE. An external inverter (EVSE) could be designed to use an internal “cold start” battery to operate its control pilot and other electronics when grid power is not available. This type of inverter could regulate voltage and frequency when it is not connected to the bulk grid. This type of V2H operation will be called V2H-X because it uses external conversion with a special cold start external inverter. The inverter could act as a current source when it is operating in V2G mode into a live grid or microgrid. Some grid-tied inverters used with home solar (PV) systems have this mode switching capability today and can even automatically operate the premises transfer switch to isolate the home from the grid. This is shown in Figure 7.

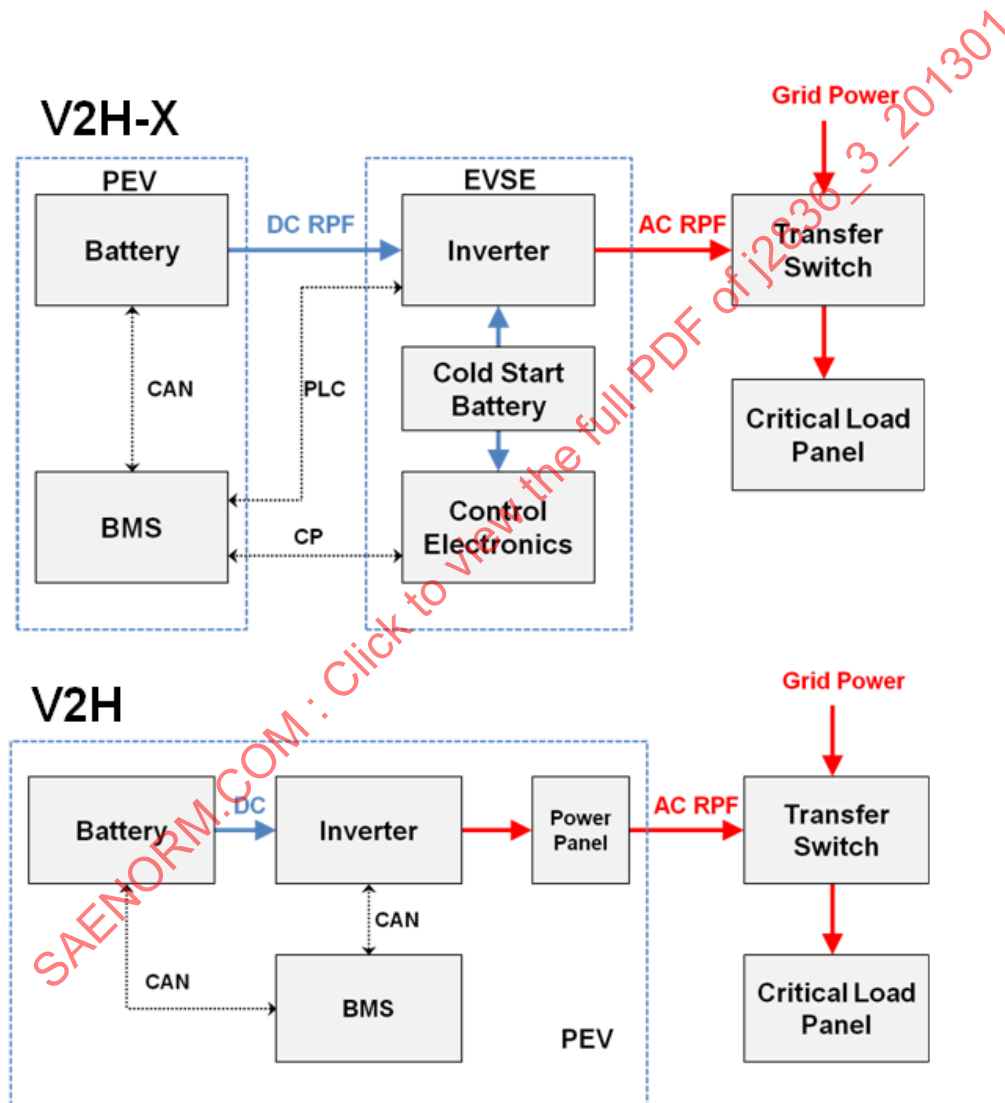


FIGURE 7 - V2H AND V2H-X REVERSE POWER FLOW

V2G and V2G-X behave the same way beyond the EVSE. In this document the V2G term will be used for both in other sections of this document. The external inverter does not need a battery backup for the control pilot if it is only going to be used with a live grid or in an islanded microgrid with another device serving as the frequency and voltage regulator. Because the grid safety is associated with the inverter, there may be some differences in the communication approach with the vehicle and the EVSE and inverter behavior when using on-board V2G versus external V2G-X.

For DC reverse flow the vehicle cannot discriminate between V2G-X and V2H-X. It is all just reverse DC flow from the vehicle and the full responsibility for compliance with IEEE 1547TM rests with the external inverter.

For a vehicle equipped with an on-board inverter in a home that only has an AC Level 2 EVSE and that has the required transfer switch, the emergency backup power for the home can be provided using the V2H capability. If the home does not have the required transfer switch the V2L capability could be used to provide power to specific home appliances using extension cords.

If the home owner wants to have a DC Level 1 charging capability to allow faster charge times, it may be worth buying a DC Level 1 bidirectional or four quadrant converter with the ability to operate off-grid. There are many possible variations of the design that could include automatic transfer switches. This equipment would allow for faster charging and automatic islanding and backup power for the home. This would also allow higher power V2G operation than might be available using an on-board inverter through an AC Level 2 EVSE.

It is also possible to design a portable battery powered converter unit to provide V2L-X capability using the vehicle SAE J1772TM receptacle for DC reverse power flow. This could allow higher power transfers than could be provided using an on-board inverter. A custom V2L-X unit may be an alternative to using a large portable genset if the vehicle on-board inverter can't provide sufficient V2L power for use at remote sites. It's not likely that anyone would carry around such a large converter just for emergency V2V-X use. It is easier to call a specially equipped service vehicle or use an on-board V2V capability with an AC Level 1 cordset.

4.2.8 Roaming On-Board Inverters: V2G and V2H Considerations

A special AC Level 2 EVSE could be designed with a small rechargeable battery to power the control pilot electronics following a grid power failure. This would allow an on-board inverter to operate as a current source into a live grid, and following a grid failure and the isolation of the home through a manual or automatic transfer switch, the inverter could switch modes to become a voltage source to provide emergency backup power. It is not recommended that an on-board inverter be allowed to operate as a voltage and frequency source using a modified AC Level 2 EVSE. The PEV cannot independently verify that the transfer switch has islanded the home and the PEV must rely on integrity of an externally generated message that it is safe to engage as a voltage source.

NOTE: V2H using an on-board inverter with a modified AC L2 EVSE will not be considered in this version of the document.

An external inverter does not roam. It is fixed to the premises and the installation and any inverter certification can be reviewed by the local utility and code enforcement personnel as necessary. It doesn't matter to the utility what battery is connected to the EVSE. Vehicles can easily roam with external conversion. But things are different when the inverter roams with the PEV. A facility may not be approved to have distributed generation, even if it only offsets some of their load. If a PEV discharges under control of a third party aggregator at such a location, this could be a problem. It will be the responsibility of the owner of the PEV to make certain that any discharge is permitted by the facility to which the EVSE is connected. Even if a facility authorizes reverse flow, the local utility may require that only vehicles with approved inverters can be allowed to engage in reverse flow to a live grid.

4.2.9 Vehicle to Microgrid (V2μG)

This document looks at V2G applications at several levels in the electric power system: at the level of the bulk grid, at the level of the distribution feeder, and behind the meter. But in each domain the PEV is considered to be connected to the bulk grid. There is much discussion today about microgrids. When a microgrid is connected to the bulk grid there is no impact on the ability of a PEV to engage in reverse flow and maintain full compliance with IEEE 1547. The inverter operates as a current source synchronized with the bulk grid frequency. The inverter must trip in as short a time as 16 milliseconds if the bulk grid frequency or voltage falls outside defined limits. But if the PEV is located in a microgrid which is disconnected (or islanded) from the bulk grid, an IEEE 1547 compliant inverter may prove to be too sensitive for this application. The PEV does not have enough power to shift the bulk grid frequency, but if the PEV is one of several distributed resources in an islanded microgrid, it may have enough power to shift the microgrid frequency and force itself to trip off. This is acceptable if the PEV is not "certified" to operate in an islanded microgrid. But this may not be the desired outcome if the microgrid is depending on one or more PEVs to provide power in the islanded microgrid. IEEE 1547.4 was issued in 2011 to define requirements for microgrid operation. Much work needs to be done to understand the implications of microgrid operation on PEV on-board converter design and PEV communication within a microgrid.

NOTE: Inverter operation in an islanded microgrid, other than as a current source and in strict conformance to IEEE 1547, will not be considered in this version of the document.

4.2.10 DC Microgrids

Figure 8 shows the use of a DC microgrid for power distribution within a facility. This architecture could be used for any level of DC charging. However, for this purpose of this discussion assume that this is a "park and charge" location and that DC Level 1 charger stations will be used on a 380 VDC circuit in place of AC Level 2 charge stations on 240 VAC circuits. The DC microgrid facilitates the interconnection of solar PV systems, small wind turbines, and facility battery banks. This eliminates potential problems of integrating many grid-tied inverters into a facility AC power distribution system, because the DC microgrid uses a single utility-interactive inverter to connect all of the DC power flows with the grid. The microgrid can also support DC loads and electronically controlled motors (just as is done with the PEV traction motor).

A considerable number of off-board DC chargers are expected to be AC to DC converters. If the facility however, has a DC energy source (stationary storage or PV), consideration should be given to a DC to DC converter that is generally more efficient than an AC to DC converter, plus it only requires one conversion, instead of DC to AC to DC. All of the communications defined by SAE J2847/2 between the charger and the PEV can remain unchanged. The source of power to the charger is not of concern the PEV. There is no such thing as a four quadrant DC-DC converter. Only bidirectional DC power flow is possible and this prevents the PEV from directly engaging in providing VAR to the grid. Only the facility inverter can do this using DC power from the PEVs. The basic DER functionality could be used to control forward and reverse power flows by the facility inverter or even beyond.

A 380 VDC bus, shown in the figure, is a reasonable level for DC-DC conversion for vehicle batteries from 200 to 600 volts. This bus voltage is being promoted by the Emerge Alliance. Although a 600 VDC bus might be more appropriate for a fast charge facility to minimize current flow. These are facility decisions, but they do impact the design of the DC-DC converters.

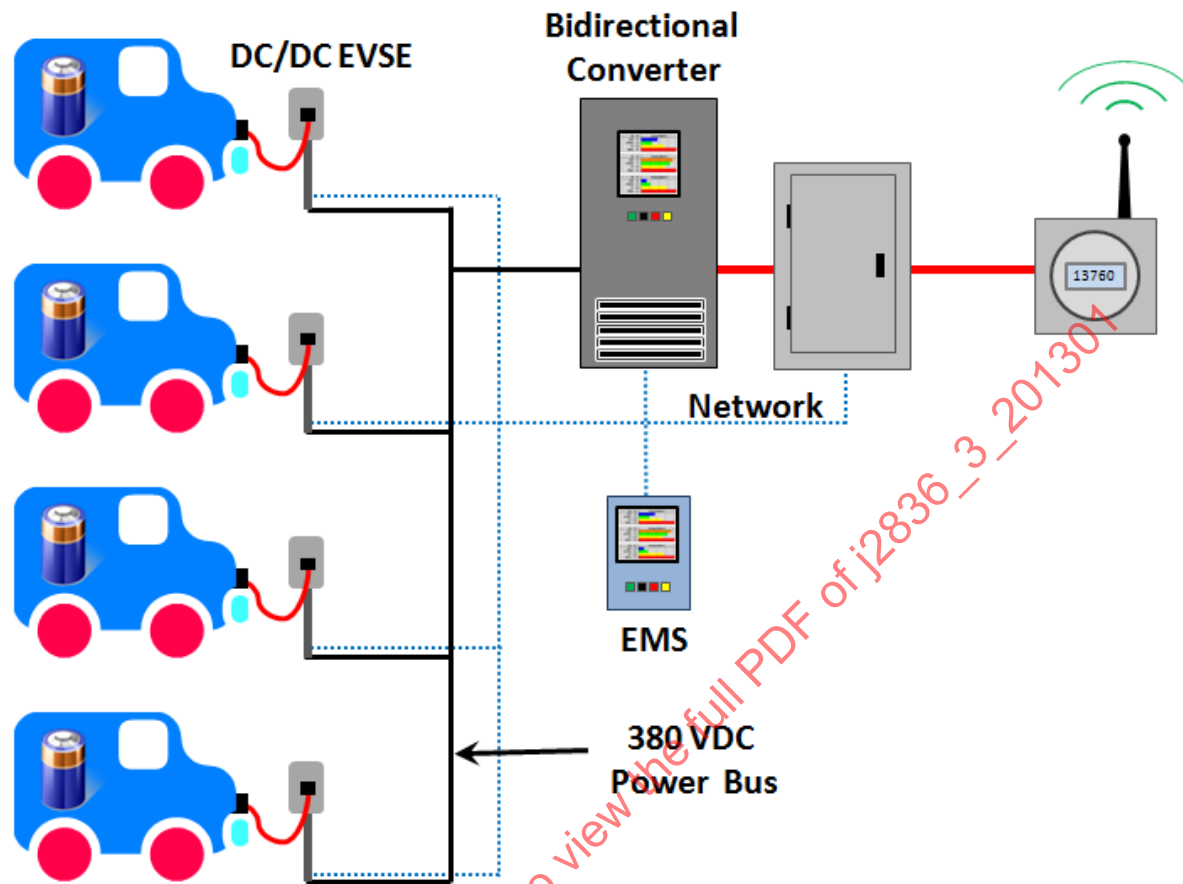


FIGURE 8 - DC MICROGRID

4.2.11 Use Case PR2 - Customer Discharges the PEV

Several scenarios for the Use Case PR2, Customer Discharges the PEV, are defined in Appendix B. The V2G scenarios provide for either manually setting the discharge power or enabling the PEV to participate in a DER program. For the other modes the inverter is manually activated as a voltage and frequency source. Communication is not required with any EMS for basic discharging. Communication is required with an EMS for the PEV to participate as a DER. Manual operation is performed using vehicle controls and displays.

The scenarios are listed in Table 3. The naming convention begins with the type of reverse power, followed by whether the power flow is controlled manually (MAN) or as a DER device, and then by whether the transfer of power from the PEV is AC, DC, or wireless (WL). Discharging under scenario PR2-V2G-DER-AC is of V2G type, controlled as a DER device, using AC transfer from the vehicle. DC transfer is always from the PEV to an external inverter in the EVSE and uses the conductive coupler. AC transfer requires an onboard inverter and can either use a NEMA outlet on the vehicle exportable power panel or the SAE J1772 coupler; the NEMA suffix is used to distinguish the two AC transfer methods.

TABLE 3 - SCENARIOS FOR USE CASE PR2

Use Case PR2 Scenario Name	Use Case PR2 Scenarios Characteristics			
	Type	Control	Inverter	Outlet
V2G-DER-AC	V2G	DER	On-Board	J1772
V2G-DER-DC	V2G	DER	External	J1772
V2G-DER-WL	V2G	DER	External	Wireless
V2G-MAN-AC	V2G	Manual	On-Board	J1772
V2G-MAN-DC	V2G	Manual	External	J1772
V2G-MAN-WL	V2G	Manual	External	Wireless
V2H-MAN-AC-NEMA	V2H	Manual	On-Board	NEMA
V2H-MAN-DC	V2H-X	Manual	External	J1772
V2L-MAN-AC-NEMA	V2L	Manual	On-Board	NEMA
V2L-MAN-DC	V2L-X	Manual	External	J1772

SAENORM.COM : Click to view the full PDF of J2836/3-201307

4.3 Communications for Reverse Power Flow

The inverter is the focus of all communication for reverse power flow. The inverter can be in the PEV with AC power routing through the EVSE to the electric power infrastructure. Alternatively the inverter can be in the EVSE and DC power flows from the PEV through the coupler to the inverter in the EVSE. In both cases the PEV and EVSE work as a pair to provide reverse power flow to the grid. The combined PEV and EVSE appear as a Distributed Energy Resource (DER) device on the communication network.

The vehicle operator must be able to interact with controls and displays on the PEV, the EVSE, or other equipment to enable and manage reverse power flow. There are two distinct ways to communicate with the inverter to manage reverse power flow. One way is for the vehicle operator to use the Human Machine Interface (HMI) on the PEV or EVSE to manually initiate and terminate pure reverse power flow and no communication with any external energy management system (EMS) or other controller is involved. The second way is for the vehicle operator to enable the PEV to participate as a distributed energy resource (DER) device and an external energy management system (EMS) will initiate, manage, and terminate reverse flow as needed. This is illustrated in Figure 9.

For both situations controls and displays must be provided for the operator to enter the required information and enable actions. The vehicle and EVSE manufacturers will provide proprietary controls and displays for this purpose. Some information and commands must be directly entered using PEV controls and displays and alternate data entry locations may not be permitted. For other information the preferred data entry location may be at the inverter, which could be on-board the PEV or in the EVSE. Alternate data entry locations, such as a premises EMS or a mobile device, may be authorized for certain information.

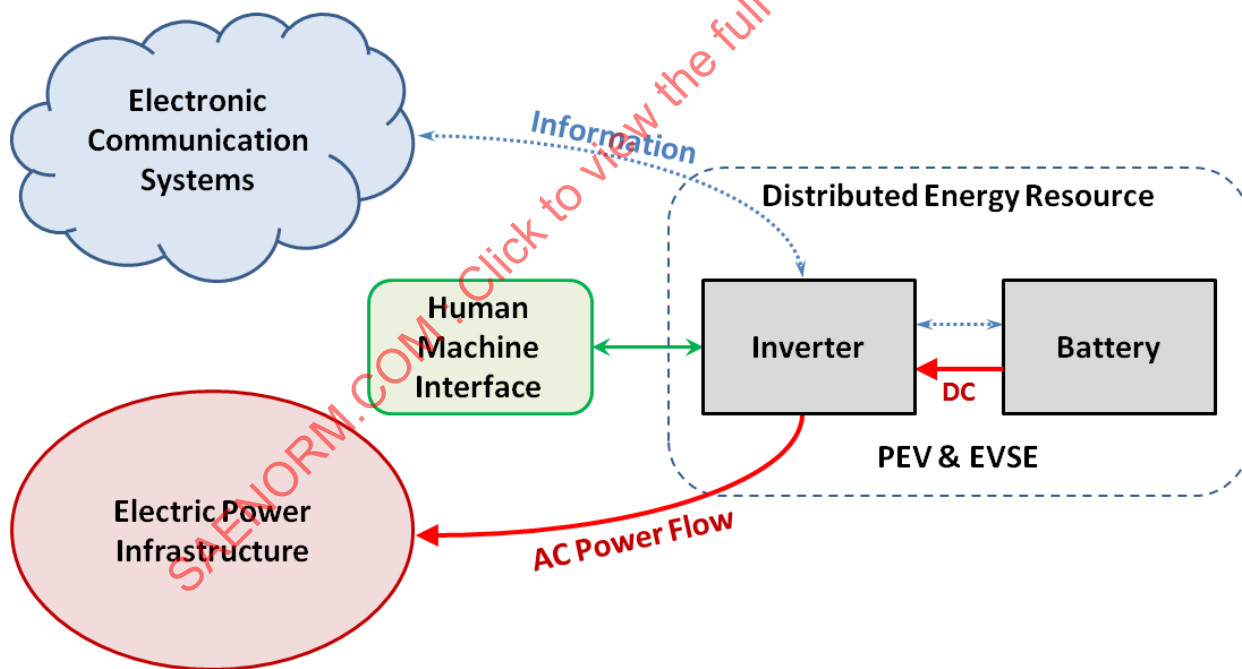


FIGURE 9 - INTERFACES WITH INVERTER OF A DER DEVICE

4.3.1 Data Entry, Customer Communications, and Sources of Information

SAE J2836/5TM and SAE J2847/5 specifically deal with customer interaction with the EVSE and PEV and other devices. This section will discuss some issues related to customer communication but these documents are the authoritative documents.

It may be possible to enter data at multiple locations. For example, the data entry for the “Time Charge is Needed” (TCIN) could be done using controls and displays of the PEV, the EVSE, or even a remote device. However, the data entry is not the actual “information” until it is accepted by the designated “source” of that information, which is not necessarily the data entry location. Think of a data entry as potential value for the information and it does not become the actual information until the designated source for that information accepts, validates, and prioritizes the information.

TCIN is a key parameter that defines the state of the PEV. The PEV must be the source for that information. Even when TCIN is entered into the PEV controls and displays it must still be validated by logic in the vehicle before it is accepted. If there is an error in data entry – for example a time earlier than the current time, the PEV HMI software should indicate an error and ask the operator to correct the information. The data entry should only be stored in the PEV as TCIN after it has been validated. Then any other entity that needed to know TCIN could request it from the PEV.

If TCIN were entered into the EVSE, the EVSE might do some validation, such as earlier time than present time, and then it would need to provide it to the PEV for the PEV to consider. The EVSE should only hold the data entry for a potential value for TCIN. After the vehicle processes the data entry and updates its TCIN, then the EVSE will be able to request TCIN from the source which is the PEV.

Data entry while it may come from multiple places should always go to the source where it is transformed into validated information. The source entity should determine the protocol for selection – such as last entered rules, or lowest power rules, or PEV rules. If the source cannot communicate – for example the PEV can’t communicate with an EVSE, but TCIN was entered into the EVSE. The EVSE might use its data entry for TCIN in lieu of the PEV TCIN value because it cannot access the “source”. But these rules would be embedded in the operational software of the EVSE.

These are not communication protocol decisions. These are decisions that are made by the embedded functional software in the application. The SEP 2.0 communication protocol must allow for the data entry for certain information to be moved from the HMI device to the “source” device for the information. SAE J2836/5TM will deal with these issues.

The use cases in this document will assume that data entry is made and validated and moved to the designated “source” device based on SAE J2847/5 messages and actual processes in the device software. It will assume, for example, that TCIN is entered on some control panel and that TCIN will be available from the PEV as the sole designated source when needed. The processes for handling the data entry, validating the entry, and moving it to the PEV is part of SAE J2836/5TM use cases and will be implemented in both embedded software and SEP 2.0 communication.

4.3.2 Manual Control of Reverse Power Flow

The most basic V2G capability is to have the vehicle operator connect the PEV to the grid through an AC Level 2 EVSE and manually engage the PEV on-board inverter using controls and displays provided by the vehicle manufacturer. No digital communications are required to the EVSE or beyond. The SAE J1772TM Control Pilot establishes the maximum forward and reverse AC current that can be supported by the premises branch circuit. The upper limit is the lower of the rating of the on-board converter and the control pilot. The AC EVSE cannot be used by itself to engage the PEV in discharging. But if the PEV is set up to discharge (rather than charge) when it detects the EVSE is ready, the EVSE can control the start and stop of discharge. The EVSE can also reduce the discharge level below that of the rating on-board inverter by using the Control Pilot. The vehicle manufacturer can provide the capability for the PEV to start charging immediately, to start after a programmed delay, or at a programmed time. The PEV could also allow discharging to be stopped immediately, after a programmed delay, at a programmed time, or when the battery state of charge reaches a specified minimum level. It is also possible to set a lower power (current) limit for the session. These manual control modes are at the discretion of the vehicle manufacturer.

It is somewhat more complex for DC discharging because digital communication is required between the PEV and the external power convertor (EVSE) to manage the actual DC reverse flow. The communication required for the PEV to coordinate with the external converter (EVSE) for both forward and reverse DC power flow is defined by SAE J2847/2. The same vehicle controls and displays used for on-board conversion should also be provided to initiate and control external conversion. While the digital link between the EVSE and the PEV could allow an intelligent EVSE to initiate reverse flow rather than charging, it is preferred that the selection of manual reverse versus forward flow be performed using a specific vehicle authorization. It may be possible for a vehicle operator to enter this authorization into the PEV using EVSE controls. This maintains the same relationship as that used with an AC Level 2 EVSE. An intelligent AC or DC EVSE can control start and stop but should not provide the authorization to enter reverse flow. The default without specific authorization for reverse flow using vehicle controls should be to start charging.

A homeowner might use this manual control capability for PEV reverse flow to offset other home loads at peak times and then recharge the PEV at off-peak times. While it is possible to just discharge into the grid by manually programming the PEV or the EVSE, it is preferred to use a home energy management system (EMS) for this type of operation. Many utilities offer net metering programs and allow, for example, a home photovoltaic system to push power into their grid. However, other utilities may only allow the residential load to be offset and do not allow reverse flow to the grid. The meter may not even be capable of reverse flow. In this type of region a home owner would have to calculate the home load and then set the power output of the PEV to be less than that. This could be dynamic. A home EMS would be able to keep track of this and adjust the PEV output to maintain a net zero for the home.

Manual control is the only way to engage the on-board inverter to supply power to the exportable power panel for V2H, V2L, and V2V. The vehicle manufacturer may even provide a capability to manually engage reverse flow through telematics. There could be different degrees of sophistication for modes of operation depending on the vehicle manufacturer. The vehicle could provide programmed start and stop times or time delays for V2H operation. For these modes the inverter operates as a voltage source and the power delivered is determined by the loads. It cannot be set to a specific power delivery as it can for V2G operation. If the load is too large for the inverter it will reach a current limit and either trip or allow the voltage to sag.

A PHEV may offer the capability to operate the engine to maintain the charge of PEV battery during reverse flow. This should always be engaged manually at the PEV to allow the operator to ensure that there is adequate ventilation and it is safe to operate the engine. While engaging the engine for emergency backup in off-grid V2H situations may be needed. It would not be environmentally friendly to use the engine for rate arbitrage in V2G operation and it may not be even be cost effective.

4.3.3 Examples of Manual Control Data Entry

The operator must be able to use controls and displays on the PEV, the EVSE, or on a remote device to start, stop, and set the power for reverse flow. These settings are shown in Figure 10. For V2G operation the power level must be defined. This can be done as an explicit value or as a percent of the maximum available reverse power. The display could show both values as the setting is entered. Data entry for power is not required for V2H or V2L because the inverter regulates voltage and frequency and power is determined by the load. It may be desired to allow for some minor adjustment of these setpoints.

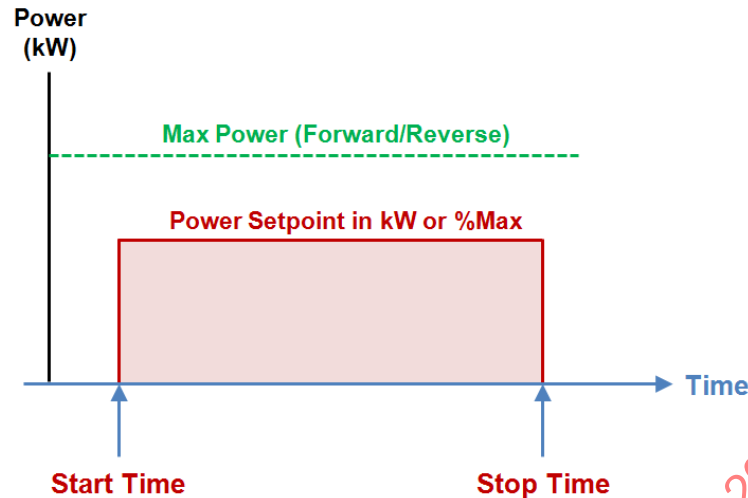


FIGURE 10 - KEY PARAMETERS FOR MANUAL CONTROL

The manual controls for starting reverse flow must include a start now capability. Controls may also provide for starting after a time delay or starting at a specified local time. The controls should not allow entry of a negative delay or a starting time earlier than the current time. These are illustrated in Figure 11.

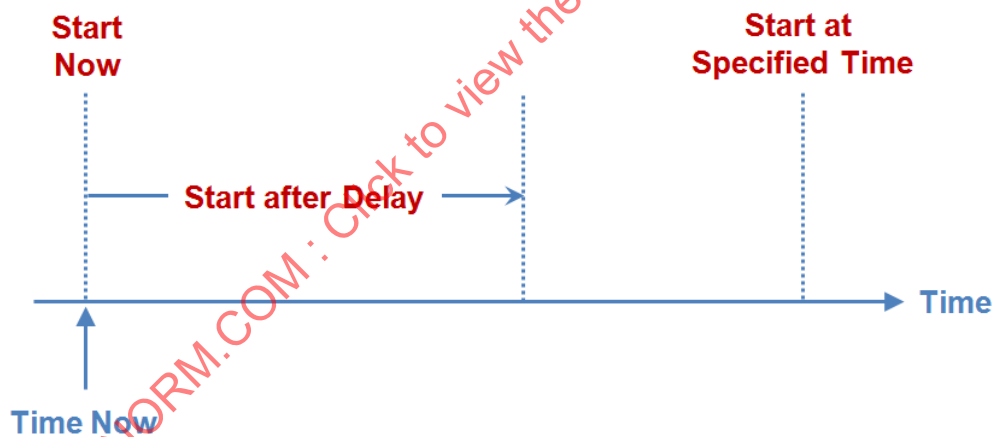


FIGURE 11 - OPTIONS FOR MANUALLY CONTROLLING START UP

The manual controls for stopping reverse flow must include a stop now capability. This immediate stop capability must be prominently displayed whenever reverse flow is being provided. Controls may also provide for stopping after a specified duration of reverse power flow or stopping at a specified local time. The controls should not allow for entry of a negative duration or an earlier specified stop time than the actual start or expected start time. These are illustrated in Figure 12. Manual controls should also be provided for defining a minimum state of charge. This is an additional condition and reverse flow would stop at the earlier of the designated stop time or the battery reaching the minimum SOC.

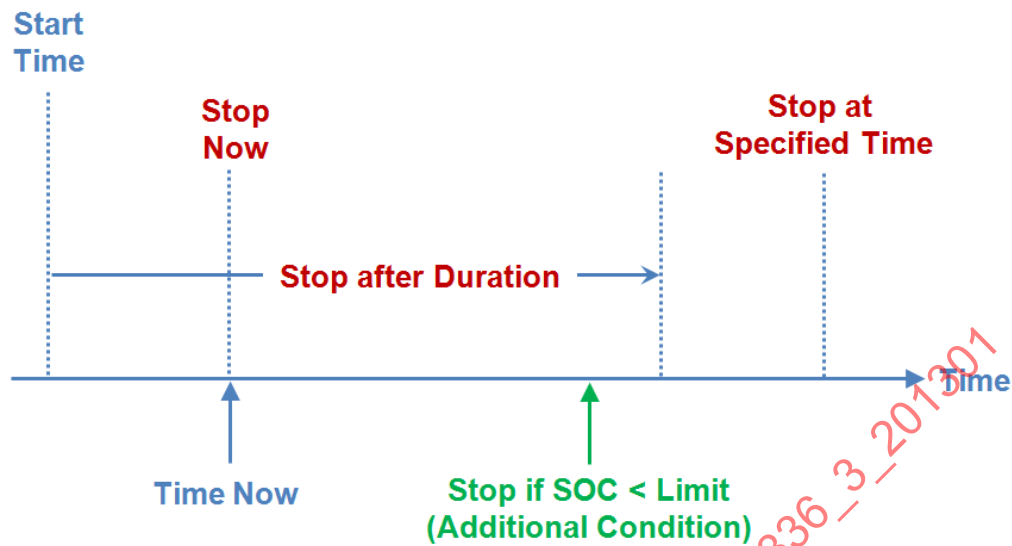


FIGURE 12 - OPTIONS FOR MANUALLY CONTROLLING TERMINATION

4.3.4 Energy Management System Control of Power Flow

Figure 13 shows a very simplified view of the world of electric power and electric vehicles. Utility in this chart means all of the relevant players in the electric power industry. It includes the distribution utility, the balancing authority, energy service companies, independent ancillary service aggregators, and others. The “utility world” ends at the meter. Any premises infrastructure provided by a utility beyond the meter or control over any equipment within the premises must be by mutual agreement of the premises owner with the utility. The definition of premises is also broadly defined. It means everything from the meter to the PEV. It can be a residential property. It can be a commercial property with public access to charge stations. It can be a factory with employee access to charge stations. It might even be a group of charge stations along a street. There will always be a meter and an EVSE.

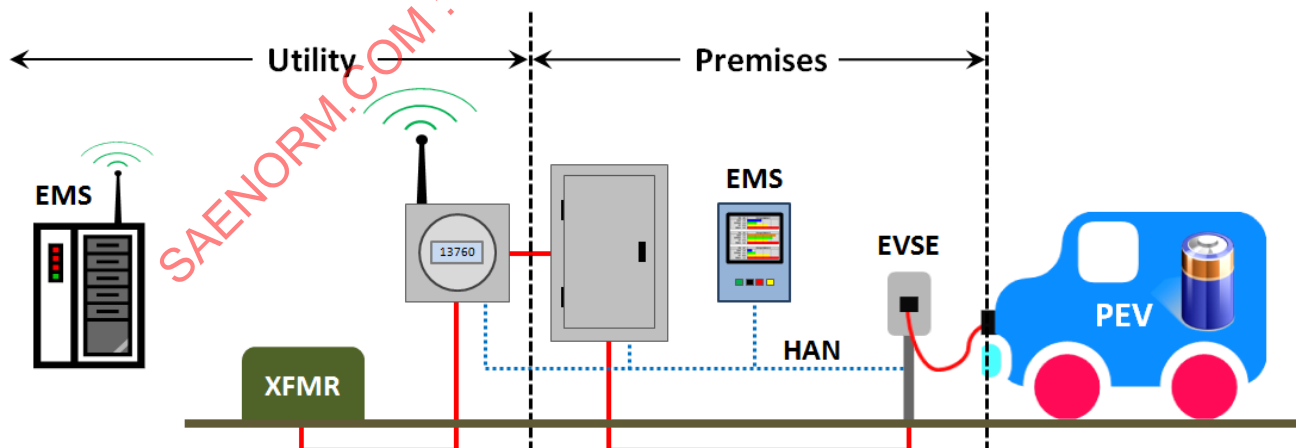


FIGURE 13 - RELATIONSHIP OF THE UTILITY, PREMISES, AND PEV

V2G operations can be performed in different domains: the bulk grid (or balancing area), the distribution system, and behind the meter. All of these V2G applications depend on communication between some energy management system (EMS) and an EVSE and PEV pair. There is the potential to have an EMS in each of the electric power domains. They might not always be called an EMS, but it's a good generic name.

The figure shows a Home Area Network (HAN) connecting the meter, premises EMS, and EVSE. This could be any media from ZigBee, Wi-Fi, cable, to power line carrier (PLC). The EVSE is directly connected to the network and the PEV connects to the EVSE using PLC. The EMS could use a wireless link to connect directly to the premises network. In a private residence the network would be based on internet and Smart Energy Profile 2.0 (as will the PEV). Other protocols (such as BACnet) could be used in commercial or industrial facilities. In this case network protocol translation could be performed by the EVSE. The figure shows the utility EMS communication coming through the meter (as it could with the Advanced Metering Infrastructure, AMI), but it could come into the HAN through another gateway. This also shows the utility using a radio frequency link to the premises, but it could be by internet on optical fiber or cable.

V2G applications will require communication between some EMS and the EVSE-PEV pair. Also the applications will require control algorithms to be executed by the EMS and the EVSE-PEV pair. V2G applications will require communication to a network to engage with an external premises or higher tier Energy Management System (EMS). The PEV could use PLC to communicate with an EVSE that is connected to a premises network for the purpose of engaging in higher level V2G applications. There may be other communication options, such as Wi-Fi, that could be used by the PEV to directly connect to a premises or other network.

4.3.5 Electronic Communication Paths to the Inverter

The entity containing the inverter should be the focus for communications for an EMS because it is the inverter that actually controls the reverse power flow and other DER functions. Messages may be relayed through other entities between the EMS and the inverter, but it is the inverter that must act on the message. It is the inverter that implements the DER functionality in its electronics and embedded software. The term inverter is broadly used in this discussion. It could be that a PEV computer implements the higher level inverter functionality and sends simple messages on a CAN bus to command forward or reverse current and phase angle. Or the PEV may decode SEP 2.0 messages and reformat them into CAN messages for an intelligent inverter. Or the inverter itself may be able to directly accept SEP 2.0 messages and the PEV communication function could just route these messages to the inverter. There are many possibilities for how a PEV could accept DER messages and get them to the inverter electronics.

Figure 14 shows communication with an inverter in the EVSE. When the inverter is in the EVSE, the EVSE and PEV will engage in DC reverse power flow. This control of DC flow between the EVSE and the PEV is governed by SAE J2847/2. The DC messages between inverter and battery system use power line carrier signaling on the control pilot. The primary "direct" path for the EMS to inverter communication should be from the HAN to the EVSE communication controller (D1). The EVSE controller could decode the SEP 2.0 DER messages and then use internal communications (D2), such as CAN bus, to operate the inverter. Alternatively the EVSE controller could just route the DER messages to an inverter that is capable of directly accepting SEP 2.0 messages.

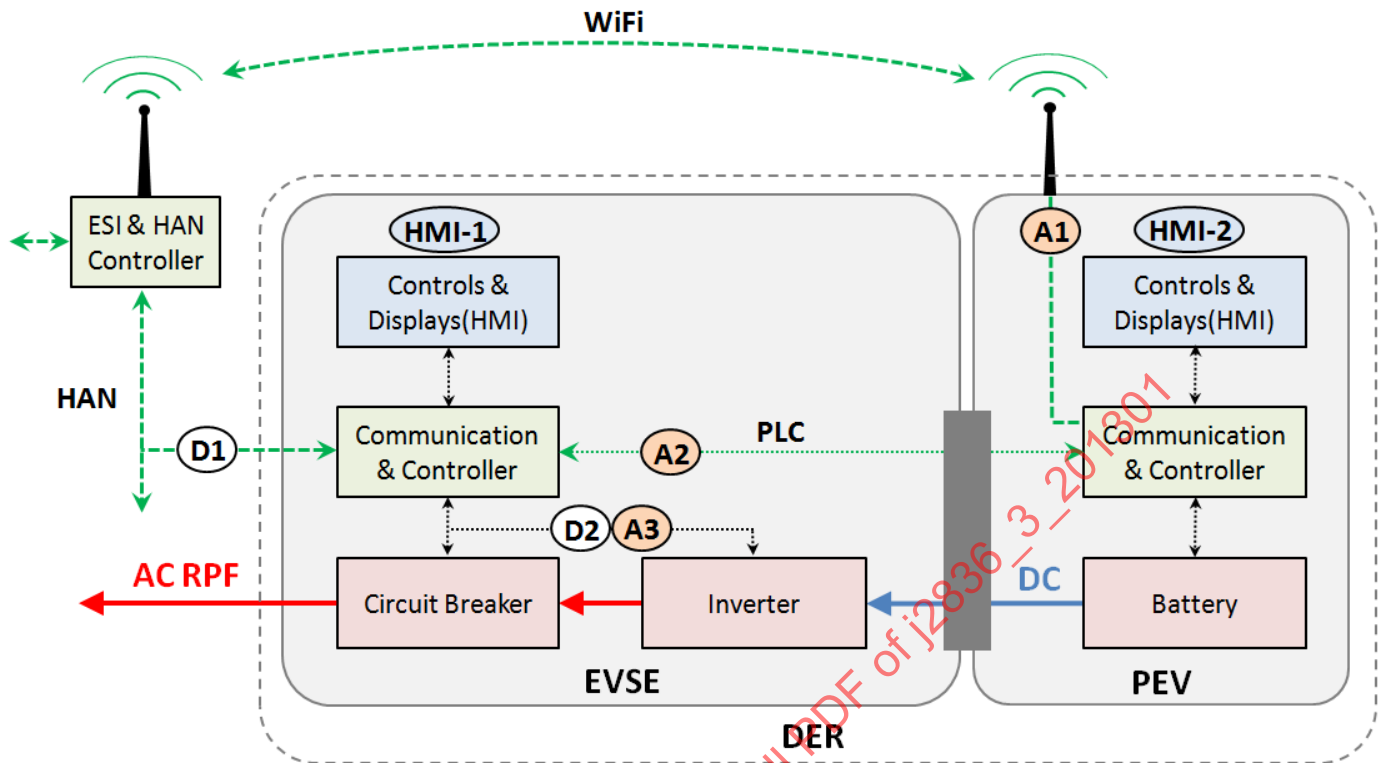


FIGURE 14 - COMMUNICATION WITH EVSE INVERTER

An “alternate” path is for the HAN controller to use Wifi to directly reach the PEV (A1) which in turn routes EMS messages across the PLC link (A2) to the EVSE controller, which then uses internal EVSE links to reach the inverter (A3). The PEV has no added value handling the inverter messages. The reverse flow of the PEV is entirely handled by the DC communications and the PEV does not need to process any of the DER messages. When DC reverse flow is being used (even if the vehicle also has an on-board inverter), the primary path should be the most direct route to the inverter.

Figure 15 shows communication with an on-board inverter. When the inverter is in the PEV, the direct path would be to use Wifi from the HAN controller to the PEV communication controller (D1). The PEV computer could use internal communications (D2), such as CAN, to control the inverter. Or if the on-board inverter is capable of directly receiving SEP 2.0 DER messages, these could just be routed by the PEV controller to the inverter. An alternate path is to communicate with the EVSE on the HAN (A1) and the EVSE would route the messages to the PEV using the PLC channel (A2) and the PEV would control the inverter using the internal link (A3). This may be the only path that is available if the home does not have a direct Wifi path to the PEV. Direct communication with the PEV for reverse power flow would be best with the EVSE relay serving as a backup if the primary channel is lost. The PEV with the on-board inverter is in the best position to decide whether to use the direct or alternate path.

Just as electronic communications should focus on the inverter, the HMI entries should also be at the inverter. This involves less communication. If the inverter is in the EVSE it makes more sense to start and stop the inverter at the EVSE. Each of the figures shows HMI-1 and HMI-2 for the preferred and alternate data entry location.

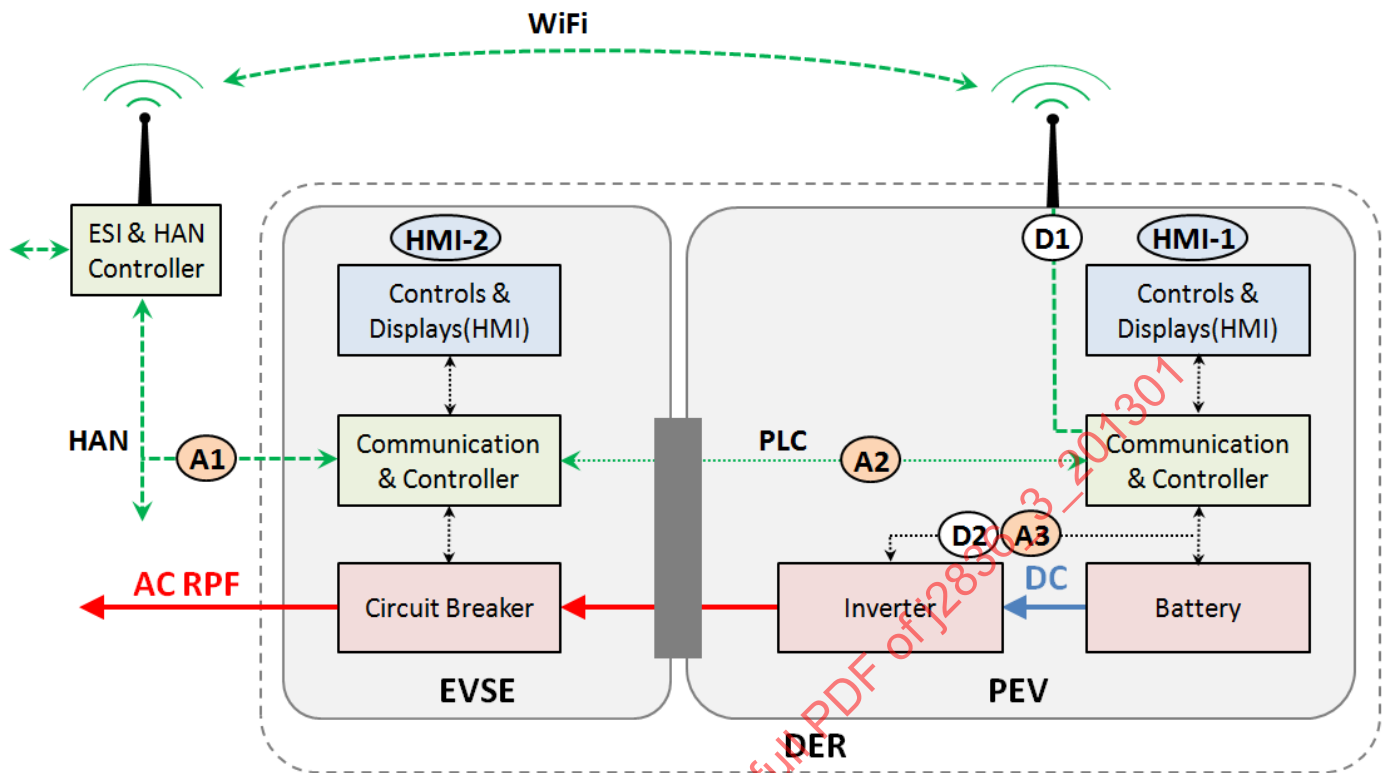


FIGURE 15 - COMMUNICATION WITH PEV INVERTER

4.3.6 DC Reverse Power Flow Considerations

SAE J2836/2™ and SAE J2847/2 deal with the internal messaging between the PEV battery management system and an external charger or inverter. This section will discuss some issues related to DC power flow to an external converter but these documents will be the authoritative documents.

Figure 16 expands on Figure 14 to highlight considerations for management of DC power flow. The red boxes are power elements. The blue boxes are control and measurement elements. The green boxes are communication protocols. The black dotted lines are private communication links, such as CAN bus. The red dashed lines represent power line communication on the control pilot. The green lines represent the chain of networks from the controlling EMS to either the EVSE or the PEV. The labeled ovals are the same as those in Figure 14 – the direct and alternate sequence for EMS messages. This is only a functional block diagram and it is not intended to represent an exact implementation. As previously explained, direct communication with the EVSE inverter is preferred. For the alternate path, the SEP 2.0 messages should only be relayed between the PEV and EVSE (A2) and the PEV should not act on the messages.

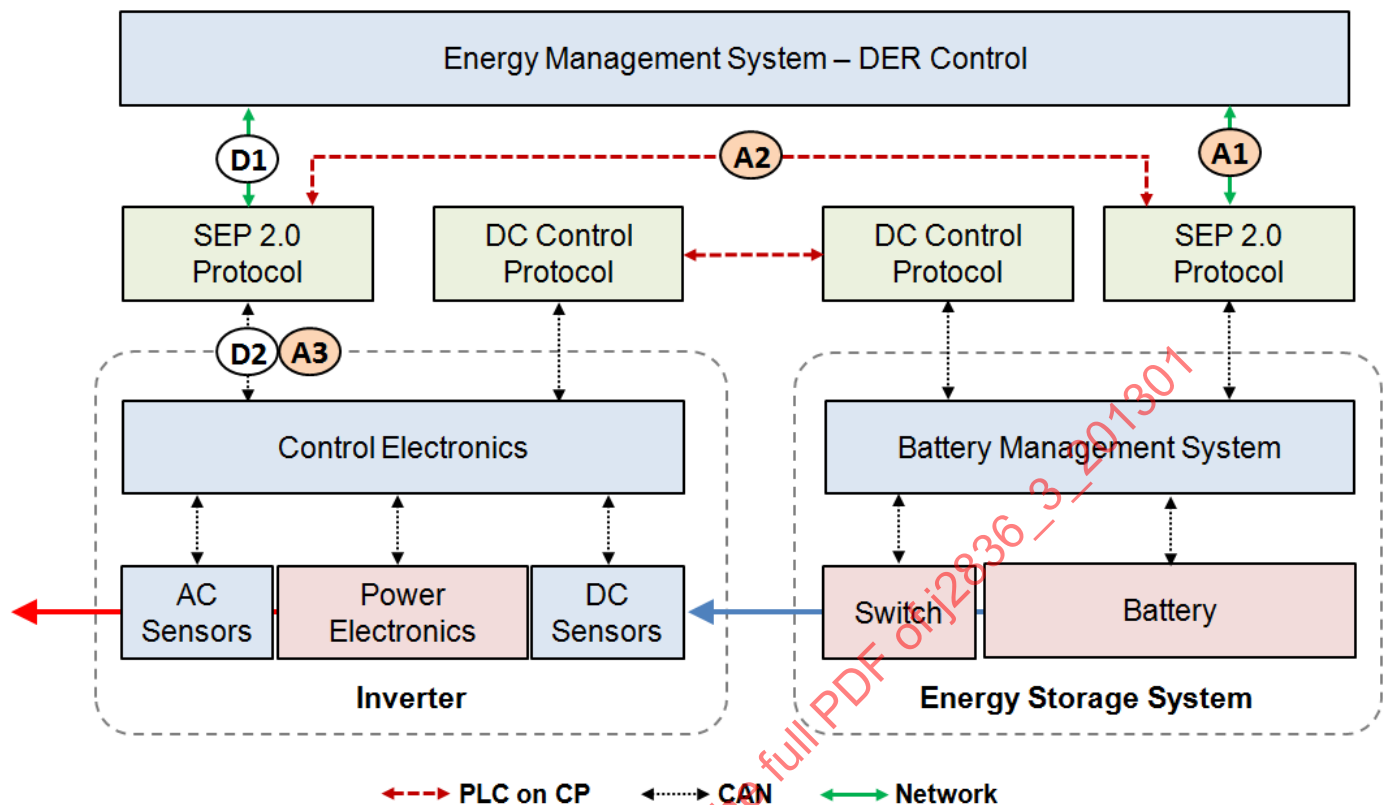


FIGURE 16 - EXTERNAL INVERTER DETAILS

DC power flow needs to be controlled differently by an external inverter than by an external fast charger. For fast charging the BMS establishes the current profile and effectively controls the entire charging operation by coordinating with the external charger over the PLC link. The fast charger provides current flow as requested by the vehicle. For DER use the external inverter must control the DC forward or reverse flow from the battery to deliver or absorb power as requested by the controlling energy management system. The BMS needs to establish the current limits for forward and reverse DC flow and the inverter control electronics must manage the current flowing in or out of the inverter to stay within the established limits. The BMS must always protect the vehicle battery by either reducing the authorized limits or even disconnecting the battery, but the current flowing in and out of the battery must be as directly controlled by the inverter.

The DER device must provide a maximum forward power and a maximum reverse power rating to the controlling EMS. The EMS will command power to or from the DER as a percent of these maximum ratings. This will allow the EMS to adjust DER units of different sizes by commanding similar percents. It can also control the exact power output of an individual DER by computing the percent of rating needed to achieve the target power level. The rated maximum should be continuously available over the session. The rating is the lower of the limits established by the battery system, the inverter rating, and any limitations of the branch circuit. Even though a battery may be able to absorb 15 kW, if the EVSE is on a 40 Ampere branch circuit, the maximum forward power for the system will be limited to 7.7 kW and this is the rating that will be reported to the EMS as the maximum forward power. The flat rated forward or reverse power may not be available across the full range of state of charge of the battery. This limitation is communicated to the EMS from the DER by providing the available duration at the flat rated power for both discharging and charging. The available duration value will change throughout the session change as the SOC changes during DER use. This will be discussed more in section 4.6.1.

Figure 17 shows a typical charging profile of power versus SOC during fast charging. In this example the vehicle draws 45 kW from 20% SOC and this falls to 15 kW at 80% SOC when fast charging stops. The BMS manages the current provided by the external charger. If the vehicle had a 30 kWh battery and could go 90 miles at 45 miles per hour, it would consume battery energy at a continuous rate of 15 kW. The battery may be called on to deliver 75 kW during acceleration or absorb 45 kW at the start of fast charging, but these are not sustained. For this vehicle a flat rating for continuous discharge could be 15 kW. The dashed red line at 15 kW represents the maximum DC forward power that can be used for a DER session. The inverter should be able to command 15 kW of forward power for SOC ranging from zero to 80%. The fact that the battery could absorb 45 kW at 20% SOC is not useful for using the PEV as a DER device.

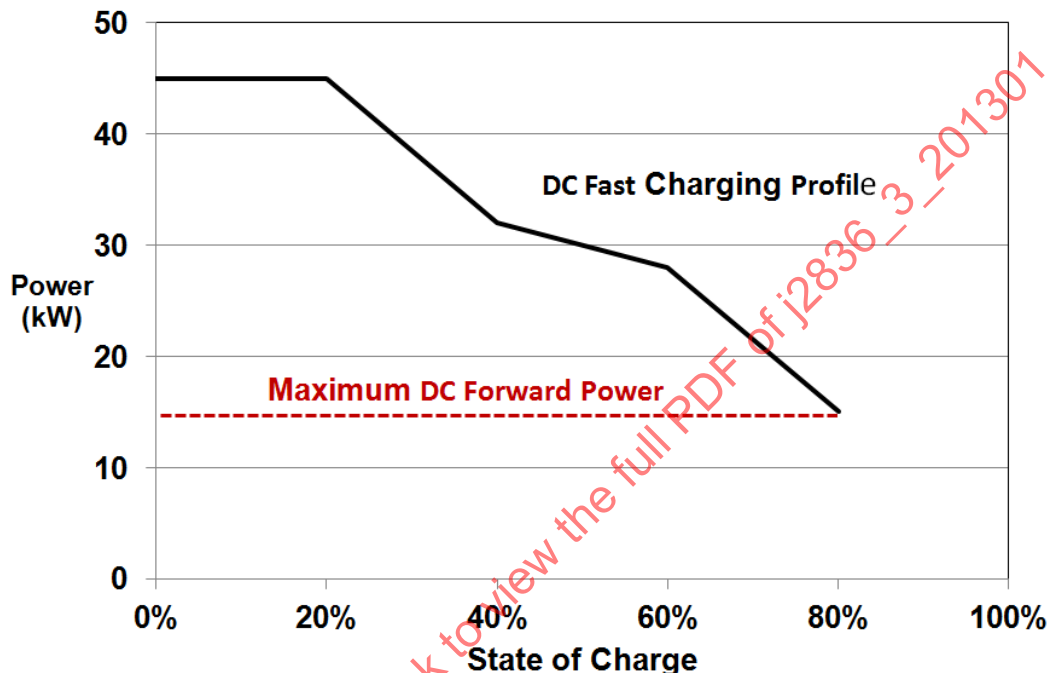


FIGURE 17 - TYPICAL FAST CHARGING PROFILE.

In the functional diagram the inverter directly measures frequency, voltage, and current at the electrical connection point (ECP) of the inverter. It also measures the DC voltage and current. It controls the power electronics to either generate AC current from DC flow from the battery or the reverse. This is not unlike controlling a traction motor. The DER functions can be complex. One autonomous function is switched on by the EMS, but when engaged works by measuring the AC line voltage and producing VARs based on a stored curve of VAR versus volts. Another autonomous function measures frequency and either produces forward or reverse active power based on a curve of power versus frequency.

While it is possible to do, it may not be prudent to design a system where the vehicle is expected to include the full DER functional capability and act as the DER device for the EMS and then seek to control the inverter power electronics at a low level by sending current and phase angle commands using the DC control protocol link. This is much more complex than keeping the control functions with the inverter. There are business issues, liability considerations, and other factors that favor keeping the DER functionality with the inverter power electronics.

For an external inverter this document assumes that the EMS communication will be received by the EVSE (either directly or by relay of the full message from the PEV). The PEV will not act on DER messages because it is not serving as a DER device. The EVSE inverter and the PEV BMS will coordinate on the DC forward and reverse power flow using communications defined by SAE J2847/2.

4.3.7 Information Exchange Considerations

Organizations may use different terminology and units of measure to describe the same things. This applies to the terminology, sign conventions, units of measure, and typical scale factors. For example, a scientist may prefer to express energy in Joules. A power company engineer might refer to electrical energy in kilowatt-hours. A mechanical engineer could express it in foot-pounds or British thermal units. Without knowing the unit of measure, a value of 2.5 for energy is meaningless. Even if the base unit of measure is agreed to be Watts, sometimes the scale of the system determines the context of the value. For an electronic device a rating of 2.5 could mean Watts, for a home appliance it would most likely mean kilowatts, and for a large generator it would most likely mean megawatts or even gigawatts. When the context is known the scale is often obvious.

When information is exchanged between two entities, it is important to agree on all of the attributes of the element of information that is to be exchanged. The name that is used to describe it by one entity is much less important than all of the attributes. Two different applications can use different names for an item as long as there is a mutual understanding of all of the attributes when that information is exchanged.

It is critical that anyone using information from a source understand the meaning of that information. For a measured value, the user may need to know exactly what is being measured, the accuracy, the resolution, the units of measure, any power of ten multiplier, when it was measured, how often it is measured, and other characteristics. There are different ways to know. If the communication content is to be minimized between entities, all of the participants can agree on the characteristics of information to be provided by each source. A binary label can be defined to identify the item of information and a binary value can be provided. A communication protocol could allow 12 bits for a label, which would allow 4096 different items to be defined for all of the participants, and say 32 bits for the data. The predefined scale factors and label codes allow the receiving entity to identify the item of information and to convert the binary data for internal use. When communication is more robust, it is possible to send the value and all of the attributes with the information.

In describing use cases in this document, terminology may be used such as "Maximum Reverse Power Flow" and expressed in kilowatts. The same information for a DER device might be referred to as "Wmax" in the IEC 61850 object model and expressed in Watts. The Smart Energy Protocol 2.0 may identify it as "setMaxW." It is not important that same terms be used everywhere as long as the attributes of the actual information are mutually understood.

Figure 18 shows an example, where System 1 may be a PEV and System 2 may be a utility EMS. The vehicle proprietary software may use a name "MaxRevPwr" for Maximum Reverse Power and use a single precision variable with the power in kilowatts. The utility EMS software may use an internal name of "Wmax" for that information and use it in Watts. To exchange in information the communication software in System 1 converts the internal variable into a message with some label "XYZ" and in some format such as Int32. It is using deci-watts to preserve one decimal place in the binary translation to an integer.

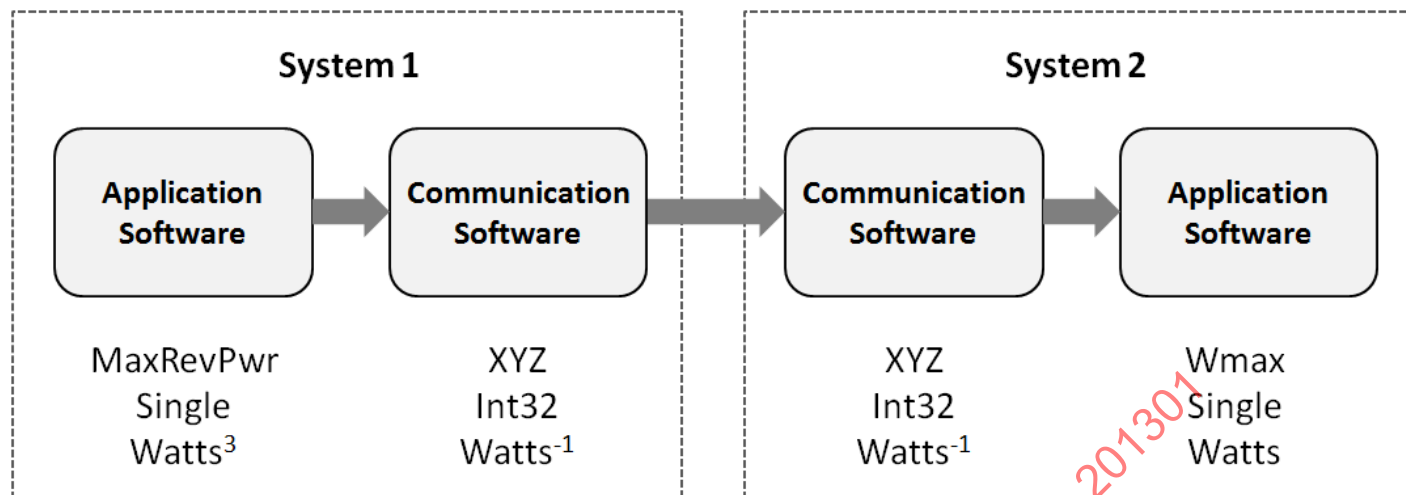


FIGURE 18 - EXAMPLE OF INFORMATION EXCHANGE

The use cases in this document may not use terminology or units of measure that are exactly the same as those of the Smart Energy Profile 2.0 or IEC 61850-90-7 technical report. The terminology used in this report is only for the purpose of understanding the basic information that needs to be exchanged to perform the function and it is not intended to define the exact communication protocols to be used for the exchange. It was decided to use more descriptive terms in this document and not try to use the terminology from a specific protocol or object model. The SAE J2847/3 document will extend the use cases from this document into communication messages.

4.4 Inverter-based Distributed Energy Resources

Distributed Energy Resources are small, modular Distributed Generation (DG) and storage technologies that provide electric capacity or energy where it is needed on the distribution grid. DG, which could be a diesel generator, gas microturbine, solar panel array, or small wind turbine, can only serve as a source of energy. However, energy storage systems are a unique form of DER because, unlike pure DG, the unit can also serve as a variable load. Plug-in Electric Vehicles (PEV) can be considered to be DER storage systems. Even a PEV that is not capable of reverse power flow can be used as a DER device to allow for active control of forward power flow for grid purposes. The use of a variable load for grid purposes is sometimes called Demand Dispatch or Demand Management. This can be considered to be a single-sided use of a DER device and is no different than a generator that can only vary power output.

Most conventional DG devices use electric machines to produce electricity. The power output can be controlled and some are capable of producing or absorbing reactive power (VAR). The rotational speed of the machines is synchronized with the grid frequency. These systems generally have significant rotational and thermal cycle inertia and power level changes do not happen quickly. If these devices must be controlled by a distribution utility, this is customarily done by issuing commands. This can even be done using the telephone and asking an operator to adjust the power.

Some forms of DG such as solar PV systems have no spinning machines. These devices are fundamentally DC devices and an inverter is required to produce AC power. An inverter can be controlled in the same manner as a classic DG device by using direct commands for forward or reverse power as well as power factor (VAR). But inverters can incorporate the computational capability to provide advanced functional capabilities that automatically change power and VAR based on measured grid conditions. Energy storage systems can offer four quadrant power conversion capabilities along with the advanced functional capabilities. There is a great deal of interest in deploying inverters with this enhanced functionality in solar PV systems and stationary grid storage systems.

It is not clear yet if there is sufficient economic benefit for PEVs to go beyond simple command-response inverters to include the autonomous functionality. This is primarily being driven by concerns about power quality on distribution feeders caused by increased levels of solar and small wind turbines along the feeder.

4.4.1 Integration of DER with the Feeder


Electric power systems (EPS) were designed based on a model of power flowing one way from large power plants through transmission lines to distribution substations. Generally power leaves the substations on radial distribution feeder circuits to feed the customer loads. The voltage for a distribution feeder is set at the substation using a voltage regulator or a tapped transformer. The voltage drops along the length of the feeder as customer loads are served. The utility sets the head end voltage high enough (but below an upper limit) to ensure that the voltage for the last customer is above a minimum required value. Because customer loads are not purely resistive, banks of capacitors are placed along the feeder to correct power factor along the feeder. Some capacitors are fixed and some may be capable of being switched on and off as power factor changes as loads vary.

This control paradigm gets more challenging when DG is added along a feeder and the power is no longer coming exclusively from the substation. Even if the DG is only reducing the net load of a customer on the feeder, it can adversely impact the ability of the utility to manage the voltage and power quality along the length of the feeder. Fossil fuel DG provides a steady power output and is more predictable than renewable sources such as solar photovoltaic (PV) systems or small wind turbines. The daily and hourly power output for solar PV can be planned for based on weather forecasts, but the higher frequency power output variation caused by cloud passage is random. Wind puffs can cause similar upsets to power planning for wind turbines.


IEEE Standard 1547-2003 was the first of a series of standards developed by Standards Coordinating Committee 21 (SCC21) on Fuel Cells, Photovoltaics, Dispersed Generation, and Energy Storage concerning distributed resources interconnection. This standard was designed to ensure the safe interconnection of DER to the EPS. A DER must disconnect or stop providing power based on excursions of frequency or voltage beyond the specified limits. These limits are shown in Figure 19 for a 240V reference and are based on the nominal voltages from ANSI C84.1. The clearing time for disconnecting power varies based on the level of the voltage excursion and can be as short as 160 milliseconds. After a DER disconnects it may need to stay offline for up to five minutes following the return of system voltage and frequency to within limits. This example is based on nominal voltage of 240 VAC.

A utility will normally regulate voltage along a feeder to between 95% and 105% of the reference voltage. If line voltage sags below 88% or swells above 110% this is considered abnormal. An inverter must stop producing power when abnormal voltage is detected. If the voltage drops below 88% but not below 50%, the inverter must stop (or clear) within two seconds. And if voltage drops below 50% it must clear within 160 milliseconds. For a rise in voltage above 110% but below 120%, the inverter must clear within one second. And for voltage above 120% it must clear within 160 milliseconds. The inverter must also monitor frequency and stop producing power if the frequency falls below 59.3 Hertz or rises above 60.5 Hertz. Once the inverter disengages following a fault condition, it is not allowed to immediately reengage when the fault condition ends. Other rules govern reconnect, which may include waiting for five minutes after conditions return to normal.

IEEE 1547 Voltage Limits

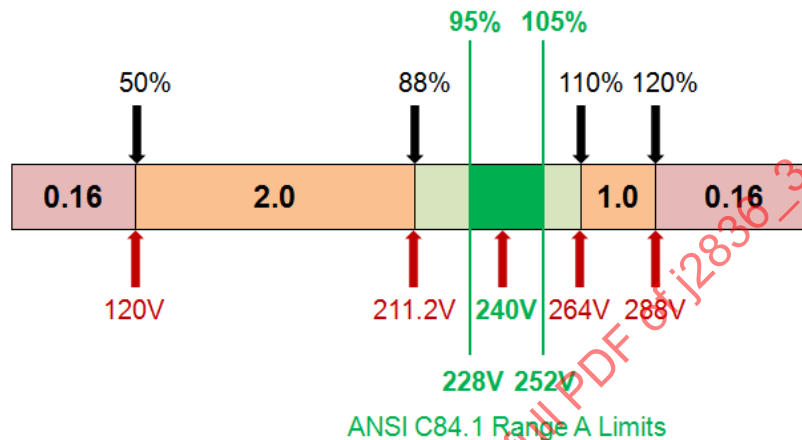

IEEE 1547 Frequency Limits

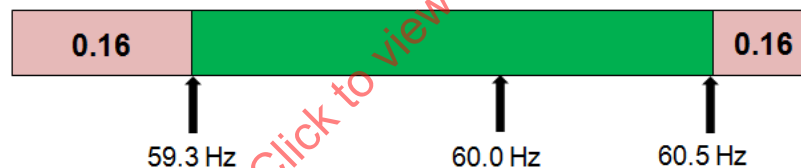

Clearing Times in Seconds

FIGURE 19 - IEEE 1547 LIMITS

As penetration of renewable energy sources increase along a feeder (as measured by the capacity of the renewable sources to the total load served) this can reduce the voltage stability of the feeder. It is possible that a sudden drop in load or surge in power output could drive the local voltage on the feeder above the IEEE 1547 limit which would cause one or more renewable sources to drop offline and stay off for five minutes. This loss of generation would cause the voltage to drop and other DER units might drop offline because of the low voltage limit. This would result in a surge in power down the feeder. After the feeder stabilized the DER could reconnect but even this could cause the stability problem to reoccur.

Energy storage systems have been deployed as part of solar PV systems primarily to allow excess solar energy to be captured during the day for reuse at night. This was ideal when customers were not allowed to provide excess power to the grid. With net metering there may be more value to the customer in supplying the excess solar power to the grid during peaks and operating from grid power in the evening. The storage system is still useful for maintaining steady output during cloudy conditions and for emergency backup of the home. These storage systems were not intended to be a grid resource, but there is increasing interest in using the storage systems to help stabilize the voltages on the feeders.

For a storage device, such as a PEV, the IEEE 1547 limits apply to situations when the power is being discharged. This standard does not apply to loads. These limits apply to the inverter function, but are not automatically flowed down to the charger function of a power converter. However, there may be special circumstances, such as where a storage device may be providing voltage support to the grid, for which bidirectional application of these limits would apply.

4.4.2 Advanced Inverter Functions

The Electric Power Research Institute (EPRI) working with the U.S. Department of Energy, Sandia National Laboratories, and the Solar Electric Power Association initiated a collaborative effort in 2009 to define common inverter functions and communication protocols for the integration of smart Distributed Energy Resources (DER) with the grid. The primary focus of the activity was on inverter-based solar photovoltaic (PV) systems and stationary battery energy storage systems. The initiative engaged a large number of individuals representing inverter manufacturers, system integrators, utilities, universities, and research organizations. The resulting work products have provided valuable input to a number of standards organizations and activities, including the U.S. National Institute of Standards and Technology (NIST), the IEEE, and the International Electrotechnical Commission (IEC). EPRI documents the functions in Common Functions for Smart Inverters.

The NIST Smart Grid Interoperability Panel established a Priority Action Plan (PAP-07) for Energy Storage and DER Interconnection Guidelines. One of the objectives of PAP-07 was to develop and harmonize object models of energy storage into IEC 61850-7-420. IEC 61850 is a standard for the design of electrical substation automation and is a part of the International Electrotechnical Commission's (IEC) Technical Committee 57 (TC57) reference architecture for electric power systems. IEC 61850-7-420 defines the information models to be used in the exchange of information with DER. Working Group 17 of IEC TC57 is responsible for IEC 61850-7-420, which was first issued in 2009. PAP-07 prepared a requirements document (Advanced Power System Management Functions and Information Exchanges for Inverter-based DER Devices, Modeled in IEC 61850-90-7) to serve as a bridge between the EPRI documents and the IEC documents.

An interim step in the revision of IEC 61850-7-420 was for IEC TC57 WG 17 to create IEC 61850-90-7 as an informative technical report to provide guidance for the revision. The report describes the functions for inverter-based DER systems, including photovoltaic systems, battery storage systems, electric vehicle charging systems, and any other DER systems with a controllable inverter. It defines the IEC 61850 information models to be used in the exchange of information between these inverter based DER systems and the utilities, energy service providers, or other entities which are tasked with managing the volt, VAR, and watt capabilities of these inverter-based systems.

NIST SGIP PAP-07 also worked with the IEEE SCC21 to initiate work on IEEE 1548.8. This new document in the series will also deal with the use of energy storage systems and advanced inverter functions.

The combined efforts under EPRI Program 174 (Integration of Distributed Renewables - Smart Inverter Communication Initiative), NIST SGIP PAP-07, IEEE SCC21 1547.8 WG, and IEC TC57 WG17 to develop the smart inverter functions is making great progress. The abstract data models defined in IEC 61850 are being mapped into a number of protocols.

The advanced inverter functions described by the EPRI and PAP-07 documents will be summarized in this section. These functions were developed primarily for solar PV systems and associated storage systems. They can also be applied to standalone, stationary storage systems. The use of a PEV as a DER was not a significant consideration during the development of these functions. The primary purpose of a solar PV system is to produce power and energy – as much as possible for as long as possible. The primary purpose of a PEV is transportation and producing any power and energy for the grid increases the risk that the PEV will be able to meet unexpected transportation needs. There are some functions defined in these documents that do not make sense for a PEV to implement. There are others that could be implemented but may not make economic sense based on the relatively small energy capacity of a PEV relative to a solar PV system. And there are other characteristics of PEVs that are not included in the DER model that must be accounted for in the communicational protocols for PEVs.

There are two fundamental approaches to the control of DER devices: immediate functions and autonomous functions. These approaches will be briefly discussed in the following subsections and in more detail later in the document.

4.4.3 Immediate Functions

Both EPRI and IEC have defined five inverter functions for DER devices that are based on direct control. The IEC calls them immediate functions. These immediate control functions assume a tightly coupled interaction between the inverter-based DER systems and a controlling entity (utility, energy service provider, or customer EMS). These controls require communication channels with high availability between the controlling entity and the inverter-based DER systems, since the controlling entity must maintain direct knowledge of the inverter-based DER system status and capabilities. It is expected that inverter-based DER systems will revert to "default" states if communications are unavailable for some pre-specified length of time.

The five immediate functions are described below. Only two of them are directly relevant for PEVs (INV3 and INV4). The IEC implementation for a DER storage device is not sufficient for use with a PEV because of the additional considerations associated with a PEV. This needs to be considered in any protocol used with the PEVs. A grid storage unit can operate to a minimum reserve SOC and does not have the additional constraint that the storage system must be recharged by a specific time. The controller cannot just operate a PEV to stay above the minimum SOC. It must plan the use of the PEV during a session to achieve grid requirements and charge the vehicle. This requires additional information exchange between the PEV and EMS and more sophisticated EMS algorithms than required for stationary storage which is the basis of the EPRI and IEC work. The headings are based on the EPRI definitions of the five functions.

4.4.3.1 Battery Storage Direct Charge/Discharge Management Function (IEC Function INV4)

This function requests the storage system to charge or discharge at a specific rate (as a percent of maximum charging or discharging rate). To account for diversity in the size of storage systems, the function requests a percentage quantity based on the capacity of the system. For active power out requests (reverse power flow - storage discharging), the percent is relative to the current value of the maximum discharging rate. For active power in requests (forward power flow -storage charging), the percent is relative to the current value of the maximum charging rate. The discharging capacity of the inverter and the charging capacity of the charger may differ. A timeout period is included for reverting to the default state of the inverter-based DER system, to ensure that a missed or lost command does not impact normal operations beyond that timeout period. This is the most basic DER function for a PEV. Use Case U6, described in Appendix C, is based on this function.

4.4.3.2 Fixed Power Factor Function (IEC Function INV3)

Fixed power factor will be managed through issuing a power factor value. A timeout period is included for reverting to the default state of the inverter-based DER system, to ensure that a missed or lost command does not impact normal operations beyond that timeout period. The INV3 function is included in U7, which is described in Appendix D.

4.4.3.3 Connect/Disconnect Function (IEC Function INV1)

The inverter is commanded to disconnect from the electric power system using an actual switch and not by commanding the inverter power output to off. This function is not related to intentional islanding, and refers to the management of a switch that separates at the DER, leaving customer premises loads connected to the grid. This DER function should not be used with a PEV with an on-board inverter because it also serves as its charger and it should always remain connected to the EVSE. The EVSE can be used to disconnect the PEV using its internal breaker. This capability can be part of an EVSE management function that could also be used to set the control pilot. It is not clear that this needs to be part of the EVSE or PEV DER capability.

4.4.3.4 Maximum Generation Limit Function (IEC Function INV2)

This function sets the maximum generation level as a percentage of the DER capacity. This function is useful for a solar PV system that has an unconstrained power output that varies with solar radiation. This function can be used to set the upper limit. The unconstrained generation (discharging) level for a PEV is zero and it will only discharge above zero if it is commanded and this is the purpose of the INV4 function. This function is not needed for a PEV for limiting discharging. This function is not currently set up to limit charging, although it could be extended to allow it. However, INV4 could also be extended to allow the setpoint to be either a target or a limit for charging. This approach is taken for U6. There are applications where a specific charging rate is required of a DER and others where it may only be necessary to keep the DER below a specific charging rate.

4.4.3.5 Battery Storage Price-Based Charge/Discharge Function (IEC Function INV5)

This function provides a pricing signal (actual price or some relative pricing indication) from which the inverter-based DER system may decide whether to charge the storage or discharge the storage, and what rate to charge or discharge. This is not an essential DER function for a PEV. The Pricing functions of SEP 2.0 provide this capability for charging. It is not likely that a PEV would engage in energy arbitrage and discharge at high prices and charge at low prices. It is more likely that the home energy management system would deal with the price decisions and engage the PEV using the direct INV4 management function. Price based discharging is not expected to be beneficial for a PEV and INV4 is expected to be used to control all discharging for PEVs.

4.4.4 Autonomous Functions

The autonomous functions are an exciting new concept for DER devices. They are based on the DER inverter directly measuring line voltage, frequency, or power flow at the electrical coupling point (ECP) and then automatically responding by adjusting the amplitude, direction, and phase angle of the current flow to achieve the desired result. For each type of function (such as Volt-VAR) there can be several different selectable modes which consist of an input-output curve (defined by a tabular array) and other parameters. The arrays and parameters for each mode are sent ahead of time, which could be once at enrollment or even at the start of a session. The controlling EMS selects the predefined mode and the DER automatically engages and executes the function as defined by the mode.

Examples of a few of the autonomous modes being considered by EPRI Program 174 and IEC TC57 WG17 are briefly described below. The complete description of the various autonomous functions can be found in IEC 61850-90-7. Many of these functions are more useful with larger fixed DER devices, such as solar PV installations which provided the motivation for the new functions. The functions are not all appropriate for a small roaming storage device which may pop up on different feeders and only be available for limited durations. Some functions may be more appropriate when using a fixed EVSE inverter than when using a PEV on-board inverter. There may be some issues as how a roaming PEV on-board inverter can be authorized by a distribution utility to participate in certain DER functions.

Some of the autonomous modes for use with a PEV will be part of utility use case U7, Advanced Distributed Energy Resource. Considerations for incorporating autonomous functions will be discussed in more detail later in this document.

4.4.4.1 Volt-VAR Function

This function allows a DER inverter to manage its own VAR output in response to the local service voltage. Since distribution utilities could be requesting VAR support from many different inverter-based DER systems with different capabilities, different ranges, and different local conditions, it would be very demanding of the communications systems to issue explicit settings to each inverter-based DER system every time a VAR change is desired. This function allows volt-VAR behaviors to be configured into an inverter using arrays that establish a volt-VAR relationship or curve for use during normal power system. Each volt-VAR behavior is associated with a volt-VAR mode, and requests can be made to change modes by simply specifying the desired mode. This allows DER inverters to be addressed in groups, with each having tailored volt-VAR behaviors, and yet all able to be switched from one mode to another with minimal communication overhead.

4.4.4.2 Volt-Watt Function

This function provides a mechanism to control output power based on the local voltage. Some utilities have described circumstances where high solar PV system output and low load causes feeder voltage to go too high at certain times. There have also been instances where a large number of customers served by the same distribution transformer have solar PV systems which cause the local service voltage to become too high. The result is that certain PV inverters do not turn on at all. Existing distribution controls are not able to prevent these occurrences. The Volt-Watt function allows the DER inverter to automatically reduce its own maximum power output as the voltage at the PCC exceeds a configurable, utility defined limit. For this function a Voltage-Watt array is defined consisting of volt-watt pairs. There can be multiple voltage-watt modes configured into an inverter and selected by the utility depending on conditions.

4.4.4.3 Frequency-Watt Function

The frequency-Watt function is used to mitigate frequency deviations by countering them with reduced or increased power. When short-term (transient) frequency deviations occur, autonomous responses to such events are desirable because response must be fast to be of benefit. Long-term frequency deviations or oscillations can be corrected in the bulk grid using regulation services. However, in smaller systems or during islanded conditions, frequency deviations may be longer in duration and indicative of system generation shortfalls or excesses relative to load. Deviations from nominal frequency can cause grid instability, particularly if they cause significant amounts of generating equipment to trip off-line.

One method for countering the over-power problem is to reduce power in response to rising frequency (and vice versa if storage is available). Adding hysteresis provides additional flexibility for determining the active power as frequency returns toward nominal. This function may be useful for an aggregator to use to perform frequency regulation rather than sending immediate commands to each vehicle to adjust power level.

4.4.4.4 Watt-Power Factor Function

The Watt-Power Factor function can be used to automatically adjust power factor as the feed-in power of the DER increases. For low power output the inverter current could be set to lag the line voltage waveform and for high power output the current could be set to lead the voltage. This could range typically from 0.90 lagging (overexcited) to 0.85 leading (underexcited). This is the typical power factor adjustment range of a synchronous generator from which the terms underexcited and overexcited originate. Power factor is discussed in section 4.7.1. Most of the IEC discussion has been about using this automatic power factor compensation during production of power. However, this type of automatic function could also be used during charging of a storage device.

4.4.4.5 Low/High Voltage Ride Through (L/HVRT) Function

The existing IEEE 1547 voltage thresholds for shutting down inverter-based DER are suitable for low penetration circumstances. However, different L/HVRT settings may be needed for higher penetration DER circumstances. When the reliable delivery of power to loads becomes dependent on the generation of distributed resources, then fast disconnection during voltage disturbances may not be desirable. Even when penetration levels of DER are not particularly high, under certain circumstances, it may be desirable that devices stay online longer during disturbances. Examples of this scenario include that of a small system, island, or long feeder in which voltage disturbances frequently occur. The need for a DER to remain engaged is particularly true when the DER may be executing autonomous modes that may be helping to stabilize the voltage excursions.

This function provides a flexible mechanism through which general L/HVRT behavior may be configured, if so desired. In this context, L/HVRT refers only to the connect/disconnect behavior of the DER, essentially defining the voltage conditions and durations under which the DER may and must connect and disconnect. Two curves of voltage-time limits are defined for the LVRT mode: one defines the "must remain connected limit" and the other defines the "must disconnect limit." The region between the curves allows the inverter to remain connected or to disconnect. A similar set of curves are used for the HVRT voltage-time limits. A specific DER may be authorized to use a particular set of limits based on its criticality to the feeder and its capability to help stabilize the feeder voltage.

4.5 Use Cases and V2G Applications

Use cases can be constructed at many levels. The most talked about, if not the defining, application for V2G is the concept of aggregating a large number of PEVs to perform frequency regulation for the bulk grid. Figure 20 shows the scope of a use case for an aggregator providing frequency regulation services to a balancing authority by controlling the charging and discharging of a fleet of PEVs. The blue dashed oval defines the scope of this use case. The figure also shows a small red dashed oval around a single PEV and EVSE which is labeled U6. This represents the scope of the SAE use case for enabling a single PEV to charge or discharge in response to external commands received by the PEV from an authorized energy management system (EMS).

These are both use cases: one constructed from the perspective of an aggregator and the other from the perspective of an individual PEV. This document will refer to these higher tier use cases as “V2G Applications.” Certain minimum information must be exchanged between an individual PEV and the aggregator to allow that vehicle to participate in the V2G application. This is the focus of use case U6. There are many things that the aggregator must do, such as back office communication between the aggregator and the balancing authority, which may be critical elements of the aggregator’s use case (i.e. V2G application) but have no direct relevance to an individual PEV.

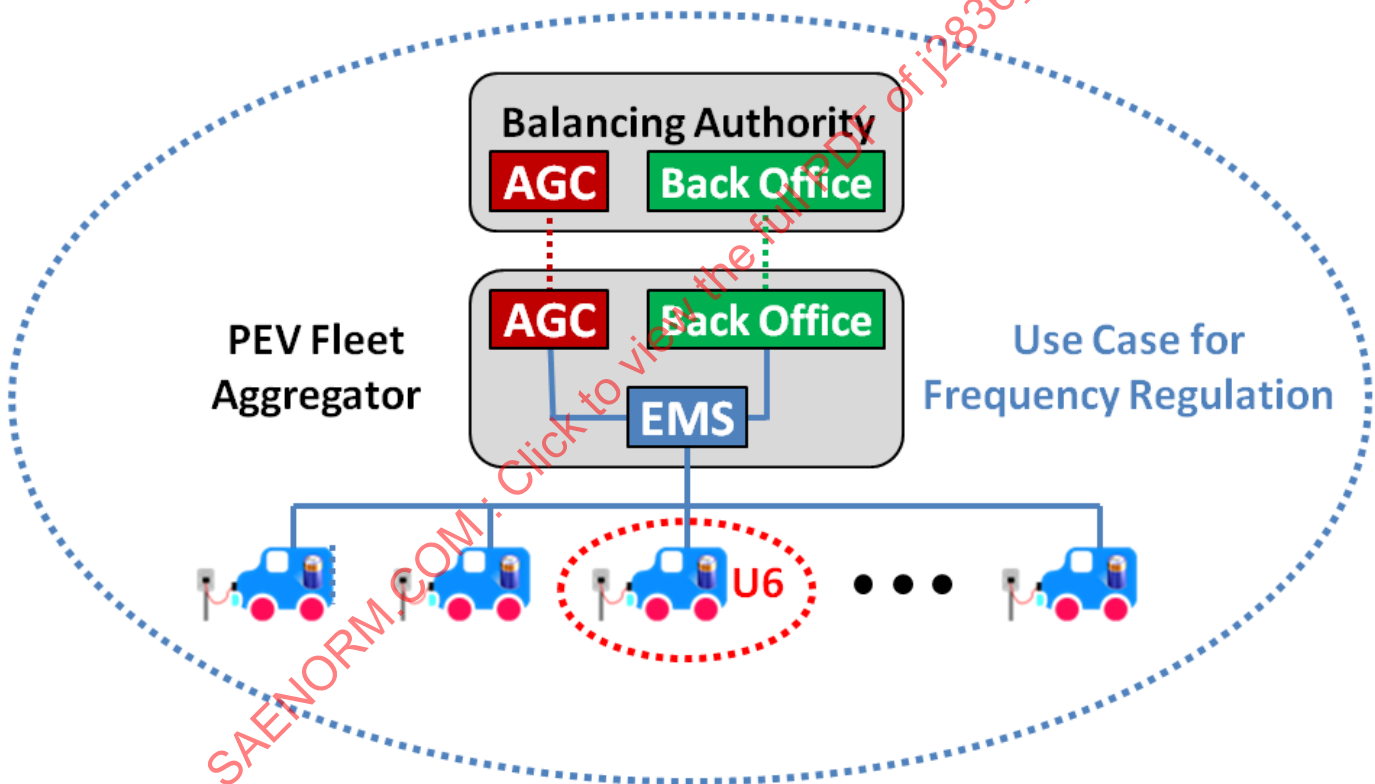


FIGURE 20 - USE CASES AND V2G APPLICATIONS

Each V2G application will be associated with a specific domain of the electric power system: the bulk grid (or balancing area), the distribution system, or behind the meter. Each V2G application will also have a characteristic interval between requests for changes to the charging or discharging power level of individual PEVs participating in the application. This is referred to as the Operational Bandwidth in this document. V2G applications will require a minimum power transfer capability (PTC) for the participating vehicles. Some V2G applications can be accomplished with PEVs that only have chargers, others will require discharging, and others will require the capability to provide or absorb reactive power (VAR). The SAE use cases are built around a required PTC of the PEV and EVSE and the information required to engage it. In summary, each V2G application will serve a specific domain, will have require a specific operational bandwidth, and the PEV must be capable of engaging in a specific SAE use case.

4.5.1 V2G Application Domains

In this document, the electric power system is segmented into three domains: bulk power or balancing area; the distribution system; and the behind the meter customer. This breakdown is useful for thinking about V2G applications. The domain is defined by the primary purpose that the controlling entity (EMS) is serving. It is possible that a PEV may be engaged simultaneously with an EMS from more than one domain.

For the bulk grid the specific location of each PEV is not important, other than the PEV is in the balancing area. And many PEVs must be aggregated to have a meaningful impact on the area. The aggregator's EMS must engage with each PEV that is participating in the service and gather information on the time each vehicle plans to depart and the current vehicle state information. It must process the information from all of the vehicles and decide how to allocate the charging and discharging power requests to all of the participating vehicles. This is not a trivial problem to manage the fleet to meet aggregated power demanded by the system operator and at the same time satisfy individual constraints of each vehicle. These algorithms will most likely be highly proprietary and will be very sophisticated

While the balancing authority seeks to maintain the energy balance across the entire balancing area, there could be local power quality or congestion problems that a distribution utility must resolve. The distribution utility will use tapped transformers to set the voltage at the substation end of a distribution feeder. A Distribution Management System (DMS) or a Substation Control and Data Acquisition (SCADA) system adjusts the transformer taps to set the head end below the upper voltage limit and the tail end above the lower voltage limit. If there are no photovoltaic arrays, small wind turbines, or generators (DER) along the feeder, the voltage would decrease from the substation to the end. When DER is added to the feeder this complicates the process of managing voltage along the feeder. Electric motor loads on the feeder are inductive loads and capacitors are often placed along the feeder to compensate. Some are fixed and others can be switched by the DMS to compensate for variation in the reactive loads. This is called voltage support and is part of maintaining power quality. There are also phase to phase imbalances to consider. Some DER and some loads may be able to be adjusted by the DMS to alleviate congestion and avoid overloads on distribution equipment. DMS and SCADA can be thought of as an EMS. For the distribution feeder, the PEVs must be on the feeder to be useful and for some applications the specific location and phase to which the PEV is attached is important.

Power and energy management by a home EMS can benefit the premises. A utility may establish energy prices that are higher during peak periods to incentivize customers to consume energy at off-peak periods. A residential customer could use an Energy Management System (EMS) to manage the number of loads active during peak periods. Commercial businesses often have two meters – one to measure energy use and another to measure the peak average power used during any 15 minute interval during a given month. There is real value in avoiding a spurious 15 minute peak that could be easily shifted by an EMS. The behind the meter applications are more focused, although there can sometimes be synergy between what a PEV can do behind the meter, on a feeder, and in the control area. For example, a PEV that cuts back on charging during a peak to manage behind the meter prices is helping reduce feeder congestion and reduce energy demand in the balancing area. Sometime these could be in conflict. For example, a PEV in a parking garage that increases its rate of charging in response to a frequency regulation command from an aggregator could potentially cause a peak monthly demand problem for the facility and cause congestion on a feeder.

4.5.2 Use Cases and Power Transfer Capability

SAE J2847/1 defines messages for five “utility” use cases – they are labeled U1 to U5 for “utility” not for “use” Case. This document defines two new utility use cases: U6 and U7, described in Appendix C and D, respectively. The use of the word “utility” doesn't restrict these use cases for use by classic electric power industry utilities. It really refers to any system beyond the PEV that wants to influence or manage the charging or discharging of a PEV connected to the power grid. There are many possible applications and scenarios for how a PEV that is capable of reverse flow could be used to support the grid. The seven utility use cases are listed in Table 4. This table shows the power transfer capability (PTC) of the inverter supported by each use case. The inverter could either be on-board the PEV or external in the EVSE.

U1 to U5 are only based on charging the vehicle using an on-board or external charger. Even if the PEV or EVSE has a four quadrant converter, these use cases only deal with charging. U5 is the only one of the charging use cases that allows the limit to be changed. For many V2G applications the charger must be capable of operating to a commanded upper limit. If the charger is operating to a commanded power limit, it cannot exceed the limit but it may fall below the limit as needed for charging. In the absence of a competing application or vehicle battery management system constraint, the PEV charger would normally be expected to follow the limit.

U6 allows for bidirectional active power flow. Reverse power flow must always be to a setpoint. Unlike a solar PV system, which is designed to provide power and can be limited, the optimal power output of a vehicle is zero so a limit is meaningless. Some V2G applications will require the charger to consume or source a specific power and it is expected to do this unless notification is provided to the EMS that it cannot. U6 provides for firm commands for both forward and reverse power flow. The vehicle must protect its battery and not compromise operator or facility safety and this must always take precedence over power consumption or delivery, but the key difference between a limiting operation and a commanded operation is the need for notification of non-performance. When a firm forward target power level is not required by the application, U6 could allow the EMS to command charging to a limit and not to a setpoint.

U7 allows for four quadrant power conversions. The minimum capability for U7 is the ability for the converter to control power factor under command. This is accomplished by sifting the phase angle of the current sourced by the inverter relative to the voltage waveform of the grid. Advanced inverters are being developed for solar PV systems and grid storage systems that are capable of automatically changing power levels or power factor in response to changes in a measured parameter such as voltage or frequency. Some V2G applications may require the automatic functions and others may only require capability to change power factor by command. It is not clear how many PEVs or EVSEs will implement the advanced functions.

TABLE 4 - UTILITY USE CASES

Use Case		PEV-EVSE Power Transfer Capability					
Code	Name	Charger Limit		Commanded Power Setpoint			Automatic Functions
		Fixed	Variable	Forward	Reverse	Power Factor	
U1	Time-of-Use	X					
U2	Direct Load Control	X					
U3	Real-Time Pricing	X					
U4	Critical Peak Pricing	X					
U5	Optimized Energy Transfer		X				
U6	Basic DER		X	X	X		
U7	Advanced DER		X	X	X	X	X

4.5.3 Operational Bandwidth

Operational Bandwidth (OBW) is defined by the ability to communicate and act on specific messages, the maximum rate of the message traffic, and the response time for actually achieving a target power flow. This is illustrated in Figure 21.

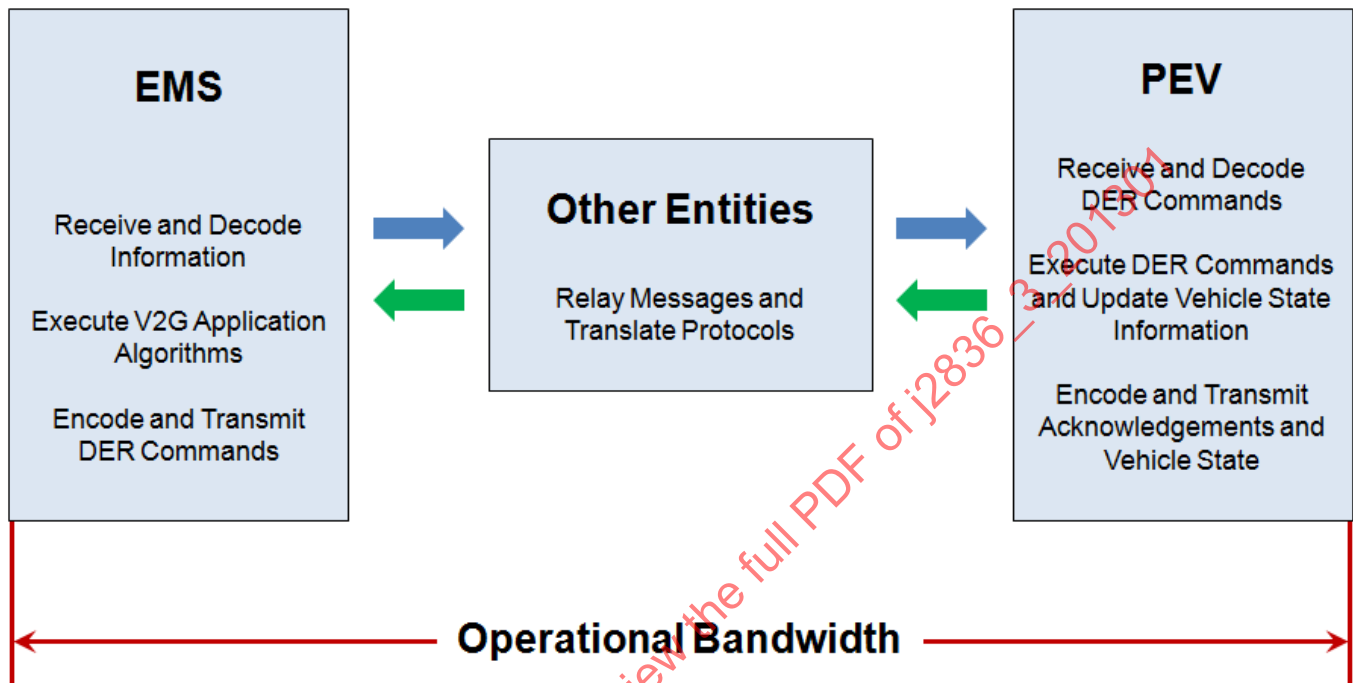


FIGURE 21 - ELEMENTS THAT DEFINE OPERATIONAL BANDWIDTH

Four tiers of Operational Bandwidth are defined: Hours, Minutes, Seconds, and Cycles. Operational Bandwidth applies to the end-to-end system. The PEV, EVSE, EMS, and any other upstream systems must all have the appropriate software and communication capability to accomplish the change in power transfer at appropriate level. The slowest performing element of the system defines the Operational Capability of the system. Table 5 provides a summary of each Operational Bandwidth.

TABLE 5 - EXAMPLES OF OPERATIONAL BANDWIDTH

Characteristic	Operational Bandwidth (OBW)			
	Hours	Minutes	Seconds	Cycles
Fastest Response	15 Minutes	1 Minute	1 Second	1 Cycle (16 ms)
Application Example	Time of Use	Load Following	Frequency Regulation	Voltage Support
Communication	Advanced Metering Infrastructure	Real-Time Dispatch	Automatic Generation Control	Autonomous Functions
Typical Update Rate	15 Minutes	5 Minutes	3 Seconds	Cycles

Hours defines an Operational Bandwidth for messages and system responses needing no more frequent update than every 15 minutes. Many of the most basic interactions between the PEV and the grid can be performed in advance of or at the start of a single charging session. For example, a delayed start time for charging can be established for a session. The utility Advanced Metering Infrastructure (AMI) communication operates at a low bandwidth of approximate 15 minute updates. The AMI system could be used by a distribution utility to increase or decrease a power limit during a charging session to help manage the total load on a specific residential transformer. This provides additional control capability beyond relying on Time of Use rate schedules.

Minutes defines an Operational Bandwidth for commands at intervals as short as every minute with an expectation of "immediate" response. Some V2G applications will require the messages to be received and acted on at intervals of one to five minutes. Commercial buildings often have two meters – one to measure energy (kWh) and another to measure the peak 15-minute average power demand (kW) that occurs at any time during a month. It may be essential for a commercial parking garage to be able to tightly manage start up times and adjust charging rates to level the rolling 15 minute average peaks for the facility. This could require communication between a facility energy management system and all of the charging PEVs every minute or two to adjust power flow. Real time energy market systems update generation and variable load schedules on a five minute interval or less. If a PEV is to participate in demand dispatch or load following (with reverse flow), the commands to change power flow could be at intervals of five minutes or less. The PEV would be expected to "immediately" make the power change when the message is received.

Seconds defines an Operational Bandwidth for commands as short as every second with an expectation of "immediate" response. Generators, variable loads, and energy storage systems that participate in the ancillary services market for frequency regulation receive Automatic Generation Control (AGC) signals every several seconds. The AGC rate varies by system operator, but is in the order of three to six seconds. The participating system is expected to immediately start to respond to the AGC command when received. For demonstrations of V2G conducted by PJM Interconnect, the AGC commands were sent every three seconds to a computer at the University of Delaware, which then sent commands to each of three PEVs. The university computer acts as the aggregator and apportions a share of the total command to each of the PEVs based on PEV state of charge, time charge is needed, and other requirements. This is for both forward and reverse flow.

Cycles defines an Operational Bandwidth for system response to grid power needs in as short an interval as one cycle. One cycle of 60 Hz power has a period of 16.7 milliseconds. The Cycles capability does not require a command and response at this rate. An energy storage system that is capable of producing reactive power can provide voltage support for the grid. One method to provide this capability is to establish a schedule for reactive power versus grid voltage. The power conversion electronics measures the grid voltage and adjusts the phasing of its current flow with the grid voltage to provide the appropriate reactive power. This autonomous operation can be done in cycles. Devices such as a distributed static compensator operate this way today. The power schedules to be used for this mode can be sent to the power electronics anytime before a session starts. The voltage support mode can be initiated and even stored schedules can be switched as frequently as every several seconds by command from an EMS. The Operational Bandwidth is still Cycles because the system is operating in real time. Reactive power does not always need to be provided autonomously. There may be other modes where it could follow a command and response protocol using a Seconds or Minutes Operational Bandwidth.

These four levels are indicative of the types of end-to-end performance that is required to perform certain V2G applications by the EMS. The EMS may not require the same level of performance from all of the devices on the network to meet its objectives. For example, a frequency response aggregator will receive AGC commands every few seconds from the system operator, but it may not need to engage with every PEV in its aggregation during every interval. It may only need to command power level changes for a small subset of the vehicles to make the needed adjustment for the system. The vehicle response time to received messages will not generally be the limiting factor.

4.5.4 Examples of V2G Applications

Table 6 lists several examples of V2G applications along with several defining and enabling characteristics for each. This is not intended to be an exhaustive list of possibilities for V2G interaction and other terminology may be used by others for these sample applications. The primary objective for this document is highlight potential applications for bidirectional and four quadrant power flow and the use of the PEV as a Distributed Energy Resource. Some of the applications will be discussed in more detail later sections.

TABLE 6 - EXAMPLES OF V2G APPLICATIONS

Domain	V2G Application	Operational Bandwidth	Use Cases
System	Encourage Off-Peak Charging	Hours	U1/3/4
System	Demand Response Events	Hours	U2
System	Real Time Energy (Load Following)	Minutes	U6
System	Frequency Regulation	Seconds	U6
System	Voltage Support Service	Seconds	U7
Distribution	Transformer Load Management	Hours	U5/U6
Distribution	Feeder Load Management	Minutes	U6
Distribution	Renewable Energy Integration	Seconds	U6/U7
Distribution	Feeder Voltage Support	Cycles	U7
Customer	Energy Cost Management	Hours	U5/U6
Customer	Demand Charge Management	Minutes	U6
Customer	Facility Power Quality	Cycles	U6/U7

The first column shows the domain of the energy management system (EMS) that controls the PEV for the specific V2G application. The PEV can serve the bulk system, the distribution utility, or the customer facility. The second column provides the name of the V2G application.

The third column shows the typical operational bandwidth (OBW) required for performing the end-to-end application. It is shown as hours, minutes, seconds, and cycles. This is the typical bandwidth required to implement an application. For frequency regulation the automatic generation command (AGC) signal is sent out every three to six seconds, depending on the system operator. It may be that an aggregator can engage in this service for a system operator but use a lower update rate for each of the vehicles in the aggregation. It may be that some of the applications that could use autonomous schedules and operate in cycles may be able to be explicitly commanded in seconds.

The fourth column lists the SAE use case(s) that supports the V2G application. SAE J2836/1TM defines U1 through U5 and relate only to the vehicle as a charging load. This document defines requirements for use cases U6 and U7, in Appendix C and D, respectively. U6 is used for V2G applications that require bidirectional active power flow. However, U6 can also be used for V2G demand dispatch applications that only require dynamic control of charging power. U7 provides the capability for an EMS to actively control reactive power. U7 also provides for autonomous DER functions.

Many of the V2G applications listed in the table can be performed without reverse flow and communication requirements for U1 through U5 are fully defined in SAE J2847/1. However, U5 and U6 overlap. U5 provides for the direct management of the rate of charging and nothing in the SAE J2836/1TM use case description constrains the power available updates to low operational bandwidth (hours). In theory, U5 could be used for frequency regulation by accepting commands from an aggregator every few seconds to adjust charging rate. However, the implementation of U5 in the Smart Energy Profile may limit its use to applications where all of the changes to the rate of charging must be scheduled at the start of a session. However, U6 is specifically required to be capable of making adjustments to the rate of charging or discharging every several seconds. In these examples, U6 is used for demand dispatch applications for which commands to change the rate of charging are expected regularly during the charging session and U5 is for applications where all of the changes to the rate of charging can be prescheduled at the start of a session.

4.5.5 Balancing Area (Bulk Power) Applications

4.5.5.1 Encouraging Off-Peak Charging and Demand Response Events

A primary concern that utilities have with PEVs is the potential adverse impact that they could have on the bulk power grid if they charged during peak load periods. The power grid has significant excess generation capacity at night and utilities want to encourage off peak charging. Most of the early consideration was to provide incentives for PEV owners to charge at night. Use Cases were developed and documented in SAE J2836/1TM to provide the capability for a utility to communicate with the EVSE and PEV for this purpose. Four utility use cases are described in SAE J2836/1TM and associated messages are described in SAE J2847/1 to provide these capabilities: Time of Use (U1), Direct Load Control (U2), Real Time Pricing (U3), and Critical Peak Pricing (U4) provide these capabilities. While the utility does not actually command the start of charging, the intention of the use case is to establish a favorable time for the start of charging, or the interruption of charging for a scheduled demand response event. The use of price schedules to guide start times for charging could result in a large jump in demand if large numbers of vehicles start at the exact same time. This can be mitigated if a randomization time window is also used by the PEV as part of this function.

4.5.5.2 Real Time Energy (Load Following and Demand Dispatch)

As discussed earlier, the grid system operator updates generation (or load) schedules every five minutes to keep the system in balance. This is sometimes called load following for generators or demand dispatch for variable loads. This is usually considered to be part of the real time energy market for the bulk grid, but in some areas it may be considered to be an ancillary service. These assets are dispatched as step changes for each five minute interval. This is not frequency regulation (which will be discussed later). Unlike a generator (which can only adjust output up or down for load following) or a pure load (which may be capable of increasing or decreasing consumption for demand dispatch), a storage device can swing from production to consumption and seamlessly engage in both load following and demand dispatch.

An individual PEV may not have enough power and energy capacity to directly participate in this market, but many PEVs could be controlled by an aggregator to play in this market. While the availability of PEVs with full bidirectional capability enhances the capacity of the aggregator, it is possible to modulate the demand of vehicles that are only charging to engage in demand dispatch. The aggregator needs to establish a base level of charging for all of the PEVs. Each PEV can be at a different base level. The aggregator increases or decreases the collective rate of charging as commitment to the grid system operator change between five-minute real time intervals.

4.5.5.3 Frequency Regulation

The most talked about application for V2G is the concept of an aggregator signing up thousands of PEVs to perform frequency regulation for the bulk grid. The aggregator bids this ancillary service to the ISO/RTO as a block of capacity. This was typically a minimum capacity bid of one or two megawatts, but the minimum bid level is now being reduced by many system operators. The aggregator receives automatic generation control (AGC) signals from the system operator every few seconds and in turn adjusts the rate of charging or discharging for each PEV in this large fleet to perform the service. The PEV owners are compensated for participating in the program.

Frequency regulation can also be performed using demand dispatch for a fleet of vehicles that are only charging. This is sometimes referred to as "V1G" although other terms have been used. It is less risky for a PEV than full V2G frequency regulation because it does not cause any additional cycling of the battery and the vehicle is always moving towards achieving the desired state of charge at departure. It is possible for an aggregator to have a mixed fleet of vehicles with some that can only participate in demand dispatch and others than can offer full bidirectional power capability.

4.5.5.4 Voltage Support Service

In order to maintain transmission voltages within acceptable limits, facilities under the control of the system operator are controlled to produce (or absorb) Reactive Power. The amount of Voltage Support Service (VSS) that must be supplied is determined based on the Reactive Power support necessary to maintain transmission voltages within limits that are generally accepted in the region. VSS is normally provided by large generators and special VAR compensation devices at the transmission level. It could be possible for an aggregator to provide VSS by directly managing the power factor of a large aggregated fleet of PEVs.

4.5.6 Distribution System Applications

4.5.6.1 Transformer Load Management

Most of the early utility concern was about managing the aggregate impact of charging PEVs across a control area - the impact on the bulk power system. Today there is increasing interest in managing power flow at the level of a single residential transformer and the distribution feeder. During the early years the PEVs will not have any substantive impact on the grid, even at peak times, but they can create local problems.

If four families on a single residential transformer all have electric vehicles and start charging at exactly midnight, this could create an overload problem for the transformer. The utility could install a larger transformer to resolve the problem. However, another solution would be to stagger the start times. Instead of starting to charge all four PEVs at midnight, it could make more sense to start one at 8:00 p.m. and start another every two hours. The utility could still offer a preferred rate for the 8:00 p.m. start.

Another desired capability is the ability to control the rate of charging. In a Time of Use program, the PEV would start charging at the power rating of its charger. This will result in the shortest charging time. A PEV with a 6 kW charger that needs 5 kWh of energy could complete charging in one hour. But if a utility knew that the PEV wasn't leaving until 6:00 a.m., it could authorize a charging rate of 2 kW and the PEV would complete charging by 3:00 a.m. if it started at midnight. This is another option in addition to staggering start time.

The Optimized Energy Transfer (U5) use case in SAE J2836/1TM was designed to provide this capability. A distribution utility EMS can establish a maximum power level for charging and it can be changed during a charging session. It also allows direct control of the start of charging. Update rates of 15 minutes or more should not be a problem for this type of operation and U5 is designed to provide this capability.

If PEVs with reverse flow capability are present, U6 can be used to provide reverse flow to offset charging loads of other PEVs served by the transformer. Instead of starting a PEV early to avoid a peak at the start of a time of use window, one vehicle could offset the power requirements of another vehicle to help spread out the charging loads.

4.5.6.2 Feeder Load Management

This is similar to participation in the real time energy market. The difference is the source of the command. A distribution utility command center may want to manage congestion at a substation or along a feeder by controlling the load or sourcing power on a specific feeder. Some of this could be done by only managing the aggregate charging load on a feeder but this can be enhanced with bidirectional flow.

4.5.6.3 Renewable Energy Integration

Renewable energy sources may experience short term power fluctuations. Solar PV arrays are subject to power fluctuations as clouds move past. Wind turbine output can vary in the short term because of wind gusts or sags. This can create problems on the distribution feeder. The larger balancing area may not see any problem of load and generation mismatch because of an averaging effect across the area. But a feeder may experience more fluctuation which can cause voltage sags or swells and other power quality issues along the feeder. PEVs along the specific feeder can serve as a variable loads to absorb excess power or provide energy to compensate for a short drop. PEVs near the tail end could be sourcing power and those at the head end could be absorbing power. The distribution of PEVs along the feeder can be a significant benefit. While this section discusses renewable sources, similar disturbances can come from load switching. Lower frequency disturbances can be thought of as power limiting or offset where the corrections can be done over several minutes. Short term disturbances could occur over seconds and require faster response. Frequency does not shift locally – it is the same across the area – but voltage can vary dynamically along the length of the feeder.

4.5.6.4 Feeder Voltage Support

In some cases the voltage along the feeder can be supported by adjusting real loads or providing real power under the command of a distribution utility control system. This has already been discussed. In other cases reactive power (VAR) must be provided. A four quadrant converter can provide this capability. In some cases the need for VARs is slow enough to allow it to be dispatched. Some disturbances require adjustment in cycles. This is too fast to command from a substation, but inverters can be designed to measure the grid voltage and respond with VARs according to a preprogrammed Volt/VAR schedule. Different schedules can be used for different feeder situations.

4.5.7 Customer Applications

4.5.7.1 Energy Cost Management

One purpose of a premises EMS is to manage the total energy use during the day to minimize energy costs. The EMS measures the total power demand of the premises and adjusts the charging power of the PEV and other controllable loads to optimize energy costs. A high operational bandwidth is generally not required for managing energy usage unless there is a high energy cost penalty for short peaks in which case the EMS should operate more like a peak limiter.

A home EMS could call on a PEV to provide reverse flow to offset another residential load in order to maintain the entire premises load below a target limit. The net power flow into the home may still be positive – although it is possible that a utility could allow and compensate a homeowner for reverse flow from the home. It is not appropriate to refer to this as capability as Vehicle to Home (V2H), as is sometimes done, because V2H requires the PEV to be isolated from the grid. V2H is for emergency backup or for homes that are not connected to the grid. V2G is the only mode that allows a PEV to return power to a home, business, or charge station that is actively connected to the grid.

4.5.7.2 Demand Charge Management

Most Commercial facilities, and some residential units, have both energy and demand charges. The demand program varies widely by utility. It can be based on either 15 minute or 30 minute average peak power. It can be based on the single highest peak at any time during the month. In some cases there may be differentiation for peaks that occur during high demand periods versus low demand. In any case, there is a price to be paid for widely varying loads. The price per kW can be expensive. For some utilities it can be \$15 to \$20 per peak kW. If a facility never exceeded 50 kW during the entire month, but for one 15 minute interval the power peaked at 100 kW, the extra demand cost would be \$750 for a \$15 per kW rate. At an energy price of \$0.10 per kWh, the extra energy used during that peak only costs \$5.00.

A large parking facility could face significant demand charges if PEVs all arrived in the morning and immediately started to charge. The facility EMS can actively manage both the starting time and power limits for the charging sessions of each vehicle to shift. Power adjustments need to be made at intervals of between one to three minutes to control the aggregate average over the rolling 15 minute window. The power balancing can be enhanced by using some of the vehicles to provide power to the facility.

4.5.7.3 Facility Power Quality

Some facilities may have equipment that causes large power surges that do not last long enough to impact the 15 minute demand, but could cause voltage surges or sags that adversely impact other equipment. A facility EMS may be able to detect these and command changes to vehicle charging or reverse flow in seconds and help mitigate these. Some may happen too fast for an EMS to command correction, but automatic schedules could be used and VAR compensation may be needed to correct facility power factor.

SAENORM.COM : Click to view the full PDF of J2836-3-201301

4.6 Considerations for Utility Use Case U6 - Basic Distributed Energy Resource

This use case is based on the IEC 61850 Function INV4 for charging and discharging a storage DER device. There are two major aspects of any use case. One is the definition of the information that must be communicated with the PEV or EVSE or both. The actual use case for communication is described in Appendix C and SAE J2847/3 will define the implementation of the communication. The other aspect of a use case is the definition of the functionality that must be embedded in the PEV or EVSE that will allow the inverter to perform the functions based on the communications. This section describes the functionality required to create the information that is required to be exchanged with an EMS and the expected behavior of the PEV and EVSE in response to messages from an EMS.

4.6.1 Maximum Forward Power and Maximum Reverse Power

A battery has a Nameplate Energy Capacity, measured in Watt-hours (Wh), but not all of this energy can be used by the vehicle. It may not be desirable or even possible to discharge every cell in the battery completely without causing damage. Similarly it may not be desirable or possible to fully charge every cell either. The Usable Battery Capacity is the amount of energy that can actually be used by the vehicle. The nameplate capacity is what is generally published for a vehicle. The usable capacity can vary from the nameplate capacity based on the equalization of the cells during charging, the age of the battery, the temperature, and many other factors. It is also possible that the vehicle manufacturer may intentionally cut back on topping the battery off or depleting it to zero as part of managing the battery life. Only the vehicle manufacturer can know the actual usable capacity of a battery, and maybe not even completely. Figure 22 shows battery and power flow characteristics.

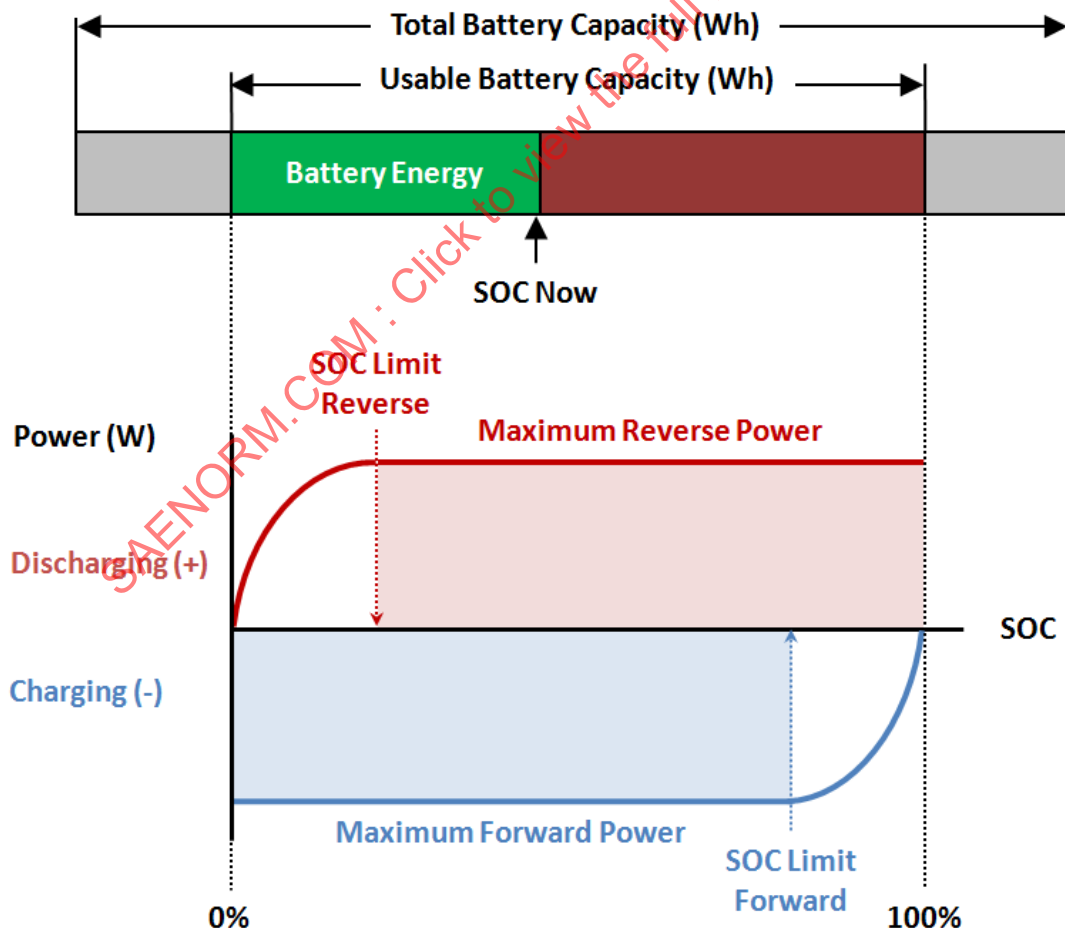


FIGURE 22 - POWER AND BATTERY CHARACTERISTICS

State of Charge (SOC) is the fraction of battery capacity that is available and ranges from zero to 100 percent. An SOC of zero percent means that there is no energy left and an SOC of 100 percent means that the battery is full. The figure shows the SOC as being measured across the usable battery capacity, but it could be defined relative to either. For the driver's SOC display and for use in range calculations it would be most useful to know the usable capacity and the SOC relative to the usable capacity. Who wants the gauge to read 90% when it is full and 15% when it is empty? For a BEV, zero SOC could be at the bottom of the usable range with no reserve. For a PHEV, it might be desired to show zero SOC at the bottom of the charge depleting range. The vehicle battery management system might use the full range of SOC across the nameplate capacity. State of Charge is not that useful outside the vehicle battery management system except for indicative display purposes.

A battery charger normally starts in a constant current (constant power) mode and as the battery gets close to being fully charged it changes to a constant voltage mode. In the constant voltage mode the power drops off as the battery state of charge approaches 100%. Regulating voltage helps prevent overcharging cells that may operate at a higher voltage than others in the battery system.

During the constant current mode, a charger would normally provide current at the lower of the rated value of the complete charging system or the current limit established by the control pilot. The charging system limit is based on the charger power electronics as well as any DC current limits established by the battery management system. The maximum AC charging current and the line voltage of the charger defines the Maximum Forward (charging) Power. The blue rectangle in the figure defines the zone for unrestricted forward power flow.

The state of charge used to trigger the mode change (SOC Limit Forward) is not something that would be communicated outside of the charging system, but it can be used by the PEV to calculate a more useful parameter for external use by an EMS - the Duration at Maximum Forward Power. This will be described in a later section.

The behavior for reverse (discharging) power flow is similar to charging. In this case the maximum discharge current would be the lower of that established by the control pilot or the rating of the inverter system. As with charging the system power constraint will be based on the inverter electronics and the maximum DC current permitted by the battery management system.

The lower limit for constant power discharge may be set for battery protection and life considerations or to protect a specific energy reserve value. If it is a specified reserve value the PEV may share it, but just as with charging, the availability of discharge can be better defined for an EMS by the PEV providing the Duration at Maximum Reverse Power. The red rectangle in the figure defines the zone for unrestricted reverse power flow.

The maximum forward and reverse power limits should be based on the continuous power capability of the battery system across a wide range of battery state of charge. A PEV battery system is capable of power surges during acceleration, regenerative braking, or portions of the fast charging profile, but these should not be part of the DER rating. See section 4.3.6 for more discussion.

4.6.2 EPRI and IEC Direct Charge/Discharge Storage Function

U6 is based on the "Battery Storage: Direct Charge/Discharge Management Function" defined in the EPRI Common Functions document and on "Function INV4: request active power (charge and discharge storage)" defined in IEC 61850-90-7. This section provides a brief overview of the EPRI and IEC function for direct management of the charging and discharging of a storage DER device

This function is intended to provide a simple mechanism through which the charging and discharging of battery storage systems may be directly managed. This function assumes that the intelligence which determines charging or discharging resides outside the storage system and that the storage system (to the extent possible) follows the requests it is given. This function allows an EMS to periodically issue commands to a storage DER to request that it charge or discharge at a specific active power level.

The utility/ESP or the customer EMS takes the following actions for each command:

1. Request a pre-defined set of status information from the DER device, including the status values and the timestamp of the status. This step is optional because the EMS may have already attained sufficient information about the DER for its purposes based on previous enrollment activities. For some loosely coupled EMS-DER applications the status request may only need to be performed at the start of a session. More complex EMS algorithms may require current status information in advance of each command.
2. Issue command to the DER device to request a change to the active power (charge/discharge) setpoint for the storage system: Each command has four elements: an Active Power Setpoint Value, a Time Window, a Ramp Time, and a Reversion Timeout. These parameters are shown in Figure 23.

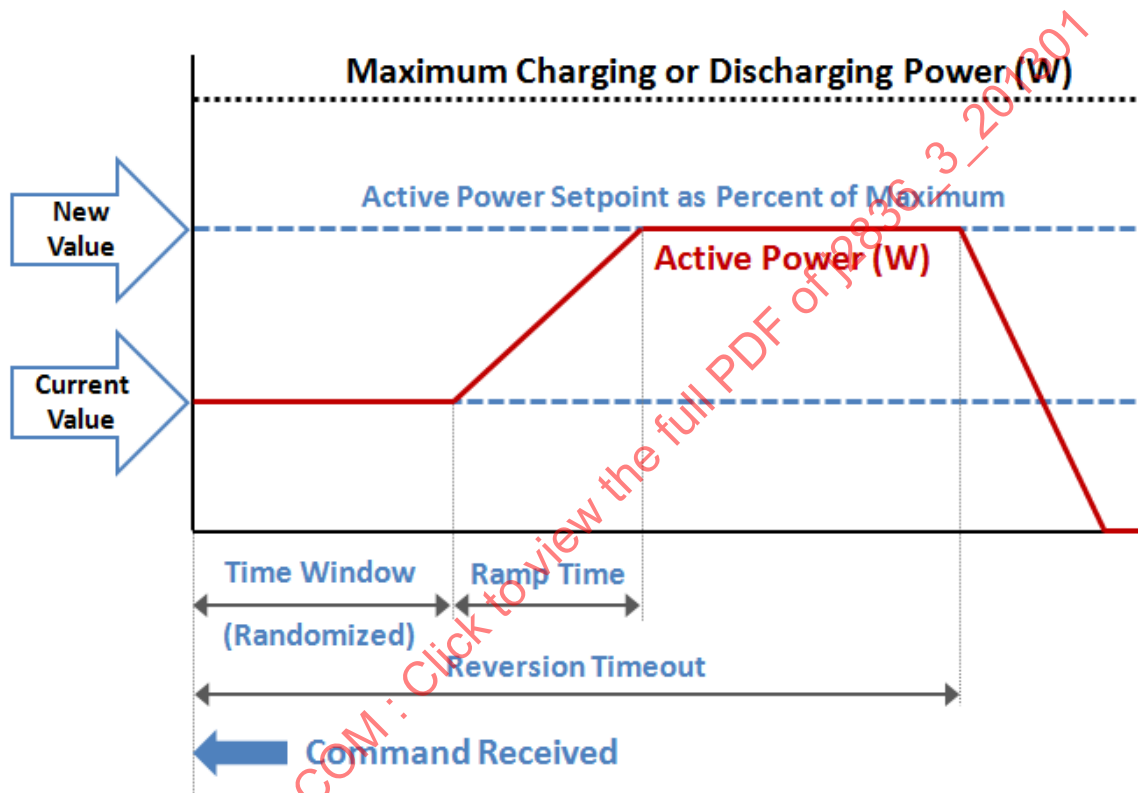


FIGURE 23 - BASIC ELEMENTS OF THE INV4 POWER SETTING COMMAND

The **Active Power Setpoint Value** is provided as a percentage of the maximum reverse (discharging) power or maximum forward (charging) power of the storage unit. This setting is provided as a percentage between positive 100% (discharging) and negative 100% (charging). It is recognized that the maximum charging rate and the maximum discharging rate may differ, such that a setting of 50% charging might result in a different power magnitude than a setting of 50% discharging. It is understood that this is a “request” and that the actual ability of the end device to charge or discharge will be affected by many factors.

Time Window is a time over which the DER randomly delays prior to starting to put a new charge or discharge rate setting into effect. For example, if the time window is set to 30 seconds, then the DER would delay a random time between 0 and 30 seconds prior to beginning to make the new setting effective. If the time window is set to zero, the setpoint change starts immediately.

Ramp Time is the time for the DER to move from the current setpoint to the new setpoint. For example, if a DER is operating at an active power (discharging) setpoint of 50% and a command is received to increase the setpoint to 80% with a “Ramp Time” of 20 seconds, the setpoint will ramp from 50% to 80% over 20 seconds – at a rate of 1.5% per second. Ramp Time is optional and if it is not included a previously established default ramp rate can be used. The rate of change of the actual active power output could lag the change in the setpoint based on the inverter system dynamics.

Reversion Timeout is a time after which a DER will return to its default charge or discharge setting (typically an idle state). This ensures that a missed or lost command does not impact normal operations beyond the timeout period.

This parameter is optional and if not included a default timeout period for this function will be used.

3. Receive response to the command from the DER: Successful (plus actual active power setpoint) or rejected (plus reason: equipment not available, message error, overridden, security error). This could be combined with the status request for applications with high update rates.

An example of the command sequencing is shown in Figure 24. This shows an application where the EMS issues commands to the DER at a regular update interval. The EMS requests status from the DER (shown by the green arrow) and uses this as part of developing the setpoint command for the DER device (which is shown by the blue arrow). The grey bar indicates the reversion timeout included with the command which must be longer than the command interval. Each command also includes the randomization time window (shown as a blue bar) and the ramp time (shown as a red bar). The actual random time delay is the product of a uniform random number and the value of the time window. The actual start of the ramp is indicated by the small red arrow coming out of the randomization bar. The example shows that the setpoint begins to ramp at this time and completes ramping based on the specified ramp time. The response to the command is shown by the upward red arrow (from the DER to the EMS). If this is to reflect a successfully achieved setpoint and possibly actual active power value, it should not be requested or issued until after specified time window and ramp time.

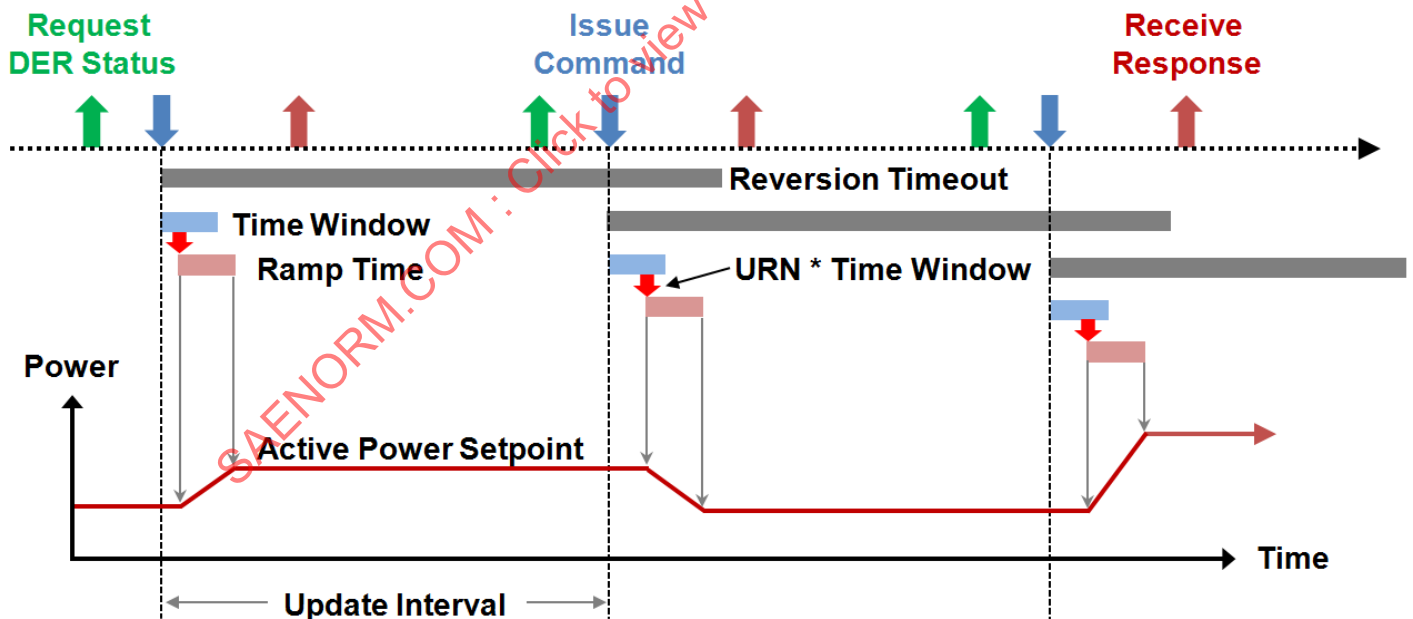


FIGURE 24 - EXAMPLE OF INV4 COMMAND SEQUENCING

While the INV4 function can be executed by issuing commands one at a time in sequence with the expectation that the DER executes them immediately, the IEC model also allows for functions to be scheduled. Scheduling can be thought of as a separate function. The scheduling function could allow the command to be received by the DER but scheduled to execute at a specified time and not immediately as received. The scheduling function could also allow for a sequence of commands to be provided as a schedule.

For the purpose of U6, it will be assumed that the full command will include an optional UTC time with the default response of starting immediately. If the time is provided, the randomization time window will begin at the designated start time. If a UTC start time is not provided with the command or it is a time earlier than the current time, the randomization interval would begin immediately. It is recognized that in an actual implementation in a specific communication protocol this may be done by a separate scheduling function. But the ability to schedule a power change at a specific time is an important capability.

4.6.3 Target Setpoint versus Limit Setpoint

Forward Power Flow to a target value (while it is still called charging) is not the same as charging within a specified limit.

For many applications, the utility is only concerned that a PEV maintains its charging rate below a specified limit. They don't care if the vehicle operates at the limit, below the limit, or is not even charging at all. Their concern is only that the PEV keep its power consumption below the limit. This functionality may also be called Demand Dispatch or Demand Management. The SAE J2836/1™ Optimized Energy Transfer (U5) use case defines this type of capability. Other applications will require the PEV to consume or source a specific target power level and it is expected to do this unless notification is provided to the EMS that it cannot. The vehicle must protect its battery and not compromise operator or facility safety and this must always take precedence over power consumption or delivery, but the key difference between a limit value and a target value is the need for notification of non-performance if the charging level is below the specified value.

Reverse power flow must always be to a specific target and the INV4 function provides this capability. Unlike a solar PV system, which is designed to provide power and can be limited, the natural power output of a PEV is zero. Any power output will reduce the battery state of charge and increase the risk that the battery will not have sufficient energy if the vehicle must be used unexpectedly.

The IEC provides Function INV2 for limiting the output of a generator. This function is not set up to limit the charging of a storage DER, but it could perform this function if it allowed for the limit value to be either positive (for production) or negative (for consumption). Alternatively, the INV4 function could allow for the setpoint command value to be either a target or a limit. For discharging the value must always be a target. For charging it could be either depending on the objective of the EMS application. A PEV will almost always follow the charging limit as long as it is operating in the constant current mode of its charging cycle. And it may not follow a target when the battery is in the zone where the charger must be in a constant voltage mode. The behavior of the charging system will be the same for a target value or a limit value much of the time, the primary difference being whether it is considered to be a reportable error condition if the charger is not operating at the setpoint.

When using Optimized Energy Transfer (U5), the power level authorization (i.e. Power Available) from the EMS is only an upper limit. The vehicle could and generally would charge at the limit, but it could fall below the limit and notification is not required that the charger is drawing less than the authorized power level. The INV4 function could be used to implement U5 if it is used with charging setpoint values and designates the setpoint as a limit.

4.6.4 Understanding PEV Charging Requirements

Some V2G applications will require an EMS to accept responsibility for cooperatively managing the charging session of each PEV. This will clearly be the case if an EMS at a parking facility is used to limit the facility peak monthly demand and at the same time minimize any PEV customer disappointment caused by incomplete charging. An EMS in this application would need to delay the start of charging for some vehicles, reduce the rate of charging for others, or even draw power from some vehicles that are participating as DER devices to maintain the facility demand below a limit. It may not be possible under some circumstances for an EMS to allocate power to each PEV during the day such that facility target limits are not exceeded and every vehicle is fully charged. This requires developing metrics for quantifying the cost of customer disappointment versus the cost of exceeding a facility limit. The EMS power allocation algorithms to do this effectively can be very complex. Central to any EMS algorithm is the ability to understand the charging requirements of each PEV and how it changes during the session.

Four parameters completely describe the charging requirements of a PEV: Time Charge is Needed (TCIN), Maximum Forward Power, Energy Request, and Minimum Charging Duration. These parameters are shown in Figure 25. The **Time Now** could be at the start of a session or during transfer. The figure shows the charging profile of power versus time that is required to complete the required transfer. The area under the power curve (shown in green) is the total required energy transfer.

One of the most essential parameters is the time that the PEV must complete charging. This is called the **Time Charge is Needed (TCIN)**. The PEV is the source of this information. TCIN can be directly entered using vehicle controls and displays. There may also be alternate methods to enter this time using the EVSE or even a mobile device. TCIN would normally not change during a session, but it is possible that a driver could update this using a mobile device. It's impossible for an EMS to do any intelligent power allocation if it is not known when the PEV plans to be disconnected.

As described earlier, the **Maximum Forward Power** is the lower of the rating of the PEV charging system or that defined by the EVSE control pilot. The term **Power Request** is used for this same parameter in the SAE J2836/1™ Optimized Energy Transfer (U5) use case. The term Maximum Forward Power will be used in this document rather than Power Request to maintain consistency with the term Maximum Reverse Power.

Energy Request is the total energy needed at the input to the EVSE from the electric power system. The vehicle manufacturer will decide how to compute the Energy Request. Typically this calculation must account for the actual usable capacity (UCAP) of the battery in the specific vehicle at that time (assuming that SOC is measured against UCAP). It also accounts for the efficiency of the power conversion and any parasitic loads that are time dependent and not proportional to power.

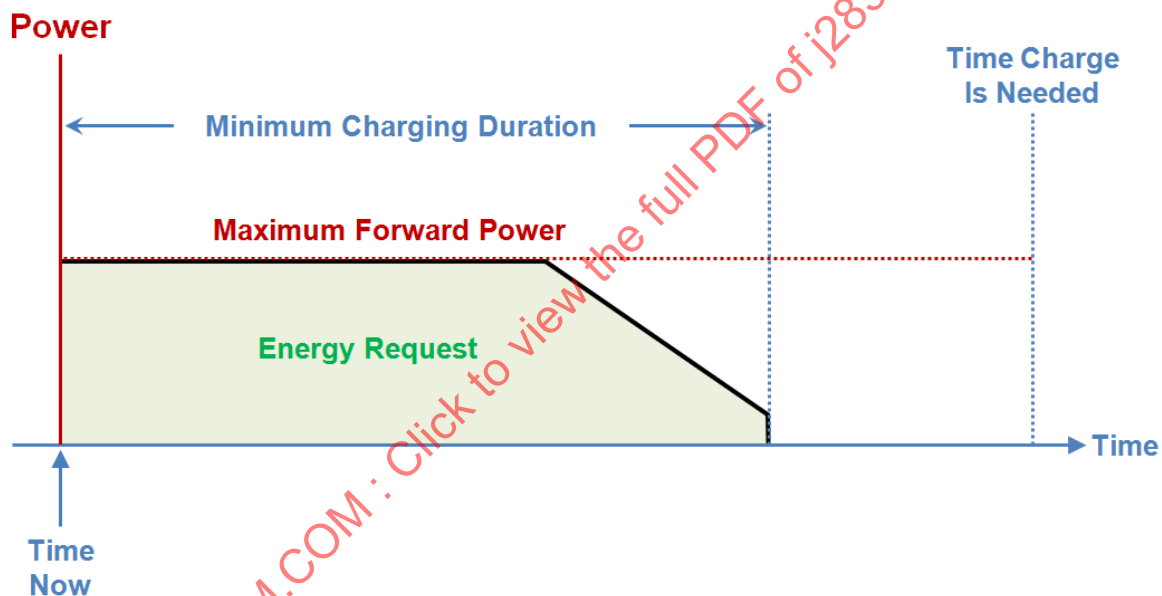


FIGURE 25 - PARAMETERS THAT DEFINE PEV CHARGING REQUIREMENTS

If it is assumed that the objective is to fully charge the battery, the equation below is an example of how Energy Request could be calculated:

$$\text{EnergyRequest} = \text{UCAP} * \frac{1.0 - \text{SOC}}{\text{Efficiency}} + \text{ParasiticLoads} * (\text{TCIN} - \text{TimeNow})$$

The availability of Energy Request from the PEV mitigates the need for an EMS to carry out this type of calculation and retrieve information about the useable battery capacity, SOC, charger efficiency, and parasitic loads from the PEV.

One of the most important parameters is the **Minimum Charging Duration**. This determines the latest time that an EMS can delay the start of charging for a PEV. Minimum Charging Duration is not simply equal to the Energy Request divided by Maximum Forward Power. That is because the charger will change modes from constant current to constant voltage for the last part of the charging cycle. This is needed to avoid overcharging cells and to protect battery life. The battery management system of the PEV is best equipped to define the profile or any buffer and calculate the Minimum Charging Duration.

It is essential that during any V2G activity that the PEV continuously update the Energy Request and the Minimum Charging Duration. The battery SOC will change during charging or discharging and the remaining energy required to complete charging and the time needed to do it will change. This is illustrated by the scenario shown in Figure 26 where a PEV is engaged in a V2G activity that requires a forward flow followed by reverse flow. The upper chart shows how the Energy Request varies during the session. It decreases during forward power flow, as expected. During reverse power flow it increases and even rises above the Energy Request value at the time of connection.

On the right side of the lower chart a charging profile is shown based on the Energy Request at Time Now. This defines the latest start time for the required energy transfer. This backloaded charging profile is extended on the upper plot as the dotted line labelled Energy Transfer Capability at Maximum Forward Power. When the Energy Request intercepts this curve, the PEV must revert to charging. At Time Now the Energy Request plot could continue along the red arrow if discharging continues or follow the green arrow if charging is started at the maximum rate. If the V2G EMS were to use this PEV for more forward power flow, as shown by the green arrow, it may be able to stay engaged in V2G longer. This is critical information for the EMS because it indicates when the PEV must disengage from V2G and engage in unrestricted charging. The EMS may take this into consideration in how it schedules power flows.

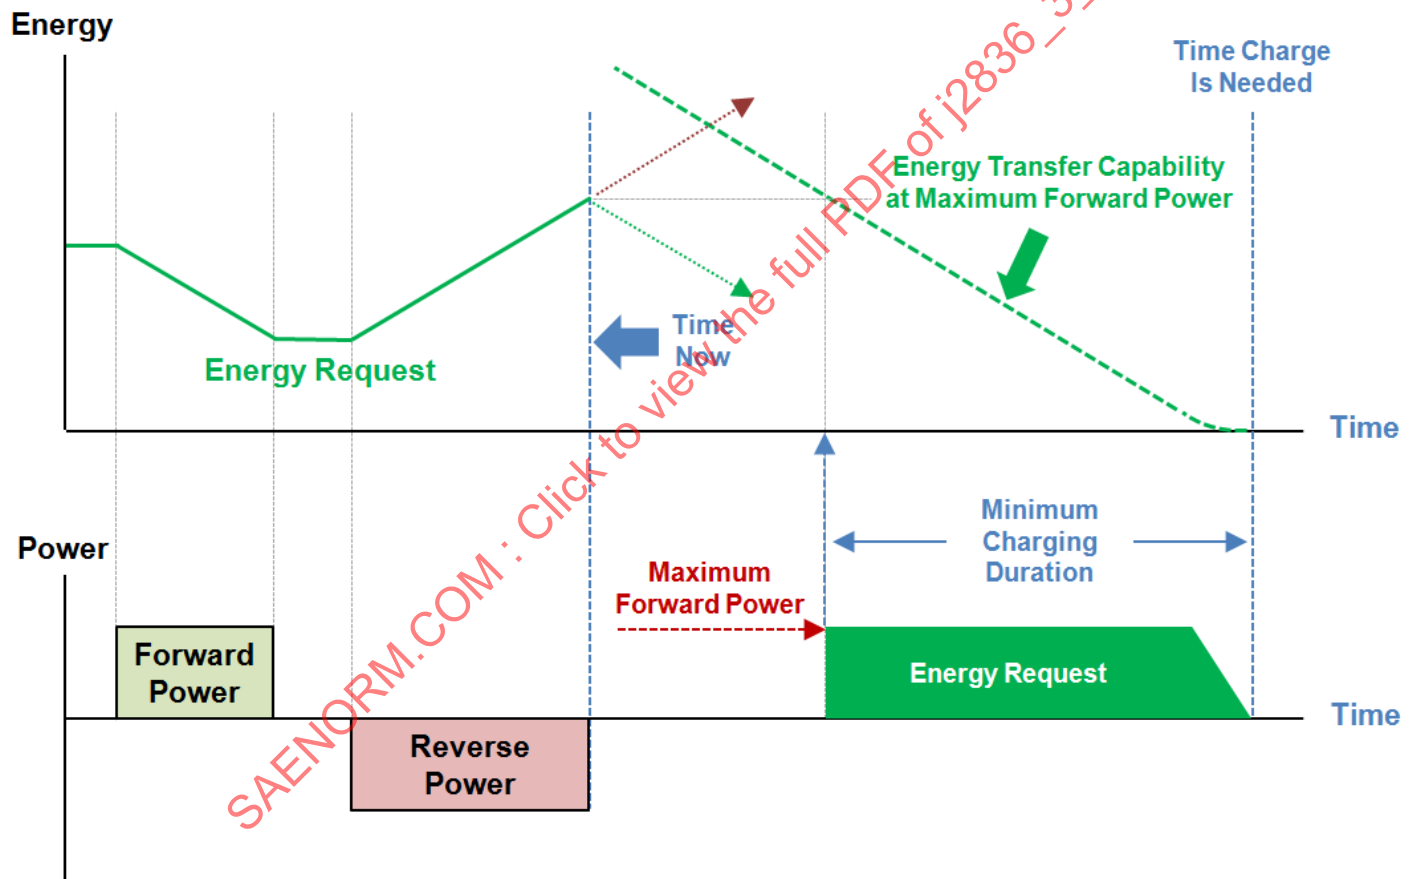


FIGURE 26 - RELATIONSHIP OF CHARGING PARAMETERS

4.6.5 Duration at Maximum Forward Power Flow

An EMS may need to know how long the PEV can provide forward power at the maximum forward power. This is called the **Duration at Maximum Forward Power**. The top chart in Figure 27 shows a normal situation where there is some slack time in the charging (forward power flow) process. This will always be less than the Minimum Charging Duration because it only considers the constant current portion of the charging profile.

The duration is based on knowing the state of charge value (SOC Limit Forward) where the charger changes modes from constant current at the Maximum Forward Power to constant voltage mode. If the SOC is below that limit the duration could be calculated as

$$\text{DurationMaximumForwardPower} = \frac{UCAP * \frac{(SOC_{LimitForward} - SOC)}{Efficiency}}{MaximumForwardPower - ParasiticLoads}$$

This is only an example of how it could be calculated and each vehicle manufacturer will determine how to calculate the value.

The lower chart shows what could happen if more energy was requested than could be delivered, the driver moved in the time charging needed to be completed, or something interrupted charging. In this case the time is established by the TCIN and not the battery physics.

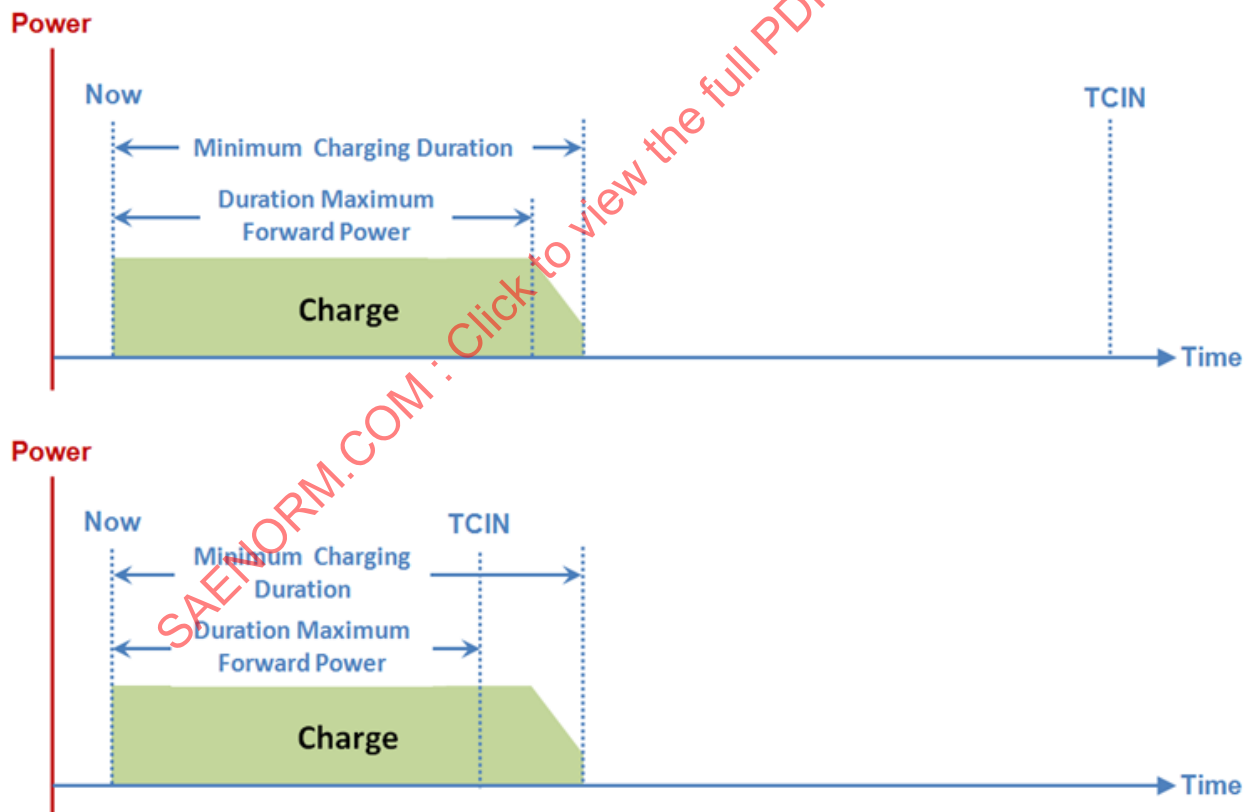


FIGURE 27 - FORWARD POWER FLOW MEASURES

4.6.6 Duration at Maximum Reverse Power Flow

The PEV also needs to compute the **Duration at Maximum Reverse Power** and update it as battery SOC changes. This is shown in Figure 28. The unrestricted reverse flow limit can be simply calculated by using the greater of the minimum SOC limit for flat maximum reverse power or an operator specified minimum reserve limit. This is not a trivial calculation but the available battery energy can be converted to delivered power using the conversion efficiency and parasitic loads. Both of these actually work against the production of power and assist in the consumption of power. If the battery can be fully discharged to the specified limit and there is time to then fully recharge by disconnect, then the limit is set by the battery SOC. The top chart shows this situation. The lower chart shows a situation where the recharging the discharge and original charging requirements set the Duration for Maximum Reverse Power. At any time, the EMS needs to know how much power is available and for how long for both charging and discharging. While it is not exact, the EMS can trade power for time.

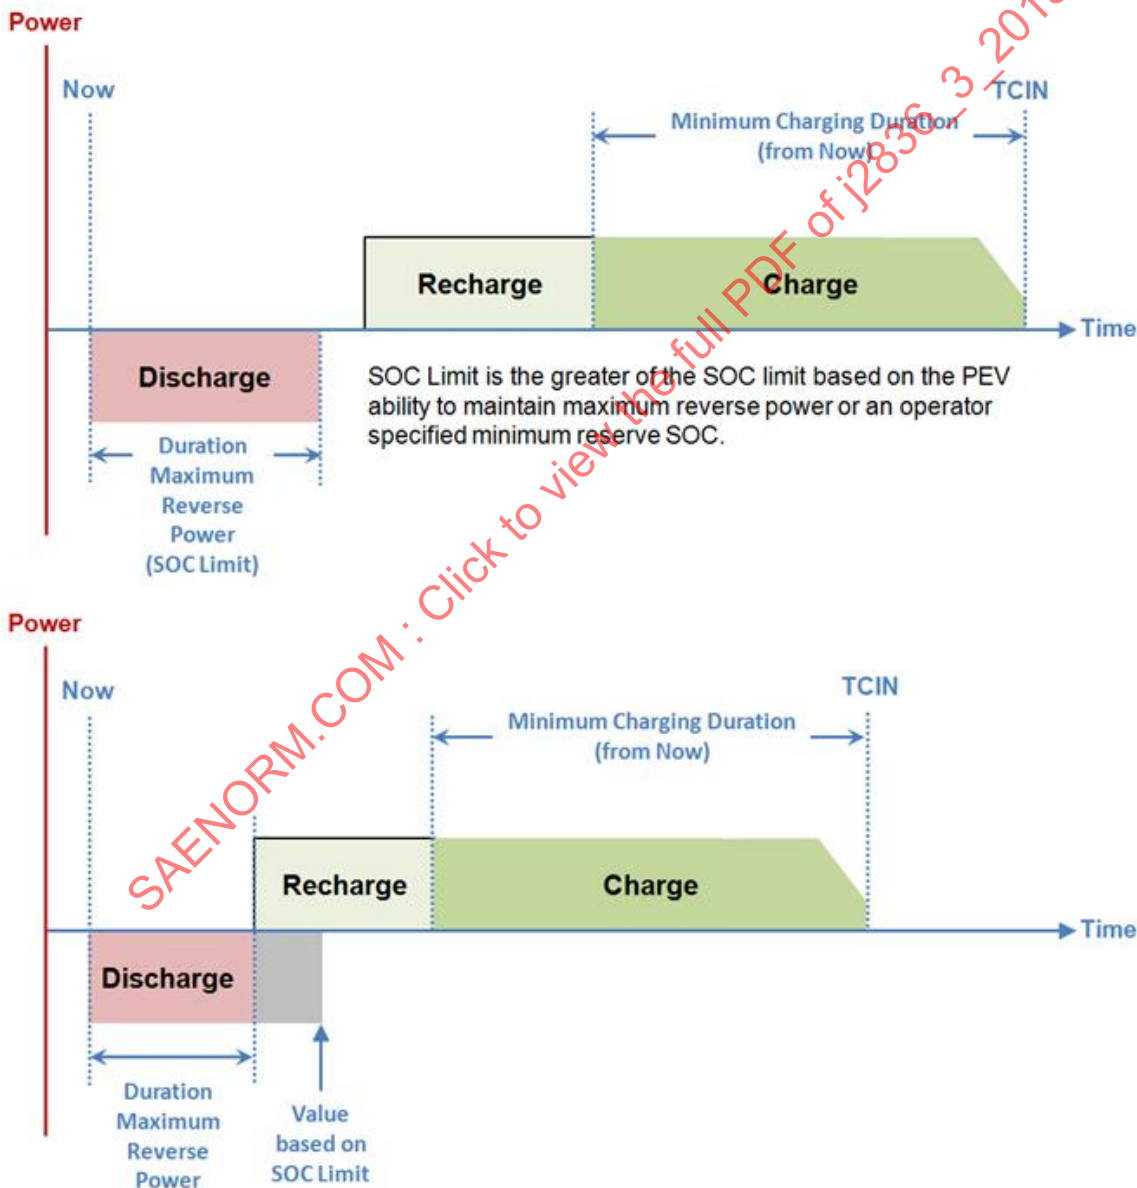


FIGURE 28 - REVERSE POWER FLOW MEASURES

It is more complex to determine the Duration at Maximum Reverse Power because of the need to allow for charging. This involves calculating the lowest value that the SOC could reach and still complete charging in the remaining time.

$$SOC_x = SOC - \frac{TCIN - TimeNow - MinimumChargingDuration}{UCAP * \left(\frac{Efficiency}{MaximumReversePower} + \frac{1}{Efficiency * MaximumForwardPower} \right)}$$

If there is slack time as shown in the upper chart (where SOC_x is less than the SOC Limit Reverse) then

$$DurationMaximumReversePower = \frac{UCAP * (SOC - SOC_{LimitReverse}) * Efficiency}{MaximumReversePower + ParasiticLoads}$$

If there is no slack time as shown in the lower chart, then

$$DurationMaximumReversePower = \frac{UCAP * (SOC - SOC_x) * Efficiency}{MaximumReversePower + ParasiticLoads}$$

These are messy equations and each vehicle manufacturer will define their own method. But the value makes it easy for the EMS to know how long the maximum reverse power can be used. While it is only approximate, the EMS can trade power for time.

4.6.7 Time of Reference

The vehicle needs to continually update the value of the Energy Request and the Durations at Maximum Forward Power and Reverse Power. These measurements must also have an associated Time of Reference to allow the EMS to correct for any time delay in communication and use. For example if the vehicle is sourcing reverse power at 3 kW and maximum reverse power is 5 kW and the time at maximum reverse is 0.5 hours and the time of reference is 2:00:00, for the EMS at 2:02:00 using this information, the corrected time at maximum must be adjusted for the two minutes at 3 kW that would have been consumed. The energy content available at the time of reference was 5 kW for 0.5 hours – 2.5 kWh. During the 2 minutes at 3 kW, 0.1 kWh has been consumed leaving 2.4 kWh. The corrected time at 5 kW is 0.48 hours. The EMS logic may not require this accuracy for planning, but the reference time allows for correction. This may be useful for longer update intervals.

SAENORM.COM : Click to view the PDF of J2836-3-201301

4.6.8 Recommended Information Available to EMS from PEV

Information that should be made available to the EMS from the PEV is listed in Table 7.

TABLE 7 - RECOMMENDED PEV INFORMATION FOR U6

Information	Units	Dynamic	Notes
Time Charge is Needed	UTC		
Energy Request	Watt-hours	Yes	
Minimum Charging Duration	seconds	Yes	
Maximum Forward Power	Watts		Power Request (U5)
Maximum Reverse Power	Watts		
Duration Maximum Forward Power	seconds	Yes	
Duration Maximum Reverse Power	seconds	Yes	
Active Power	Watts	Yes	Actual value
Active Power Setpoint	Percent	Yes	Accepted value
Time of Reference	UTC	Yes	

Some of this information may not change over the session and may only be needed by the EMS at the start. Others (which are listed as dynamic in the table) will definitely change throughout the session and will be needed to be retrieved by the EMS at more regular intervals, possibly before each command. Not all V2G applications will require the EMS to acquire all of the available PEV information.

4.6.9 Recommended Active Power Command and Command Response

The EMS must command the PEV to provide forward or reverse power flow. It achieves this by providing a new setpoint for active power. The setpoint is a signed percent value between -100% and +100%. A positive percent indicates discharging (reverse power flow) and the inverter sets the power to the specified percent of the maximum reverse power. A negative percent indicates charging (forward power flow) and the charger consumes power at the specified percent of the maximum forward power. This is exactly how it is defined in Function INV4.

The command must also have a start time parameter. One way is to start to change the setpoint immediately after the command is received and another way is to specify an exact start time (UTC). For each of these basic methods, it should also be allowed to provide a randomized Time Window, as defined in Function INV4. If an EMS sends a specific UTC time that is earlier than the Time Now it should be converted into immediate. The randomization must be consistent with the update interval. It doesn't make sense to have a 20 second randomization for a command that is updated every five seconds. If the Time Window is set to zero, the change begins immediately.

IEC Function INV4 allows a Ramp Time to be specified for linearly changing the setpoint value from the current value to the new value once the change is authorized to start. If a value of zero is specified, the setpoint will be immediately changed, although the dynamics of the inverter and its software will determine the ramp rate of the actual power. If the parameter is not provided, a default value could be used, which may be zero for a step change.

IEC Function INV4 does not include a specific stop time but it does include a Reversion Timeout that serves this purpose if a new command is not received before the end of the timeout period. The receipt of the next command normally acts as the termination of the prior command. If the next command is not received by a reversion timeout, the PEV is expected to revert to zero output or resume charging, as appropriate. It is expected that new commands would be provided at an update rate that is consistent with the operational bandwidth of the V2G application. For frequency regulation these commands may be required every three seconds. For management of a facility peak 15-minute monthly demand, the updates may be needed every one or two minutes. For managing loads on a transformer, these commands could be 15 minutes or longer. When a new command is received it replaces the current setpoint. If the timeout is not specified, the PEV should use a default value that is consistent with the application.

The parameters associated with each Active Power Setpoint command are listed in Table 8.

TABLE 8 - ACTIVE POWER SETPOINT COMMAND PARAMETERS

Command Parameter	Units	Opt	Default	Notes
Setpoint Value	Percent			Percent of maximum, negative is charging
Setpoint type	Boolean	Yes	0	Target = 0, Limit = 1
Start Time	UTC	Yes	Now	If UTC < Time Now, use start Now
Time Window	seconds	Yes	0	
Ramp Time	seconds	Yes	0	
Reversion Timeout	seconds	Yes	1000	Application can have a default

The PEV must acknowledge the command as successful or not successful. If the command is accepted and the power level change is then successfully implemented, the available response will include a measurement of the actual new active power level after it has been reached. If the command cannot be successfully executed, the available response shall indicate the reason.

4.6.10 Levels of EMS Engagement with a PEV

Three levels of engagement between an EMS and a PEV are described: minimal engagement, informed engagement, and cooperative engagement. The information available from the PEV to the EMS will support all levels, but an EMS may not want to acquire or use the information. The level of engagement will depend on the V2G application, the capability of the EMS, and the communication channel between the EMS and PEV.

For minimal engagement the EMS may not care about the state of each PEV, its need to charge by a specific time, or even its ability to participate as a DER. It might broadcast a percent of maximum reverse flow command to all of the PEVs in its aggregation without actually bothering to gather the specific limits of each PEV. It might just assume an average value for the aggregation. The aggregator may have previously gathered information about the DER during enrollment and it uses that information for estimating the available capacity. It may not even care if any individual PEV can actually provide the requested power. The expectation would be that the PEV would participate if it can and drop out when it can't or must revert to charging.

An EMS using informed engagement would acquire certain vehicle state information to be used for planning power allocation, but it would not assume any responsibility for ensuring that the PEV completes charging during the session. It would expect that the PEV would drop out if it needed to revert to charging. It may plan its usage of each PEV to optimize its ability to perform the aggregated function. At this level, the EMS would expect confirmation that the requested power setting was accepted or rejected and notification if the PEV dropped out to charge.

Cooperative engagement requires the EMS to accept responsibility for ensuring that the PEV can complete charging by the designated time that charging is needed. The EMS might end the DER session before charging is complete, but the PEV should be capable of charging at its requested power level to achieve its target SOC by the expected time of departure. The full functionality of U6 should allow for cooperative engagement. A home EMS would be more likely to engage cooperatively than an aggregator serving hundreds of vehicles.

The expectation is that the PEV would gather, prepare, and present all of the information needed by an EMS to support the cooperative engagement. U6 will define this information. An EMS may not choose to retrieve or use the available information. This all depends on the V2G application and the embedded algorithms in the EMS for managing the PEVs.

The typical information requirements for the different level of EMS engagement are shown in Table 9.

TABLE 9 - LEVELS OF ENGAGEMENT

Levels of EMS Engagement	Minimal	Informed	Cooperative
Behavior of EMS and PEV for the level of engagement. PEV provides information to support any level of EMS engagement.	EMS broadcasts power commands without planning. PEV breaks off to perform charging.	EMS plans power commands based on available power. PEV breaks off to perform charging.	EMS manages power for the V2G application and also to meet PEV charging objectives
Maximum Forward Power	Optional	Required	Required
Maximum Reverse Power	Optional	Required	Required
Duration Max Forward Power		Required	Required
Duration Max Reverse Power		Required	Required
Time Charge is Needed			Required
Energy Request			Required
Minimum Charging Duration			Required

4.6.11 A V2G Example – Facility Demand Charge Management

This section provides an example of how a facility EMS could use some of the use case information in a simple algorithm to allocate power to minimize monthly demand charges. Commercial businesses pay a demand charge that is based on the highest average power reached during the month over either a rolling 15 minute or 30 minute averaging interval, depending on the utility. This can be a significant charge and a monthly rate of \$15 to \$25 per peak kW is not uncommon. A facility with ten AC Level 2 charge stations could achieve a peak facility demand of 66 kW if ten vehicles charge simultaneously at 6.6 kW each for a single 15 minute period at any time during a month. If this could be limited to 40 kW by effective power allocation, that would cut the peak demand by 26 kW and save the facility \$650 on the monthly demand charge at a \$25 per kW rate.

The example algorithm does not enforce a hard limit, but it uses some simple intelligence to allocated power to each of the connected vehicles. The vehicles are all allowed to fully charge. A key allocation parameter is the Utilization Factor (UF) which is defined as the Minimum Charging Duration divided by the difference between the Time Charge is Needed and the Time Now. This denominator must not be allowed to be less than minimum interval.

$$\text{Utilization Factor} = \frac{\text{Minimum Charging Duration}}{\text{Limited}(\text{Time Charge Is Needed} - \text{Time Now})}$$

This Algorithm is executed every one minute and is based on UF. The EMS gathers information from each connected PEV, executes the allocation algorithm, and then provides an active power setpoint value as a percent of maximum for each PEV. The reversion timeout period should be slightly longer than one minute. If ramp times or random time windows are used they should only be a few seconds.

1. For vehicles the least risk is to allow each vehicle to start charging immediately at its Maximum Forward Power. All of the connected vehicles that have not completed charging are assigned a preliminary allocation of 100%. If the sum of all of the allocated power is less than a target facility limit, no further action is required.
2. If this preliminary allocation takes the facility over the target, vehicles with a UF less than 0.6 that have not already started to charge are allocated 0% of their maximum in order of increasing UF until the facility power is below the target limit, if possible. This establishes a late start for some of the vehicles.
3. If the tentative power allocation still exceeds the facility target, all vehicles with a UF less than 0.9 are assigned a power setpoint percent equal to 1.1 times their UF. For example, a vehicle with a UF of 0.7 would be assigned a setpoint value of 77%. Those with a UF of 0.9 or greater retain their preliminary allocation of 100%.

This algorithm was used as part of a project sponsored by the New York State Energy Research and Development Authority (NYSERDA) called the "Electric Transportation Energy Storage System Feasibility Study" which is documented in NYSERDA Report 11-08, May 2011. For a Monte Carlo simulation of a shopping mall scenario using 18 AC Level 2 charge stations, the peak monthly demand is reduced from an unmanaged monthly peak value of 77 kW to 58 kW for a facility target limit of 55 kW. The annual demand charges are reduced by \$5700 for a monthly demand charge rate of \$25 per peak kW. There is some art to selecting the target because the monthly demand peak follows the target value down to a point and then reverses as the target is further reduced. That is because this algorithm requires the Energy Request to be completed by the Time Charge Is Needed for each PEV and at some point early limiting to stay under an overly tight limit results in most vehicles receiving a setpoint of 100% later in their session.

There are many possible algorithms. This one is very simple. Approaches using artificial intelligence techniques that could predict arrivals and charging requirements could perform better. However, the purpose of this discussion is not to promote this specific algorithm, but it is to show how the information available to an EMS in use case U6 can be used for the intelligent allocation of power to vehicles. Also, this type of demand charge management is not something that allows the charging power profile to all be prescheduled at the start of a session. Other vehicles will be coming and going at a facility and conditions impacting intelligent power allocation for any vehicle can change by the minute. For an EMS to manage a 15 minute peak facility demand, it needs to be executing the algorithm at least every minute or two and adjusting the power setpoint for individual vehicles as needed. Other V2G applications, such as frequency regulation, may require vehicle active power setpoint value updates as frequently as every several seconds.

4.7 Considerations for Use Case U7 - Advanced Distributed Energy Resource

Unlike Use Case U6 (Basic DER) which is based only on IEC 61850 Function INV4, Use Case U7 (Advanced DER) uses several IEC 61850 inverter functions. U7 builds on U6, which is only concerned with bidirectional power conversion, and adds the communications and functionality required to take advantage of four quadrant power conversions. The IEC 61850 Function INV3, which allows the power factor of a DER device to be set to a fixed value by EMS command, is one of the U7 functions. Several functions are included to allow for the autonomous operation of the inverter to modes and schedules selected by the EMS. The actual use case for communication is described in Appendix D and SAE J2847/3 will define the implementation of the communication. This section describes the functionality required to create the information that is required to be exchanged with an EMS and the expected behavior of the PEV and EVSE in response to messages from an EMS.

4.7.1 Reactive Power, Apparent Power, and Power Factor

In a simple circuit consisting of an AC voltage source and a linear load, both the current and voltage are sinusoidal waveforms. For a pure resistive load, the current and the voltage remain exactly in phase and their product at any point in time is always positive; indicating that the direction of energy flow does not reverse. For this pure resistive load the product of current and voltage is called Active (or Real) Power and is measured in Watts (W). All the active power entering the linear, resistive load is consumed.

Inductors, which are sometimes called reactors, store energy in the form of a magnetic field. When a voltage is initially placed across the inductor coil a magnetic field builds up, and it takes a period of time for the current to reach full value. This causes the current to lag the voltage in phase and consequently inductors are said to absorb or consume reactive power. A pure inductive load causes the current to lag the voltage by 90 degrees. Capacitors store energy in the form of an electric field. When a current flows into a capacitor to charge it, the voltage lags the current – or equivalently the current leads the voltage. These devices are said to generate reactive power. These relationships are illustrated in Figure 29. For half of each cycle, the product of voltage and current is positive, but on the other half of the cycle, the product is negative, indicating that on average, exactly as much energy flows toward the load as flows back. For pure inductance and capacitance there is no net energy flow over one cycle and the energy temporarily stored in the magnetic field of an inductor or the electric field of a capacitor is exchanged with the generator during every cycle. This flow of energy in the circuit is called the reactive power and is measured in Volt-Amperes Reactive (VAR).

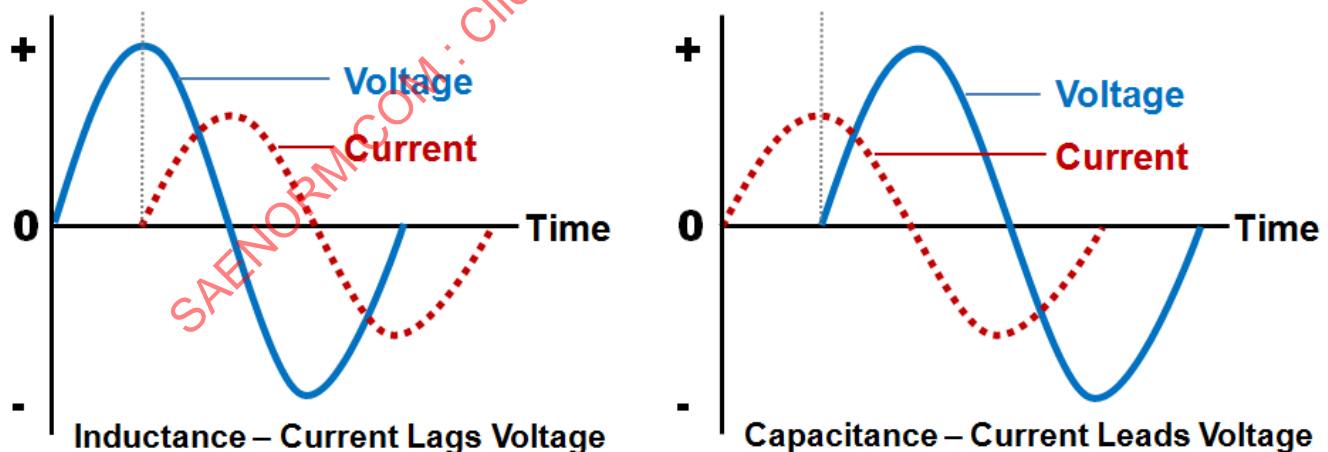


FIGURE 29 - EFFECT OF INDUCTANCE AND CAPACITANCE

Practical loads have resistance, inductance, and capacitance. If all of the loads are linear devices, the simple circuit will have a pure sinusoidal voltage and current waveform displaced by a phase angle. A vector diagram can be created using root-mean-square (rms) values of the voltage and current waveform and the displacement phase angle between the two waveforms. This is shown in Figure 30. This "Complex Power" vector has a magnitude which is the product of the rms current and rms voltage and it is called the Apparent Power which is measured in Volt-Amperes (VA). The vector is rotated counterclockwise from the real ("x") axis by the phase angle between the voltage and current waveforms. The product of the apparent power and the cosine of the phase angle is the active power (W). The product of the apparent power and the sine of the phase angle is the reactive power (VAR). Although different terms are used for units of measure for active, reactive, and apparent power, they are all equivalent: the magnitude of 1.0 W equals 1.0 VA which equals 1.0 VAR.

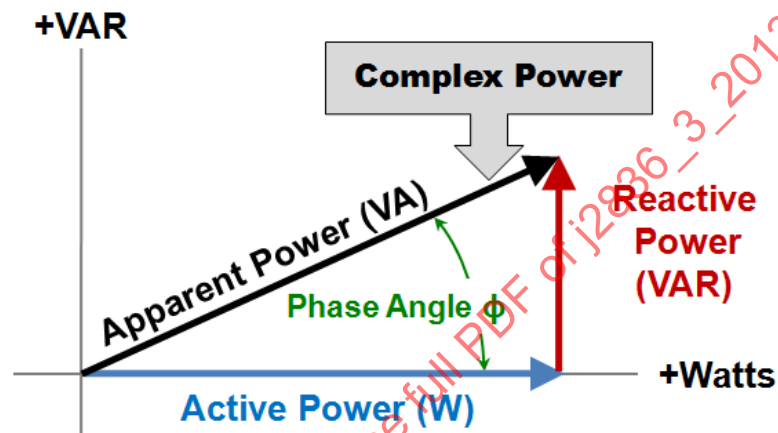


FIGURE 30 - COMPONENTS OF COMPLEX POWER VECTOR

Power factor is formally defined as the ratio of the active power to apparent power. This is always true even for highly distorted waveforms. By measuring rms voltage and rms current the apparent power can be computed as their product. It is also possible to measure the active power. Power factor is a ratio of unsigned values and it is not possible for apparent power to be less than active power. Where the waveforms are purely sinusoidal the power factor is the cosine of the phase angle between the current and voltage sinusoid waveforms. Some care must be taken when using the cosine when the current leads or lags voltage by more than 90 degrees for which the cosine would be negative. Sign conventions for power factor, which by formal definition is an unsigned quantity with a value that can only range from zero to one, will be discussed in more detail later in this section.

Displacement Power Factor is defined as the ratio of active power to apparent power at the fundamental frequency (50 Hz or 60 Hz). For waveforms that are not highly distorted this is approximately equal to the cosine of the phase angle (ϕ_1) between the current and voltage at the fundamental frequency. Nonlinear devices, such as rectifiers, and other factors can lead to distortion of the waveforms. This is captured by the Distortion Power Factor which can be computed as the ratio of the rms current at the fundamental frequency ($I_{1,rms}$) to the total rms current (I_{rms}). Total power factor is the product of displacement power factor and distortion power factor.

$$\text{Power Factor} = \left(\frac{I_{1,rms}}{I_{rms}} \right) \cos \phi_1$$

Power factor is a practical measure of the efficiency of a power distribution system. In an electric power system, a load with a low power factor draws more current than a load with a high power factor for the same amount of useful power transferred. The higher currents increase the energy lost in the distribution system, and require larger wires and other equipment. Because of the costs of larger equipment and wasted energy, electrical utilities will usually charge a higher cost to industrial or commercial customers where there is a low power factor. Utilities typically charge additional costs to customers who have a total power factor below some limit, which is typically 0.9 to 0.95. Sometimes an electronic device is listed with a cosine ϕ number to represent power factor. A number of 0.98 would look very good, but if the device's distortion power factor is 0.9, the total power factor is now only 0.81 – not very good.

For the purpose of U7, power factor control is primarily about using an inverter to control the displacement power factor. This is done by directly controlling the phase angle of the supplied or consumed AC current relative to the grid voltage waveform. Modern power converters include power factor correction electronics to minimize harmonic distortion of the current. In subsequent discussion the term power factor will be used to mean displacement power factor.

The IEC and the IEEE have different sign conventions for the inherently unsigned power factor. The IEEE and the Edison Electric Institute (EEI) convention is the same and EEI is sometimes used to define this sign convention. The sign is used to convey additional information about what is actually an unsigned ratio of two positive magnitudes between zero and one. Some of this depends on the frame of reference.

There are two frames of reference for measuring power. Most of the discussion in this section has been about power flowing into loads from an AC generator. The consumer reference frame is generally used for equipment that consumes power where positive power flows into a load. The SAE terminology of forward (+) and reverse (-) power flow relative to a PEV uses a consumer reference frame. Power flow can also be looked at from the perspective of a generator where positive power flows from the generator to the load. Utilities typically use this producer frame of reference and a DER device follows this convention. Discharging storage produces power and is positive power flow in this frame of reference. The producer frame of reference is used for U6 and U7.

Table 10 provides the IEEE (EEI) and IEC sign convention for power factor. The quadrants are shown in the diagram above the table. In a producers frame of reference active power is positive in Q1 and Q4 when it flows from a generator to a load and it is negative in Q2 and Q3 when it flows from the load to the generator. Reactive power is positive for Q1 and Q2 and negative for Q3 and Q4 based on the axis convention. The top two rows of the table describe these characteristics. The IEEE sign convention denotes whether the current is leading voltage by using a positive power factor for Q2 and Q4 or lagging by using a negative power factor for Q1 and Q3. This is based on using the smaller included angle with the phase angle being limited to -90 to +90 degrees – which is equivalent to switching from a producer to a consumer frame of reference in Q2 and Q3. In the IEEE convention the signed power factor is sufficient to determine where the inverter needs to set the current phase angle relative to the grid voltage.

TABLE 10 - POWER FACTOR SIGN CONVENTIONS

<div style="text-align: center;"> <p>Quadrants</p> <p>+ VAR</p> <p>Q2 Q1</p> <p>← Charging (-) Discharging (+) →</p> <p>Q3 Q4</p> <p>- VAR</p> </div>				
Attribute	Q1	Q2	Q3	Q4
Active Power	Positive	Negative	Negative	Positive
Reactive Power	Positive	Positive	Negative	Negative
IEEE Sign	Negative	Positive	Negative	Positive
IEEE Angle ($-90 \leq \phi \leq +90$)	Lags (I)	Leads (C)	Lags (I)	Leads (C)
IEC Sign	Positive	Negative	Negative	Positive
IEC Angle ($-180 \leq \phi \leq +180$)	Lags (C)	Lags (C)	Leads (I)	Leads (I)
IEC Excitation	Overexcited	Overexcited	Underexcited	Underexcited

The IEC uses a power factor sign convention that is aligned with the direction of active power flow from a producer and it is positive in Q1 and Q4. It is redundant with the signed value of active power and does not provide any guidance as to whether the phase angle of current to voltage is leading or lagging as does the IEEE sign convention. However, because the IEC also measures the lead or lag angle using the full range of -180 to $+180$ degrees it allows the power factor sign to be automatically assigned by using $\cos \phi$. With the extended phase angle current lags voltage for Q1 and Q2 and leads in Q3 and Q4. The IEC sign convention requires a “generator” excitation to be specified along with the signed power factor. The term comes from how synchronous generators are operated to supply or absorb reactive power.

Most generators connected to the grid are synchronous generators, meaning that they operate at the same electrical frequency. To supply reactive power, the generator exciter (which is a DC power supply) increases the field current of the rotor. This increases the magnetic field of the rotor raising the generator voltage and this causes reactive power to be supplied to the grid. Therefore when a generator is supplying reactive power (+VAR) its mode of operation is referred to as overexcited and it has a lagging power factor (Q1). When a generator consumes reactive power (-VAR) it is underexcited and it has a leading power factor (Q4). For a generator a lagging power factor is associated with the supply of reactive power to the grid. For a load a lagging power factor is associated with absorbing reactive power (Q3). This creates some confusion as to whether positive reactive power is inductive or capacitive – it depends on the frame of reference.

It is possible that either the IEEE or IEC sign convention could be used by a V2G application for controlling power factor. Any command to an inverter to operate at a specific power factor must designate the power factor sign convention being used, provide a signed value for the power factor setpoint, and if the IEC convention is being used also define whether it must be overexcited or underexcited. The key is that the inverter must set the phase relationship of the controlled current waveform at the correct angle with the grid voltage waveform.

Figure 31 shows the first quadrant for a four quadrant inverter in a storage DER. This quadrant is for the supply of both active and reactive power to the grid. The inverter has a maximum apparent power limit for discharging which is determined by the inverter electronics, the energy storage system, and the branch circuit. For this quadrant the **Minimum Power Factor** is defined by the selection of the maximum reverse power limit relative to the maximum apparent power limit. The red shaded triangle is the operating region for power factor control in this quadrant.

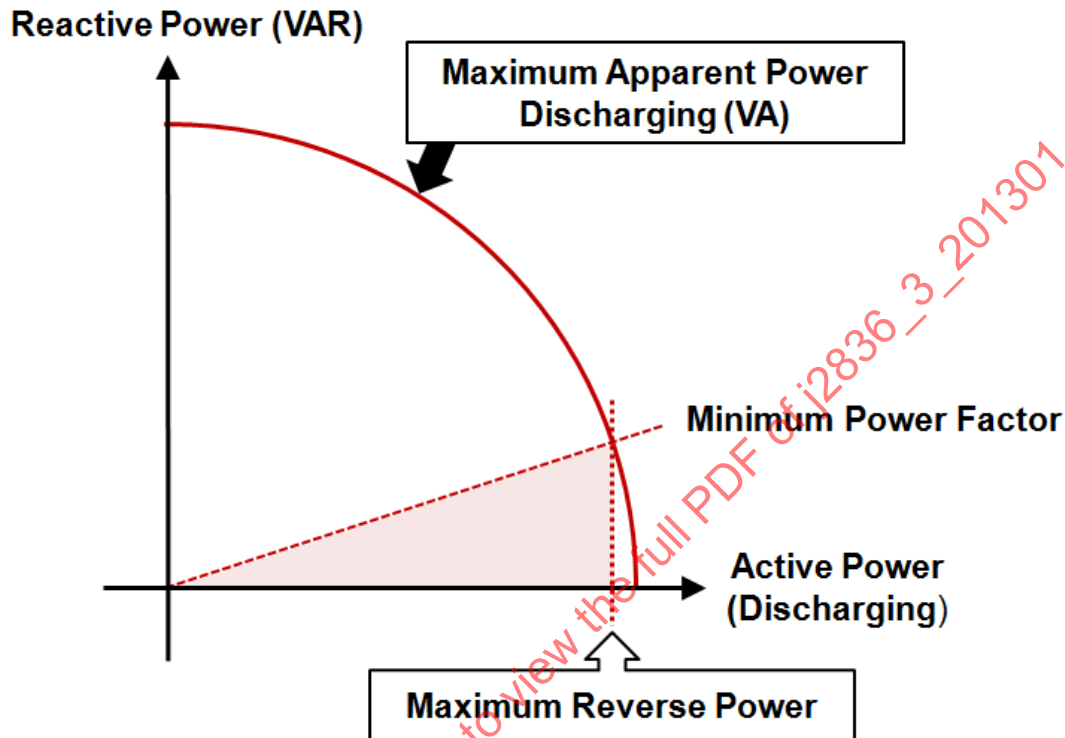


FIGURE 31 - MINIMUM POWER FACTOR

When power factor is being controlled along with active power, it would be unusual to expect a minimum power factor below 0.85 leading or lagging. Synchronous generators do not have symmetric reactive power limits and may not be capable of absorbing more than 0.95 on some machines at rated output of active power. For an inverter the lead and lag angles for power factors in the range of 0.85 should be capable of being symmetric. There could be a difference between charging and discharging if the maximum apparent power is not the same for both charging and discharging. While it is possible that there could be a different value for the minimum power factor for each quadrant (e.g., minPFQ1 to minPFQ4), for the purposes of a PEV it is expected that the highest value from all four quadrants could be used to define a single minimum. In this case, the smallest angle should be selected to define a Minimum Power Factor rating that can be used for all four quadrants. For a DER that operates at a continuous high output, such as a solar PV system or a charging PEV, this power factor mode provides an effective way to control reactive power through the power factor setpoint. However, the absolute reactive power is significantly limited by the constraint that full active power capability must be simultaneously available.

If the maximum inverter current is set by the inverter to exactly lag the voltage waveform by 90 degrees, the active power will be zero and all of the Maximum Apparent Power is supplied as reactive power. This is shown by the shaded gray rectangle along the reactive power axis in Figure 32. This would be a pure voltage support mode of operation for a DER. If an Available Reactive Power limit is set at the intercept of the minimum power factor, this would allow reactive power to be controlled as a percent of the Available Reactive Power across the full range of active power. This is shown by the blue shaded rectangle. Direct reactive power control could be an alternative function to controlling power factor, although power factor control is more traditionally used.

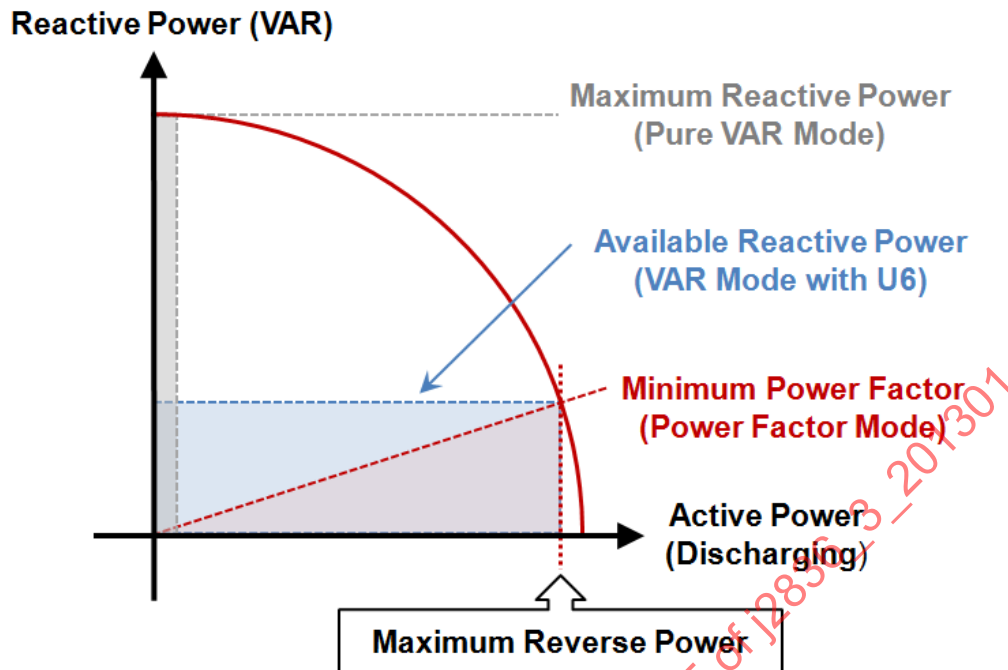


FIGURE 32 - VAR AND POWER FACTOR ZONES

Reactive power is like dealing with a weight on a spring. Once the weight is bobbing up and down, it does not take very much energy to sustain the oscillation. In the grid the reactive energy goes between the magnetic fields of inductive elements and the electric fields of capacitive elements. Losses occur because of the circulating currents to move the energy between one storage medium and another during every half cycle. A storage system can use its inverter to directly move energy in and out of the grid every half cycle to produce or absorb reactive power. There will always be some power consumed from the battery or the grid to operate the inverter, but this will be small. Because the battery is charged and discharged during every half cycle this does not result in deep cycling of the battery. There are many very small cycles but the energy content is very small.

4.7.2 Reference Voltage and Reference Voltage Offset

The inverter can only directly measure parameters at its electrical connection point (ECP) to the local electric power system (EPS). For many of the autonomous functions the independent variable, such as voltage, is needs to be based on conditions at the point of common coupling (PCC). This is point where the local and utility electric power systems connect. This would normally be at the electric meter. There could be a voltage offset from the voltage that can be measured at the inverter and the PCC. This is called the Reference Voltage Offset. The measured voltage at the ECP can be corrected to the Reference Voltage by adding the value of the Reference Voltage Offset. This offset will be installation dependent. The distribution utility may even prefer that the offset be defined through the transformer to the connection to the feeder. For customer and system level V2G applications this voltage offset correction may not be necessary. It is primarily needed for distribution V2G applications.

Figure 33 shows a local EPS with both an AC and DC EVSE. The ECP will be at the inverter output and this is the point where the inverter can measure frequency, voltage and other parameters. The voltage drop from the PCC to the ECP is shown as VRefOfs on the diagram. This drop is due to resistance in the wiring and other devices. The value of this constant may be a factor based on utility guidelines or an actual measured value. The inverter stores this setting.

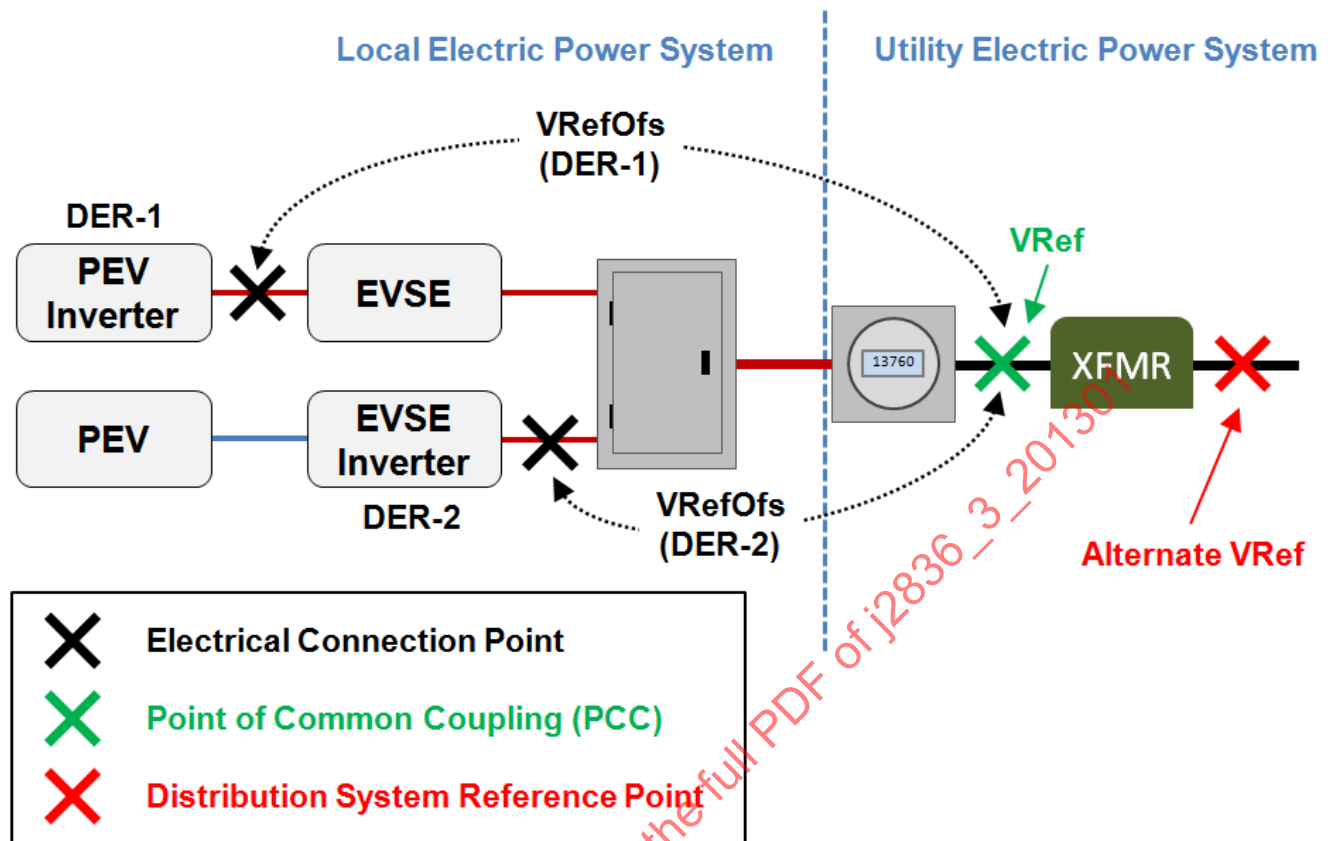


FIGURE 33 - VOLTAGE REFERENCE OFFSET

4.7.3 Recommendations for U7 Fixed Power Factor function

This U7 function is based on the “Fixed Power Factor Function” defined in the EPRI Common Functions document and on “Function INV3: adjust power factor” defined in IEC 61850-90-7. This section provides a brief overview of the EPRI and IEC function for direct management of the power factor during the charging or discharging of a storage DER device.

This function is intended to provide a simple mechanism through which the power factor of a DER may be set to a fixed value. The command structure is similar to that of INV4 in section 4.6.2. The command would have a setpoint value for power factor, a randomization time window, a ramp time, and a reversion timeout. The setpoint value is a signed power factor. The command also designates whether the IEEE or IEC sign convention is being used. With the IEEE convention the quadrant is easily determined because the inverter knows whether it is charging or discharging. With the IEC convention the power factor sign only indicates the direction of the active power and an additional item of information is required to determine the quadrant. The inverter must know the excitation or equivalently whether the current is leading or lagging the voltage.

This function is intended to be capable of being used with the INV4 (U6) function for controlling active power. The minimum power factor setting for this function must be capable of being achieved at the maximum forward power and maximum reverse power limits and all values between. The EMS should not request a lower absolute value of a power factor than the inverter is capable of supporting.

Information that should be made available to the EMS from the PEV is listed in Table 11. The parameters associated with each Power Factor Management command are listed in Table 12. The command approach is as described in 4.6.9 for active power management. Some of the information from U6 is needed to understand the PEV status for charging if the EMS is engaged in also managing the charging session.

TABLE 11 - RECOMMENDED PEV INFORMATION FOR FIXED POWER FACTOR

Information	Units	Dynamic	Notes
Minimum Power Factor	None		-1.0 to 1.0
Time Charge is Needed	UTC		
Energy Request	Watt-hours	Yes	
Minimum Charging Duration	seconds	Yes	
Maximum Forward Power	Watts		Power Request (U5)
Time of Reference	UTC	Yes	

TABLE 12 - FIXED POWER FACTOR SETPOINT COMMAND PARAMETERS

Command Parameter	Units	Opt	Default	Notes
PF Setpoint Value				Power Factor -1.0 to 1.0
PF Sign Convention	Boolean		0	IEEE = 0, IEC = 1
PF Excitation	Boolean			Underexcited = 0, Overexcited = 1
Start Time	UTC	Yes	Now	If UTC < Time Now, use start Now
Time Window	seconds	Yes	0	
Ramp Time	seconds	Yes	0	
Reversion Timeout	seconds	Yes	1000	Application can have a default

4.7.4 Recommendations for U7 Fixed VAR function

A fixed VAR function is not specifically defined as an immediate function by either EPRI or IEC. However, the NIST SGIP PAP07 document indirectly defines an immediate function for fixed VAR control as part of the autonomous volt-VAR mode VV13 (static inverter mode based on settings). The Smart Energy Profile 2.0 implements a Fixed VAR function. This function is based on the SEP 2.0 Fixed VAR function.

This function is intended to provide a simple mechanism through which the reactive power of a DER may be set to a fixed value. The command structure is similar to that of INV4 in section 4.6.2. The command will have a setpoint value for reactive power, a randomization time window, a ramp time, and a reversion timeout. The setpoint value is a signed percent of a defined maximum value. The type of maximum value to be used with the setpoint must also be defined in the command.

If this function is to be used with the INV4 (U6) function for controlling active power, the Available Reactive Power should be calculated as the reactive power at the minimum power factor at the maximum charging or discharging power. This value of reactive power can be provided with active power ranging from maximum charge rate to maximum discharge rate. This is equivalent to operating in the blue zone in Figure 32. For pure voltage support with the PEV at zero active power, except for covering switching losses, the reactive power can be directly commanded as a percent of the maximum reactive power, which is based on the maximum volt amperes.

Information that should be made available to the EMS from the PEV is listed in Table 13.

TABLE 13 - RECOMMENDED PEV INFORMATION FOR FIXED VAR FUNCTION

Information	Units	Dynamic	Notes
Maximum Reactive Power	VAR		
Available Reactive Power	VAR		
Time Charge is Needed	UTC		
Energy Request	Watt-hours	Yes	
Minimum Charging Duration	seconds	Yes	
Maximum Forward Power	Watts		Power Request (U5)
Time of Reference	UTC	Yes	

The parameters associated with each Fixed VAR command are listed in Table 14. The command approach is as described in 4.6.9 for active power management. Some of the information from U6 is needed to understand the PEV status for charging if the EMS is engaged in also managing the charging session.

TABLE 14 - FIXED VAR COMMAND PARAMETERS

Command Parameter	Units	Opt	Default	Notes
VAR Setpoint Value	Percent			Signed percent of selected limit
VAR Limit Type	Boolean		0	0 = %AvailableVAR 1 = %MaxVAR
Start Time	UTC	Yes	Now	If UTC < Time Now, use start Now
Time Window	seconds	Yes	0	
Ramp Time	seconds	Yes	0	
Reversion Timeout	seconds	Yes	1000	Application can have a default

4.7.5 Autonomous Curve Functions

IEC 61850-90-7 defines a number of autonomous functions. Many of these are based on the inverter measuring something (X) and then producing an output (Y) based a stored function ($Y=f(X)$). The independent variable (X) can be line voltage, frequency, active power, and other parameters. The function output (Y) could be a direct output of the inverter, such as active power, or it could be an indirect output, such as power factor, that needs some additional processing. In order to smooth potential step changes in inverter output, the IEC document allows for an optional first order lag function and an optional rate limit. These can be combined using a rate limited first order lag filter as shown in Figure 34. For each type of X-Y system (such as volt-VAR), there may be different stored curves with different filter gains and limits. A utility would select which stored curve set is to be used for a specific DER session.

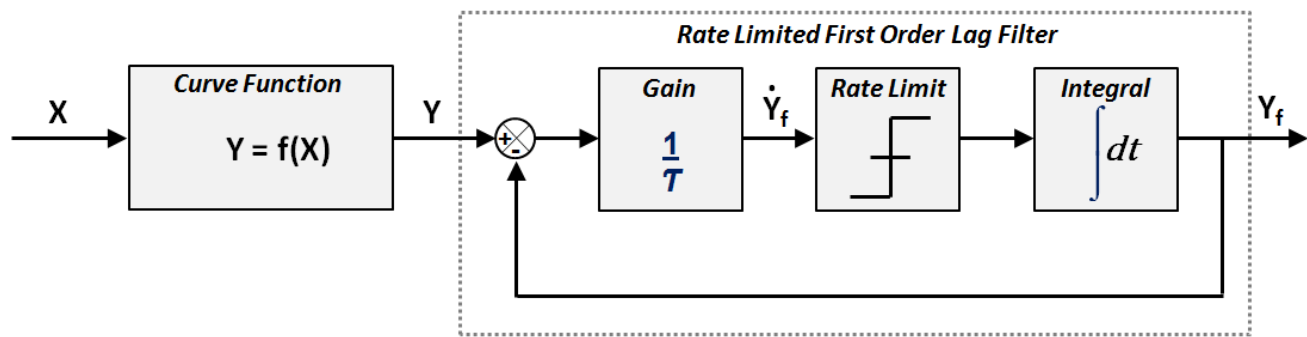


FIGURE 34 - STRUCTURE OF AN AUTONOMOUS FUNCTION

The functions are called curve functions because they are defined by a piece-wise linear array of (X, Y) data points. Linear interpolation is to be used to compute the value of Y for a value of X that is between the values of two data points in the array. Examples of two curves defined by four data points each are shown in Figure 35. For values of X outside the range of the array points, the value of Y for the end points is to be used. This is shown by the dotted lines in the sample functions. The top function shows a curve with deadband (zero output for a middle range of X). It is also possible that the values of X in the array reverse to create hysteresis. This is shown by the lower function.

The arrays must be received from a valid source, checked by the PEV for errors, and then stored in advance of a session. This could be long before they are needed to be used. The EMS controlling the PEV as a DER selects the function and curves to be used and either initiates it immediately or schedules it to run later.

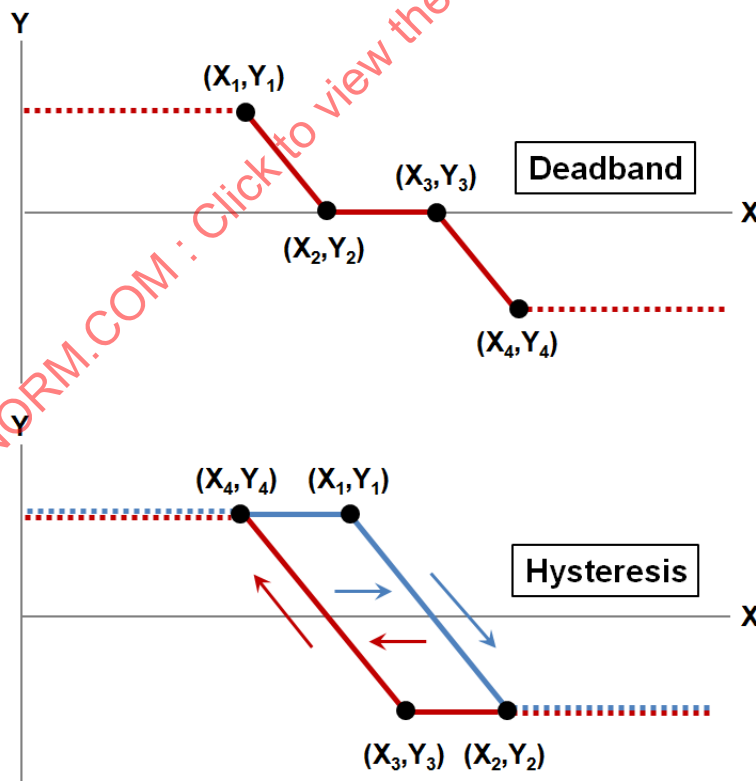


FIGURE 35 - ARRAY FUNCTIONS

IEC 61850-90-7 defines a number of autonomous functions and others may be added in the future. If an inverter is designed to receive and implement any of these functions based on a single array of (X, Y) points with a selectable X and Y, it should be easy to add new functions. The volt-VAR, frequency-Watt, volt-Watt, and Watt-power factor functions are briefly described in section 4.4.4 of this document. The IEC document provides much more background on how these and other autonomous functions can be used by a utility. The Smart Energy Profile 2.0 is expected to be used for communication with an on-board inverter and it provides the communication structure for each of these autonomous functions. However, an external EVSE inverter could be connected to a network that is not based on SEP 2.0, although other communication protocols are also including support for these functions.

4.7.6 Low and High Voltage Ride Through Functions

As discussed in section 4.4.1, IEEE 1547-2003 requires that an inverter (while connected and producing active power) must stop producing power within a defined clearing interval if an abnormal voltage is detected. This standard worked well when there was a low penetration of DER devices on a distribution feeder. It was not a problem for the utility if a DER device tripped off line during a disturbance. But as the penetration of renewable sources, such as solar PV systems, increases the utility might prefer that DER devices ride through the voltage disturbance without tripping and actively help to stabilize the voltage. The Low Voltage Ride Through (LVRT) and High Voltage Ride Through (HVRT) functions are intended to provide this capability.

The LVRT and HVRT concept is shown in Figure 36. Four piece-wise linear curves are defined. Two are located below the nominal voltage and represent the LVRT functions and two are located above the nominal voltage and represent the HVRT functions. The y-axis shows the voltage as a percent of nominal (100%). The x-axis shows the duration of an event. The red curves define the “must disconnect” boundaries and the DER must be disconnected in the red shaded regions. The green curves define the “must remain connected” boundaries and the DER is expected to remain connected within the green shaded regions. The DER “may disconnect” outside the green curves. For a DER that uses an inverter the inverter does not have to physically disconnect but it must stop providing power. The figure only shows stair-step transitions, but sloping segments could also be provided to the DER by a utility using these arrays.

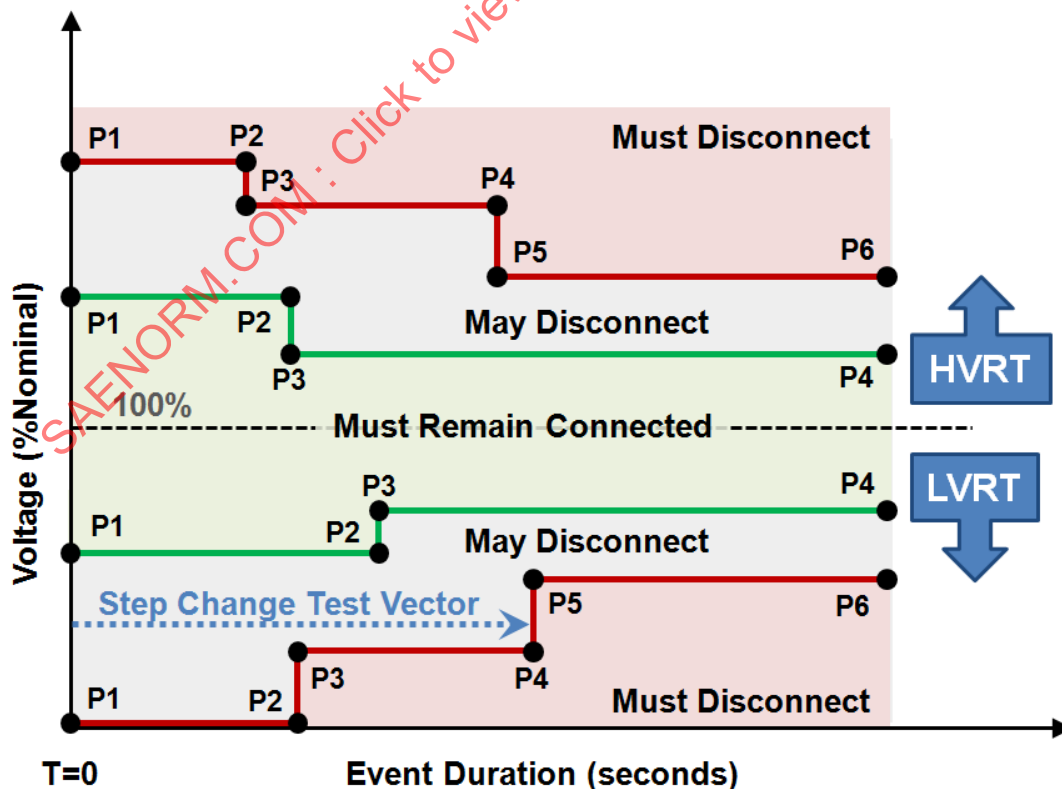


FIGURE 36 - LVRT AND HVRT CONCEPT

The term LVRT implies that the must disconnect curve would be lower or longer than the IEEE 1547 limits when this function is being used, otherwise it would not be a ride through of a low voltage event. However, nothing prevents the must disconnect curve being used to just implement the IEEE 1547 limits. This function provides flexibility in allowing the limits to be selected and not fixed in the inverter. It is not required to provide a must remain connected curve, in which case the must disconnect curve still separates the must disconnect and may disconnect regions. However, it would normally be expected that the inverter would remain connected in the “may disconnect” region if it could do so without harm to the inverter or PEV. When a must remain connected region is established the expectation that the inverter remains connected is much higher, but it is still responsible for self protection.

The LVRT and HVRT functions look like the other autonomous curve functions. However, these curves are only a specification of the voltage and duration limits for the inverter to implement and are not intended to be actual executable functions. These limits must be interpreted by using a perfect step change in voltage from 100% to a specified level and then reading the duration for crossing the boundary curve at that voltage level. This is illustrated by the dotted blue arrow. In this example, which is based on the LVRT must disconnect curve, for every step change in voltage to any value at or below the voltage value of point P5 and above the voltage value of point P4, the DER must disconnect before the event duration defined by the duration value of point P4 or P5. This is a specification limit which can be implemented many ways. Again, it is not appropriate to think of these curves as a gate for actual voltage waveforms. When the inverter receives a curve it must analyze the curve and set up its hardware or software detection logic to implement the specified protection functions. This process will be described by example for an inverter that uses a set of event-timers to execute the protection functions.

Figure 37 shows an LVRT must disconnect curve which uses a sloped line segment from P4 to P5. For the purposes of this example which will use pure event-timers to implement the function, the inverter will convert the sloped segment into a single intermediate level. This is shown by the inverter introducing two new data points, P45A and P45B, with voltage values set to the average of the voltage values of points P4 and P5. P45A is set to the duration value of P4 and P45B is set to the duration of P5. Individual event detectors and timers can now be set up for three events.

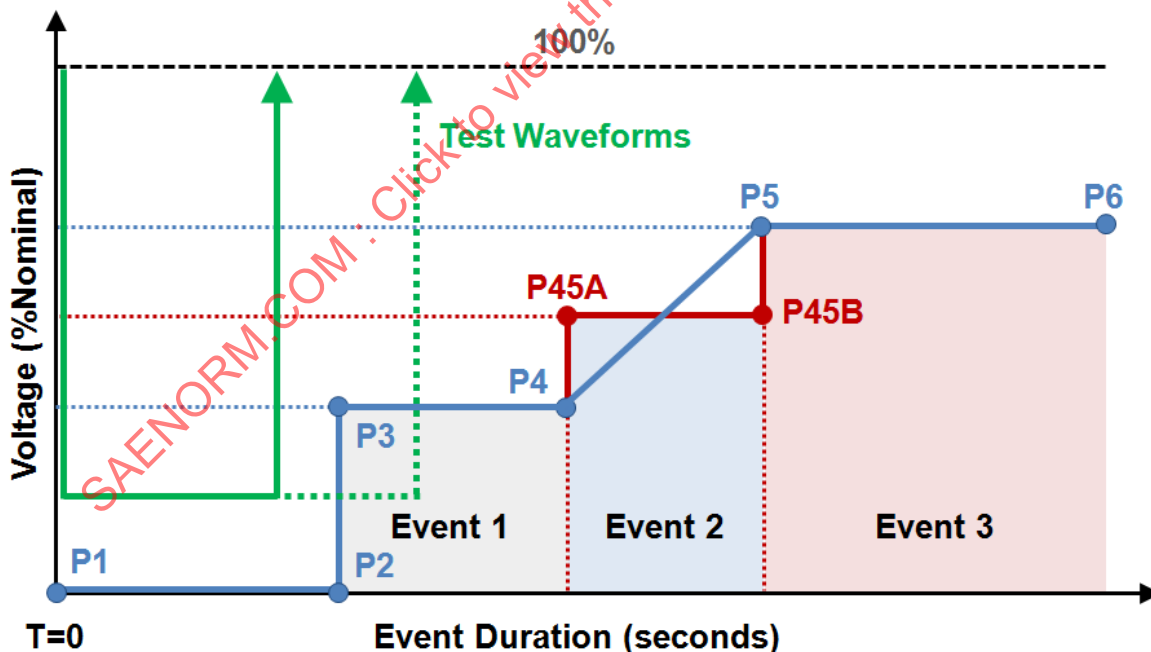


FIGURE 37 - EXAMPLE OF LVRT IMPLEMENTATION

For Event 3, which is shown by the red shaded region, the event timer starts counting if the voltage drops below the value of point P5 and the event is ended and the timer is reset if the voltage rises above that value. The inverter must be off-line before the timer reaches the duration value of point P5. The inverter must account for any voltage measurement delays and any delays in shutdown following the timer trip when it sets up the timers, because the clearing times are based on the actual time to disconnect based on actual voltage transients. A similar timer can be set up for Event 2 which is now based on point P45A and Event 1 which is based on point P3.

Figure 37 also shows two superimposed step changes in green – one with a solid line and one with a dotted line. These could be used to test the implementation of the function. Both step changes drop below the value of P3 which activates all three event timers. The solid line quickly returns to 100% before Event 1 would time out and all events are reset. The dotted line shows that Event 1 trips. The other events would reset, but it only requires one to trip the inverter. While this example is based on the step changes and this inverter design using timers will work perfectly for that condition, the timers will also work for arbitrary waveforms. Any individual timer activates when its threshold is crossed and resets when it crosses above it. So in a ramp down the Event 3 timer would start before the Event 2 timer which would start before the Event 1 timer. If Event 1 reset by a slight rise in voltage, Event 3 might still be active. If the voltage dropped back below the Event 1 threshold, it would restart the Event 1 counter and Event 3 may still be active. Again, the diagram is a specification based on pure step changes in voltage and not a voltage waveform gate.

It is possible to design an event detector that can use a sloped exit condition, such as the P4-P5 segment. In this case the “event” would trigger when the voltage dropped below P5 and be reset if the voltage climb above P5. However, in this case the trip window would need a dynamic gate of trip voltage versus duration.

The IEC allows that these slopes can be converted to intermediate steps for inverters that only use event timers, as was shown in the example. The example showed using only a single intermediate level for vehicle inverters. However, more levels would provide a better approximation for a sloped segment. The single step conversion of sloped segments may not be a major concern to a utility for PEV inverters. Utilities that desire more steps to approximate a sloped segment than a single intermediate step could just send curves to vehicles with all of the steps defined.

This function defines only the mechanism through which the settings are communicated and does not define the settings that would actually be provided and used. Various countries, states, or other organizations such as the IEEE may issue specific L/HVRT requirements. The intention is that this function will be sufficiently flexible to support all such requirements. While the curves convey utility requirements to the inverter, the actual implementation by the inverter must also account for any inverter limitations and safety considerations.

Unlike solar PV systems which are connected and providing energy for many hours, vehicles have very limited energy production capacity. Small DER devices, such as PEVs, may not be required to be capable of L/HVRT. And it is possible that even if they are capable that they may not be authorized by a utility to use the capability. It is possible that PEVs may be required to only use the IEEE 1547 limits.

4.7.7 Loading and Executing Autonomous Functions

There are two distinct phases for autonomous functions: a loading phase and an executing phase. The general structure of each function can be designed into the inverter, but there can be several modes for each function which depend on a specific set of curves. It could be possible for an inverter to have several sets of curves for each function. These curves must be provided to the inverter from the utility during a loading phase. The utility can then instruct the inverter to execute a loaded function and curve set. The combination of a function and a set of curves are often called a mode. There can be several volt-VAR modes for the volt-VAR function.

The loading of curves and establishment of modes must occur before the mode can be activated. This could be done just prior to being activated by a utility as an integrated load and activate exchange. Alternatively, loading could be done as part of an initial enrollment process and the utility would only need to activate a saved mode just prior to use.

The communication protocol and inverter functionality must allow for loading curves for specific modes and performing any necessary verification that the curves do not have defects. The provider of the curves should make certain that all of the data points are correct in advance of transmission to the inverter, but the inverter must check that there are not defects that could cause problems for the inverter. It will not be possible to verify that the curves always contain the intended functionality, but obvious defects such as points with negative frequency for a frequency-watt curve can be detected and the errors flagged to the provider. After the curves are verified they would be saved by the inverter for that mode.

The processes of loading a mode schedule and of commanding a saved mode to activate are different scenarios in U7.

4.8 Considerations for Use Case PEV4 - PEV as a Distributed Energy Resource

Use Case PEV4 (PEV as a Distributed Energy Resource) describes the process steps needed to enroll in a V2G application (or program), perform the initial setup of the PEV or EVSE, engage in one or more sessions, be compensated for participation, and terminate the participation in the V2G program sometime in the future. This use case is defined in Appendix A. This section discusses some of the issues and considerations that guide the implementation of the use case.

4.8.1 Show me the money!

The purpose of a PEV is transportation. A PEV needs to charge its battery to perform that purpose. It only needs to discharge its battery to accelerate and to cruise. Discharging its battery while the PEV is stationary increases the number of charge-discharge cycles over those required for only transportation. The use of reverse flow increasing the amount of energy transfer needed to fill the battery and reduces the available time to do it. This increases the risk to the operator of not having sufficient energy in the battery if the PEV is needed for unexpected travel. The lowest risk for the PEV is to start charging as soon as it is plugged in and at the maximum rate that the PEV, the EVSE, and the grid can physically sustain. This may not be the most economically favorable approach for the PEV owner or in the best interest of other stakeholders, but it tops off the PEV battery in the shortest time.

A pure variable load is not formally considered to be a DER device because, unlike a solar PV system or an energy storage system, it never produces energy. Loads are always distributed, but they are not energy resources. Demand management generally refers to loads that can be scheduled to be interrupted during critical peaks. A PEV can suspend charging in response to such a prescheduled demand management event. Demand dispatch is a term that is being used to describe variable loads that can be dynamically controlled. Varying a load can be just as effective for a utility as varying the output of a generator. This document considers the use of pure variable rate charging, without any reverse flow, to also be a DER application.

Use cases U5 and U6 both provide the capability to directly manage active power flow during charging. While the use of reverse flow can double the range of active power control, many V2G applications can be very effectively performed by only varying the rate of charging of the PEV. Demand dispatch can be performed using only a charger which is less complex than a bidirectional or four quadrant converter (inverter). Variable rate charging has no adverse impact on battery life because there is no increase in the depth or number of charging cycles. However, extending the duration of a charging session by delaying the start or reducing the rate of charging still increases the risk to the PEV of not having sufficient battery energy if an earlier than planned need to travel arises.

The use of reverse power flow (discharging) must have sufficient value to the PEV owner to offset any extra cost for the inverters (in the PEV or EVSE) and any potential reduction in vehicle battery life. Value isn't just about receiving cash payments or discounts, but value can still be evaluated using alternative business cases. For example, the use of a PEV for emergency backup of a home after a power failure (V2H) could be of value to a homeowner. The incremental cost of providing this V2H capability could be compared with the cost of a portable generator. Of course, the PEV may also provide other benefits that the portable generator cannot, such as the ability to participate in frequency regulation. This complicates the business case, but there will always be a value assessment that must be made by the PEV owner at the time of purchase of the PEV and EVSE and when considering participation in any application.

It is not the purpose of this document to perform value assessments of the various business cases for using a PEV as a DER for V2G applications. There are many technical, regulatory, and market issues to be worked to create viable and sustainable business cases for the use of a PEV as a DER device across the different V2G domains of balancing area, distribution feeder, and behind the meter. However, there must always be some perceived value to the PEV owner for participating in a V2G application, even for charging-only applications. This could be as simple as a receiving a lower cost for parking or charging by agreeing to allow a commercial parking facility to manage its demand charges by using its EMS to control the PEV rate of charging during the session.

4.8.2 The Business Deals

Every V2G application will be based on one or more business relationships, or “deals.” Some entity will own the V2G application (or program) and will receive the direct benefit from using a PEV as a DER. There are different tiers of deals for V2G applications. This document will be concerned only with the direct V2G deal between the EMS owner and the PEV or EVSE inverter. An aggregator could bid frequency regulation services to a system operator and be compensated for that service. The aggregator uses its EMS to control a fleet of PEVs to perform the service. The aggregator compensates the PEV owners for their participation. The deal of interest here is the one between the aggregator and each PEV and not the one between the aggregator and the system operator.

The inverter is the core of a DER device. It is the DER device. The functionality of interest to the EMS is that of the inverter, not the PEV battery. When the inverter is on-board the PEV, this is simple. It gets much more complex if the inverter is external to the PEV in the EVSE. The use of an external inverter introduces the requirement for a business arrangement between the PEV and the EVSE. This discussion is about business deals and not the physical control of the inverter and vehicle battery. Figure 38 shows four PEV4 scenarios and the various business deals that could be needed to engage in a V2G application.

SAENORM.COM : Click to view the full PDF of J2836_3_201301

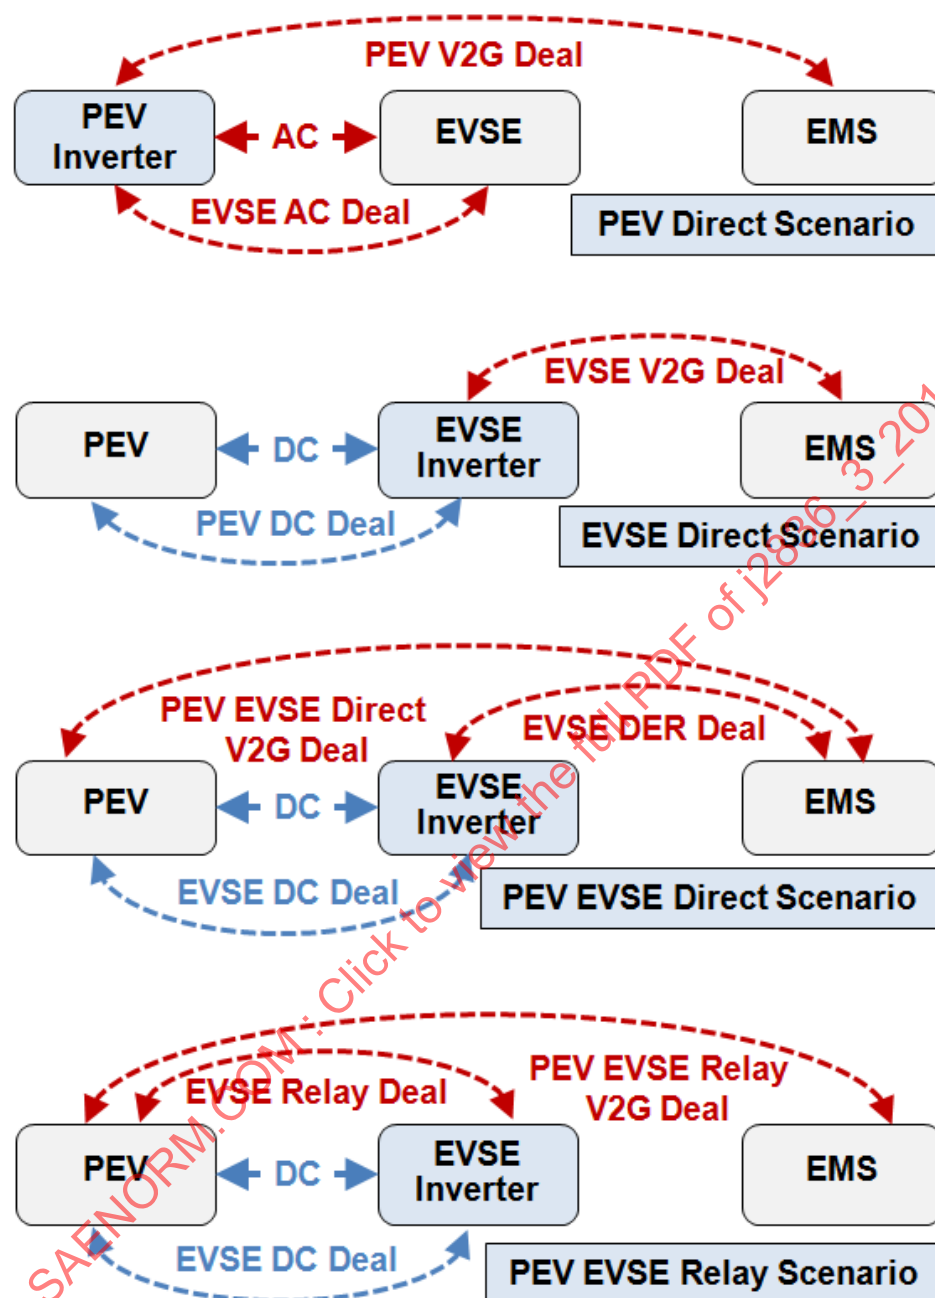


FIGURE 38 - BUSINESS DEALS ASSOCIATED WITH V2G APPLICATIONS

The scenario where the inverter is on-board the PEV is relatively clean. This is called the "PEV Direct Scenario." The upper block diagram illustrates this business case. Two business arrangements are required to engage in the V2G program: one between the owner of the PEV and the owner of the V2G application (PEV V2G Deal) and one between the owner of the PEV and the owner of the EVSE (EVSE AC Deal). The dotted red lines show these business relationships. For the purpose of these discussions, the dotted lines are not intended to show a communication link, only a business relationship. The communication between the EMS and the PEV could come through the EVSE. There may also be many intermediate communication systems and networks between the EMS and the EVSE. This diagram is only intended to show that the PEV agrees to allow its inverter to be used by the EMS to perform a V2G application in return for some value received by the PEV owner. The PEV can enroll in a V2G application and directly fulfill the contract.

These agreements could be very formal agreements or they may be very informal. For example the use of the PEV behind the meter by a home EMS would not require any business deals between the PEV and home EMS or between the PEV and EVSE. But there would need to be some setup information entered into both the home EMS and the PEV and possibly even the AC EVSE. At a public parking garage, the PEV would require a formal business arrangement with a frequency regulation aggregator and would have a simple payment plan of some sort with the garage (EVSE) owner for the use of the equipment, parking space, and energy.

The business situation gets more complex when the inverter is located in the EVSE. There are three scenarios that use an external EVSE inverter. Each of these will be described below.

The EVSE owner could directly sign up as a DER device with the V2G application owner. This scenario is called the "EVSE Direct Scenario" and is shown by the second block diagram in Figure 38. Two business arrangements are required to engage in the V2G program: one between the EVSE owner and V2G owner (EVSE V2G Deal) and one between the EVSE owner and the PEV owner (PEV DC Deal). Just as with the PEV Direct scenario these agreements could be very formal agreements or they may be very informal. The owner of the EVSE receives value from the owner of the V2G program for participation. The owner or the PEV in turn receives some value from the owner of the EVSE, and this could be as simple as a preferred rate for parking and charging at a commercial parking garage.

If a commercial parking facility signs up to use all of its DC EVSEs to perform a DER application, this would be considered to be a Building to Grid (B2G) program. In this case it would use a facility EMS to control the individual EVSE units. Each EVSE is "enrolled" with the facility EMS under this scenario. These internal (EVSE V2G Deal) agreements between the many EVSE units and the building EMS would be informal – just what is needed to set up the communication. The facility itself is enrolled as a B2G provider using its EMS to communicate with the utility EMS. The B2G enrollment for the facility with the utility would be formal. Each PEV would have an arrangement (PEV DC Deal) with the parking facility for the DC power transfer. The facility may offer preferred parking rates or charging rates to PEV owners that allow the facility to vary the rate of charging or discharging of their PEVs during the day. In some ways this is a simpler deal for the PEV than some of the possibilities with the on-board charger, because the deal is only between the PEV owner and EVSE owner.

It gets more complex if the PEV directly signs up with the owner of the V2G application but plans to use an external EVSE inverter. There are two ways to do this and each will be described. In the "PEV EVSE Direct V2G Scenario" the owner of a PEV wishes to directly enroll and participate in a V2G application (PEV EVSE Direct V2G Deal) but plans to use an inverter in an EVSE and have the EVSE directly engage with the V2G EMS. This scenario requires the EVSE to be used in the PEV's V2G program to be approved by the V2G owner to directly participate with the EMS for control of the DER. However, the deal between the EVSE owner and V2G application owner (EVSE DER Deal) may not require any compensation to be paid by the V2G application owner to the EVSE owner. An arrangement between the EVSE and PEV owners (EVSE DC Deal) defines any compensation arrangement of the EVSE owner for allowing the PEV to engage in the V2G application using the EVSE inverter. This could be as simple as the PEV owner paying an access fee for the use of an EVSE with an inverter. These agreements are shown by the third block diagram in Figure 38.

The most complex scenario is where the owner of a PEV wishes to directly enroll and participate in a V2G application (program) but plans to use an inverter in an EVSE that is not authorized to directly communicate with the V2G EMS. The DER control commands from the EMS will be received by the PEV and then relayed to the EVSE. The inverter is not directly visible to the EMS. This scenario requires three business arrangements. The PEV owner and V2G owner agree on the V2G services (PEV EVSE Relay V2G Deal). This may be slightly different than the in the PEV EVSE Direct scenario. For this scenario the V2G owner may need to know that a relay is being used from their EMS to the PEV and then to the EVSE. The owner of the PEV and the owner of the EVSE to be used for the PEV's V2G program must agree to allow the EVSE inverter to be used (EVSE DC Deal). This agreement allows the EVSE to use the PEV as a DC power source and defines the compensation arrangement of the EVSE owner for allowing the PEV to engage in the V2G application.

There may also need to be an arrangement to allow the EVSE to operate using the PEV to relay information between the EMS and the EVSE inverter (EVSE Relay Deal). Most likely the financial aspects the EVSE DC Deal and the EVSE Relay Deal would be combined, but the setup will be unique. While the communication process for an external inverter using the PEV battery is identical for all external inverter scenarios and governed by SAE J2847/2, the use of the PEV as a relay is unique to this scenario. The setup, if even possible with some equipment, will be very different than when the EMS communicates directly with the EVSE. The PEV may not use the same network protocol as the EVSE and coordination may be required to not convert EMS messages that are to be relayed from the EVSE to the PEV and then back to the EVSE inverter. While this scenario is possible, it is very complex to implement in the PEV and EVSE and not likely to be widely used.

This discussion has been about business relationships between PEV, EVSE, and EMS owners and not about how the EMS communicates with the PEV and EVSE to perform the V2G application. As discussed in other sections of this document, the preferred DER control communication path should be between the EMS and the inverter regardless of whether it is located in the PEV or EVSE. For on-board inverters the messages may need to travel from the premises network to the EVSE and across a power line carrier link to the PEV inverter. There may be many tiers of protocol translation between the EMS and the PEV inverter, but the control path is still direct.

4.8.3 Process Flow for the DER Direct Scenario

For a PEV with an on-board inverter, the use of a PEV as a DER can be described by a single process flow. There is a single integrated DER device. There is no business deal between the PEV inverter and the PEV battery. The communication between the PEV inverter and the PEV battery management system is a private matter. This will be used to establish the process that can be used for the other scenarios.

The DER Direct process is based on a V2G application operator using a PEV as a DER device. The major process steps are shown in Figure 39. The scenario is based on there being an entity with an energy management system (EMS). It all begins with enrollment which can be with a utility, with an ancillary services aggregator, with a building operator, or other entity. The enrolled PEV can then participate in actual V2G applications controlled by the service provider's EMS (as described in section 4.5). The V2G operator will then compensate the PEV owner for participation in their V2G application. The service provider will have an EMS that is capable of engaging the PEV as a DER device. The blue shaded boxes are process steps that involve electronic interaction with the inverter. The other process steps do not require electronic communication with the inverter.

There are five major steps in the process: enrollment, initial setup, session, post session, and termination. Each step will be briefly discussed.

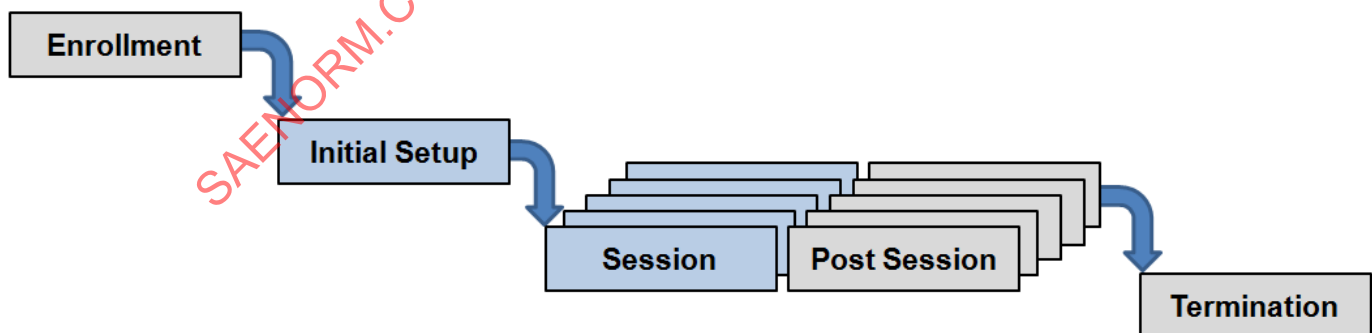


FIGURE 39 - PEV4 DER PROCESS CHART

4.8.3.1 Enrollment Process Step

There are different V2G applications based on the domain and operational bandwidth. The enrollment process will vary based on the domain and the participants. Enrollment will be formal with a utility, ESCO, EVSP, or Ancillary Service Aggregator. It could be less formal at a parking garage. And at a private residence it would be very informal. A generic enrollment use case (E) is described in SAE J2836/1TM.

A formal enrollment process will require an application by the PEV owner to participate, which can be in person, by phone, by internet, or even by mail. A contract will be made. This is just as with any other utility project for a residential owner. This may result in a password and a contract ID being provided to the PEV owner to be entered into the PEV to enable the PEV to participate in the application. At a parking garage, the driver may just be handed a ticket with the password that is required to activate the EVSE. This may be an automatic enrollment that allows the garage to manage the rate of charging during the session.

4.8.3.2 Initial Setup Process Step

Some of the V2G applications and some of the functions in use case U7 may benefit from a onetime setup to support many future V2G sessions. This may require manual data entry in the vehicle to perform the initialization. It also may require the PEV to be connected to the EVSE and the internet to download and configure settings. This may include loading curves to support autonomous functions as described in 4.7.7. It may be possible to perform this step at the start of a regular charging session that will use the specific new application, but it is not the same process as that used to setup every regular session. It is also possible that the initial setup could be performed as a background task during a session that is associated with a different V2G application.

4.8.3.3 Session Process Step

Figure 39 shows that for any given enrollment there can be many sessions until participation the V2G application is terminated. The figure is not intended to denote parallel sessions. Some applications may only have a single session between enrollment and termination. Other applications may involve participation every time the PEV connects to an EVSE over many years.

The session step can be segmented into lower level process steps as shown in Figure 40. The active session is bounded by the plugging in of the PEV to the EVSE and the unplugging of the PEV from the EVSE, although some manual data entry can be performed in the PEV just before or just after plugging in the PEV.

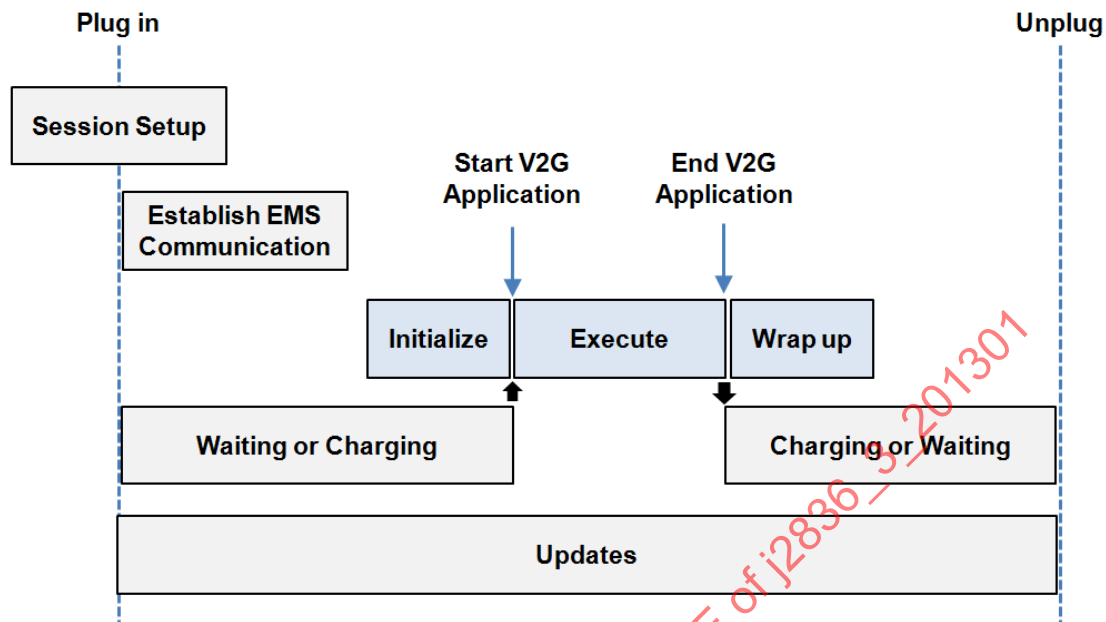


FIGURE 40 - ELEMENTS OF ACTIVE SESSION

The session setup step is where the vehicle operator would enable the PEV to participate in a specific V2G application as a DER device. This could also be preauthorized and happen automatically whenever the PEV is plugged in at a specific EVSE location. Initial setup process step could also be performed for the intended V2G application during this step if it was not already performed during an earlier charging session. This is the process step where the vehicle operator also defines the time when the vehicle is expected to disconnect and it needs to be fully charged.

Immediately after being plugged in the PEV must establish secure communication with the EMS controlling the V2G application and reach mutual agreement to engage in the application during the session. This is where the security of the connection is established and that EMS and PEV are authorized to engage. Terms such as association, binding, protocol information exchange, certificate update, certificate installation, authentication, authorization, and identification apply to this process step.

This figure only shows one V2G application occurring within the connection period, but it is possible that several sequential sessions could be entered for a specific V2G application or for different applications. It is also possible that non conflicting applications could run in parallel. A representative V2G application is shown by the blue shaded blocks. If the V2G application was not scheduled to begin immediately after plug in, the PEV could either wait or start charging, as determined by other operator settings. Use Cases U5, U6 and U7 primarily deal with the processes and communication shown by the blue shaded boxes.

Before the V2G application starts the EMS and PEV will perform an electronic initialization. This could occur immediately after plug-in and the establishment of communication or it could occur just before the application starts sending the first command to the PEV. This is the time that information that may not need to be updated regularly during the V2G engagement is exchanged between the EMS and the PEV. Information that changes throughout the V2G engagement would be part of the execution phase.

During the execution phase the EMS and PEV will exchange information and commands at a regular update rate, consistent with the operational bandwidth of the V2G application. This will continue until the V2G application releases the PEV, or the PEV needs to disengage to complete charging, or the operator disconnects the PEV from the EVSE.

Immediately after the V2G application ends, there may be some summary information that needs to be exchanged between the EMS and the PEV. This is done during the V2G wrap up step. This step may not be needed if running summary information is provided to the EMS after each pass through the command loop. This avoids a potential problem if the vehicle is unplugged before the summary information is transferred. In this case the PEV will need to complete the data processing and transmit it during a subsequent connection event.

The update block is not related to the V2G application being performed. While the PEV is engaged in charging or another DER activity, it is possible that curves and parameters could be updated for a future session as a background task during the current session. The initial setup process step described earlier could be performed this way. The update process could involve manual data entry and establishing communication with the EMS for a future new V2G application.

4.8.3.4 Post Session Process Step

After a PEV disconnects there will need to be back office post processing by the V2G application owner to assess DER performance and determine compensation for services. Information needed by the EMS should be provided by the PEV prior to disconnect during the Post DER phase of the active session. If the disconnect happens before this transfer can be completed the PEV needs to save the information and provide it to the EMS at the first opportunity when the PEV is connected again. For every connection event and V2G application engagement, there will need to be some post session data processing.

4.8.3.5 Termination Process Step

When a PEV owner no longer wishes to participate in a future session of a V2G application the enrollment must be terminated. The formality of the enrollment will generally dictate the formality of the termination process. The contract terms will define the termination requirements for formal agreements. Some enrollments may only be for a single event and termination is automatic. Specific notification of application owner in person, by email, by internet, or mail may be required. Manual update of vehicle settings may be required. An electronic exchange may be required between the PEV and the application EMS may also be required. At the end of this step the contract is considered complete, all final payments are completed, and the ability to engage in an electronic association between the PEV and application EMS is cleared.

4.8.4 Process Flow Differences for External EVSE Inverter Scenarios

All of the steps shown for the PEV Direct scenario apply to the scenarios that are based on an external EVSE inverter. Each scenario will require enrollment, initial setup, a session, a post session, and termination. All of the elements within the session step also apply. As expected, there are some differences in the business deals and details of each step. One primary operational difference is the communication between the external inverter and the PEV battery management system (BMS).

4.8.4.1 Control and Business Deals for DC Power Flow

An external EVSE inverter requires the use of two communication and control structures. The EMS for V2G application communicates with the on-board or external EVSE inverter to control the functionality of the inverter as a DER device. This is the primary purpose of this document and J2847/3. This is all about supplying or absorbing real and reactive power as needed by the V2G application. There is also a DC control process for managing the current flow in and out of the battery as needed by the inverter to perform its DER functions. The communication required for control of DC power flow between the EVSE and the PEV will be discussed in the next section. The control process is the same independent of whether the owner of the PEV or the owner of the EVSE contract with the owner of the V2G application.

The business deals for DC power will vary depending on whether the PEV owner or EVSE owner sign up with the V2G application. If the EVSE owner takes on the business deal for the V2G application, the EVSE owner will need to provide some value for the PEV owner (PEV DC Deal). If the PEV owner takes on the business deal for the V2G application, the PEV owner will need to provide some value for the EVSE owner (EVSE DC Deal). The control communication for the external EVSE inverter to interact with the PEV is the same for both DC Deals. It is only the compensation flow that is different depending on whether the PEV owner or EVSE owner gets paid by the V2G application operator. The information exchange between the PEV and EVSE need to support both business cases.

The enrollment in the DC Deals could be very simple. If the EVSE and PEV are owned by the same entity there is no need for a business deal – only the control capability is needed. In a commercial parking facility, both deals could end up being reflected in the charges for access to the EVSE. The access fee to the EVSE would be lower if the EVSE was providing the V2G service and would be higher if the PEV was providing the V2G service using the EVSE inverter.

4.8.4.2 J2847/2 and the External Inverter

The power electronics of an on-board charger is designed to transfer energy to the battery as controlled by the battery management algorithms that define the charging profile. An objective is to charge in the shortest time, subject to the available external power and the rating of the charger, while protecting battery life. The charger may operate in a constant current mode or constant voltage mode. The charger power electronics is the slave of the PEV charging algorithms. The AC current drawn by the charger from the grid at any instant is a direct consequence of the current flowing into the battery and any losses due to charger efficiency or other vehicle loads. The battery requirements lead and the grid current follows.

An on-board inverter functions more like the PEV traction drive than the on-board charger. The traction drive uses the battery as a source of power for acceleration and regenerative braking and of energy for range during cruise. The current flow in and out of the battery is as required for vehicle operability, subject to protective limits set by the battery management system. The inverter must respond to the power needs of the grid in some applications in much the same way that the traction drive responds to the vehicle driver needs for acceleration and braking. The current flowing in and out of the battery is a consequence of the required AC current flow requirements of the V2G application.

An on-board charger/inverter will need two distinct modes of operation. In the charger mode the current flow is controlled as needed by the battery. This mode would be used with use case U5, where the V2G application is only concerned with limiting the rate of charging. In the inverter mode, the DC current flow is a result of the inverter providing or absorbing a specific target value of real and reactive power to the grid. This mode would be used with use case U6 and U7. There is a difference between forward power flow to a target value (U6) and permissive charging to a set upper limit (U5). The PEV algorithms for control of the power electronics and the relationship to the BMS for the inverter function and charger function will be different.

An external inverter will also need to have both a pure charger mode and an inverter mode. SAE J2847/2 was created to define the communications between the PEV and an external DC fast charger. SAE J2847/2 will need to be extended to provide for the inverter mode operation. The purpose and functionality of an inverter and a charger are very different and changes will be needed to accommodate the inverter requirements. It could be that the existing message structure will support both modes and the differences will be in the embedded functionality in the PEV BMS to allow for inverter mode.

4.8.4.3 SAE J2847/3 and the External Inverter

Use Cases U5, U6, and U7 define the inverter functionality and information exchange requirements between the EMS and the PEV on-board inverter to allow many V2G applications to be performed. SAE J2847/3 will define the actual communications that the PEV will use. It is expected that the PEV will use Smart Energy Profile 2.0 (SEP2).

The V2G application EMS may or may not use SEP2 to communicate with PEVs. If the EMS does not use SEP2 there will be a need to translate between the native EMS protocol and SEP2 somewhere in the physical communication channel between the EMS and the PEV. It is possible that multiple translations may be required. This is a generic problem and not specific to PEVs and protocol translators will be needed on the smart grid. It is likely that the EVSE could perform this function if the premises network does not use SEP2.

The bidirectional protocol translation will be needed. The EVSE may be the device that performs it. None of this is related to the scope of vehicle communication. The expectation is that the vehicle sends and receives information in only SEP2 protocol and it is the responsibility of some entity outside the PEV to do the translation.

The relationship between SAE J2847/3 and an external inverter is less clear. The external EVSE inverter is connected directly to the premises network. If the network supports SEP2, the EVSE inverter could use SAE J2847/3 for guidance. However, the external inverter could implement its functionality based on the network protocol. It is only relevant that the PEV be able to provide DC power flow as needed by the EVSE inverter. SAE J2847/2 will govern this exchange. The external EVSE serving as a DER can directly follow the IEC 61850 object model and the local network protocol.

4.8.4.4 EMS to PEV to EVSE Relay

This scenario for using an external EVSE inverter is presented, but it is a bad idea. This is the case where the owner of the PEV signs up with the V2G application provider and plans to use the PEV to engage with the EMS and relay messages to the EVSE. The relay approach would require the EVSE inverter to respond to SEP2 DER messages routed through the PEV from the EMS. The PEV embedded software must be designed to allow for relay of EMS commands to the EVSE. The EVSE must be designed to receive the commands from the PEV and act on them, not route them somewhere. This mode allows the EVSE to be invisible to the EMS because all of the security and authorization is between the EMS and the PEV. But it is cleaner to establish communications directly between the EMS and the EVSE, even if the compensation is setup between the EMS and the PEV.

4.8.5 Simultaneous V2G Applications and Rules of Engagement

Much of the discussion has been about a PEV engaging in a V2G application. But it may be possible to engage in parallel applications and at different tiers. Figure 41 shows three tiers of V2G applications running in parallel across three domains. A PEV may be engaged with a facility EMS to help manage peak demand charges during charging. It may also be engaged with a distribution utility providing VAR support for the feeder using an autonomous volt-VAR function. And a system level aggregator may be using the PEV as part of a fleet to perform frequency regulation. If the facility EMS is only interested in limiting the rate of charging of the PEV, this may not be a conflict if the aggregator actually sets the charging or discharging rate. However, allowing simultaneous applications can create conflicts and rules of engagement will be needed to arbitrate the conflicts.

Safety is the highest priority. Zero reverse flow or zero voltage applied is safe. Utility-interactive inverters are designed to trip within specified clearing times if the measured grid voltage or frequency fall out of specified limits. If there is any conflict between commands from any source, zero reverse flow must always take priority.

The PEV must always protect itself from damage. There may be lower or upper limits on the battery state of charge that must be protected.

The facility limits must always be respected in both directions. The power levels defined by the EVSE control pilot must never be exceeded for either charging or discharging. If a premises EMS provides a lower forward or reverse flow target or limit than any external EMS, or even the control pilot, the premises EMS limit shall always apply.

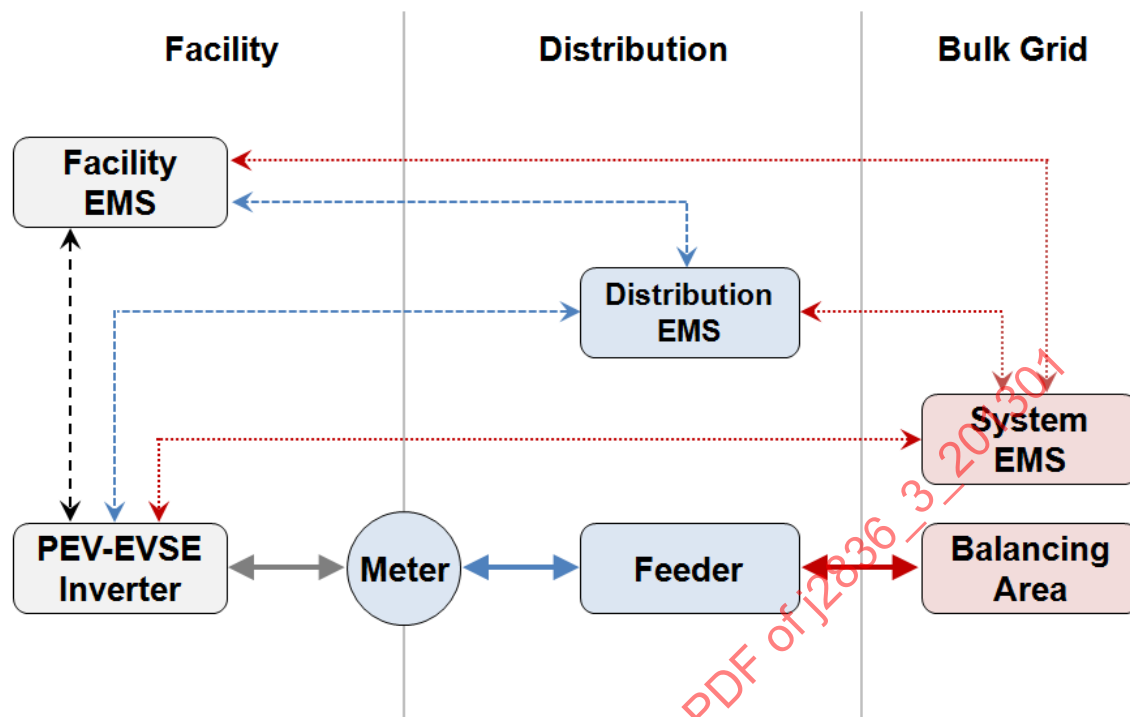


FIGURE 41 - THREE TIERS OF V2G APPLICATIONS

The PEV must also protect the capability to achieve the target energy state by the expected time of disconnect from the EVSE. There will be a disengage time from any reverse flow action based on the state of charge of the battery, the target state of charge at the expected time of disconnect from the EVSE, the power rating of the on-board or external charger, the time needed for conditioning, PEV hotel and parasitic loads, charger efficiency, and other factors known to the PEV, that the PEV will demand that the PEV disengage from reverse flow and resume charging under its own control.

4.8.6 PEV4 Scenario Summary

The characteristics of each of the four PEV4 scenarios are listed in Table 15. The process flows for each are defined in Appendix A.

TABLE 15 - CHARACTERISTICS OF PEV4 SCENARIOS

PEV4 Scenario Characteristics	PEV4 Scenario Name			
	PEV Direct	EVSE Direct	PEV EVSE Direct	PEV EVSE Relay
Inverter Location	PEV	EVSE	EVSE	EVSE
V2G Deal With	PEV owner	EVSE owner	PEV owner	PEV owner
DC Value Received by		PEV owner	EVSE owner	EVSE owner
EMS communicates with	PEV	EVSE	EVSE	PEV

4.8.7 Participation in V2G Applications - Use Cases are Not Selected by the Driver

Advanced inverter functions that could be used by a DER device to support the grid were discussed in section 4.4. The relationship of SAE use cases U5, U6, and U7 to potential V2G applications of a DER device was reviewed in section 4.5. Information exchange considerations between the PEV or EVSE inverter and the EMS of a V2G application were explored in section 4.6 for U6 and in section 4.7 for U7. A PEV or EVSE inverter is not required to implement all of the functionality defined by IEC 61850-90-7 as reflected by U6 or U7. Much of what is defined in these sections has been implemented in the DER function of the Smart Energy Profile 2.0.

When a PEV is enrolled in a V2G program and it has the inverter functionality to enable it to perform the V2G application by engaging with the EMS for the application, the driver does not select a use case, such as U6. These are only for the purpose of defining the communication messages required to be exchanged between the PEV and the EMS. It guides the details of the communication protocol. SAE J2847/3 will use the information from this document to define the messaging required to allow a PEV to engage with an EMS to perform as a DER device in a V2G application.

This top level use case, PEV4, explores the steps from enrollment to termination. A PEV may be enrolled in different V2G programs and some may be expected to happen simultaneously during one connection interval as described in section 4.8.5. Depending on how the PEV is setup, the PEV may automatically just start to engage with a V2G application during a session or it may take a specific action by the driver to enable participation during that session.

Some form of data entry will be required for every session. This is discussed in section 4.3.1 and other sections within 4.3. As a minimum the driver must define when the vehicle plans to disconnect from the EVSE. As described earlier in this document, the “source” for the “time charge is needed” is always the PEV, but the actual data entry could be at the PEV, the EVSE, or even by a remote device. When data is entered using vehicle controls and displays, this will most likely be done using proprietary hardware and software and the look and feel may vary between vehicle manufacturers. Vehicle navigation systems perform the same basic functions, but the controls and displays vary widely by manufacturer. J2847/5 is expected to govern how remote data entry on a portable device or EVSE could be received and used by the PEV in place of a direct entry at the vehicle. For the purpose of this document, it is assumed that any manual entry and selection can be made and accepted by the inverter.

For participation in a V2G application, it is expected that the PEV will display information to allow the PEV operator to designate, for example, that it is desired for the vehicle to engage with a specific frequency regulation aggregator during the session. The driver enters that the PEV will depart at 5:00 pm and needs a 100% SOC at departure. The enrollment application with the aggregator may have required that the V2G application engage cooperatively and use the PEV for frequency regulation, but also ensure that it is charged by departure. Maybe this is a selectable option. Maybe the PEV selects participation from 1:00 p.m. to 2:00 p.m. The data entry within the PEV or between the PEV and an alternate manual entry device is not governed by SAE J2847/3 – only the exchange of information between the PEV and the EMS. The term U6 will not appear to the driver in any implementation because it is only a reference for defining inverter functionality and messaging between the EMS and PEV inverter to make use of the functionality. Once the messages exist in the communication protocol, the name U6 or even IEC names like INV4 are not relevant.

In summary, operationally a driver will apply to participate in a program with a V2G application provider and receive the necessary information to allow the PEV to actually engage with the EMS as a DER device. This may require a onetime initialization process to be performed with manual data entry at the PEV and downloads to the PEV from the V2G EMS or back office systems. There will be standard controls and displays provided by the vehicle manufacturer that allow the vehicle to use its inverter functionality as a DER device with some EMS. There may be options to do this data entry using the EVSE or a remote device as defined by J2847/5. The specific functions that the EMS requests the PEV inverter to use do not have to be designated. The V2G application will command whatever inverter functions are needed and implemented in the PEV using the communication protocol.

The objective is to define the inverter functionality and the communication capability to allow the PEV to be used as a DER device by a wide range of V2G applications – at the bulk system level, the distribution feeder, and behind the meter.

5. NOTES

5.1 Marginal Indicia

A change bar (I) located in the left margin is for the convenience of the user in locating areas where technical revisions, not editorial changes, have been made to the previous issue of this document. An (R) symbol to the left of the document title indicates a complete revision of the document, including technical revisions. Change bars and (R) are not used in original publications, nor in documents that contain editorial changes only.

PREPARED BY THE SAE HYBRID - EV COMMITTEE

SAENORM.COM : Click to view the full PDF of J2836-3-201301

APPENDIX A - USE CASE PEV4

A.1 USE CASE NAME: PEV AS A DISTRIBUTED ENERGY RESOURCE (PEV4)

A.2 USE CASE SUMMARY

This use case describes the process steps needed to enroll a PEV or EVSE as a DER in a V2G application (or program), perform the initial setup of the PEV or EVSE, engage in one or more sessions, be compensated for participation, and terminate the participation in the V2G program sometime in the future.

A.3 USE CASE NARRATIVE

This is intended to be a high level overview of the processes used for a PEV or EVSE to engage as a DER device in a V2G application. The inverter is the core of a DER device. However, only a few of the process steps involve actual use of the functionality of the inverter and active communication between the inverter and the EMS controlling the V2G application. Many of the process steps in PEV4 involve electronic communications for purposes other than the control of the inverter. This is true of the processes involved with establishing secure communications and authorizing the PEV to participate with the V2G application EMS. There may be other processes associated with providing meter information and conducting business transactions. Some of the data entry functions will be provided using proprietary vehicle software and equipment.

This use case is at a summary level and it is not intended to be a guide for any specific communication standard. SAE J2847/3 will address the communication needs between the PEV and EMS for use cases U6 and U7. Similarly SAE J2847/2 will deal with the EVSE inverter to PEV communications required for the EVSE inverter to be able to operate with a PEV battery.

A.4 OVERVIEW OF SCENARIOS

Four scenarios will be described in this appendix. The names of each scenario and the key characteristics of each scenario are listed in the Table A.1.

TABLE A.1 – OVERVIEW OF PEV4 SCENARIOS

PEV4 Scenario Characteristics	PEV4 Scenario Name			
	PEV Direct	EVSE Direct	PEV EVSE Direct	PEV EVSE Relay
Inverter Location	PEV	EVSE	EVSE	EVSE
V2G Deal With	PEV owner	EVSE owner	PEV owner	PEV owner
DC Value Received by		PEV owner	EVSE owner	EVSE owner
EMS communicates with	PEV	EVSE	EVSE	PEV

A.5 SCENARIO NAME: PEV4 – PEV DIRECT

A.5.1 Scenario Narrative

An owner of a PEV with an on-board inverter wishes to enroll and participate in a V2G application (program). This scenario describes the process steps to enroll in the program, perform the initial setup of the PEV, engage in one or more sessions, be compensated for participation, and terminate the participation in the V2G program sometime in the future.

Two business arrangements are required to engage in the V2G program: one between the PEV owner and V2G owner (PEV V2G Deal) and one between the PEV owner and the EVSE owner (EVSE AC Deal). These agreements could be very formal agreements or they may be very informal. For example the use of the PEV behind the meter by a home EMS would not require any business deals between the PEV and home EMS or between the PEV and EVSE. But there would need to be some setup information entered into both the home EMS and the PEV and possibly even the AC EVSE. At a public parking garage, the PEV would require a formal business arrangement with a frequency regulation aggregator and would have a simple payment plan of some sort with the garage (EVSE) owner for the use of the equipment, parking space, and energy.

A.5.2 Preconditions

The PEV has an on-board inverter and it is capable of communicating with the EMS of the V2G application (program) owner. The inverter has the required functionality to perform the intended V2G application.

A.5.3 Scenario Step-by-Step Description

TABLE A.2 - PEV DIRECT SCENARIO

<i>Process Step</i>		<i>Actor(s)</i>	<i>Description</i>
1 - Enrollment		V2G Owner PEV Owner	V2G owner promotes a V2G program and makes enrollment materials available to PEV owners. PEV owner provides completed enrollment information to V2G owner. V2G owner accepts the application and provides setup materials to the PEV owner. V2G owner sets up the PEV in the EMS and other back office systems.
		EVSE Owner PEV Owner	EVSE owner promotes use of EVSE for DER use and makes enrollment materials available to PEV owner. PEV owner provides completed enrollment information to EVSE owner. EVSE owner accepts the application and provides setup information to PEV owner. EVSE owner sets up the PEV in the EVSE and any back office systems.
2 - Initial Setup		PEV Owner PEV	The appropriate settings are manually entered using PEV controls and displays to allow the PEV to participate as a DER device in the enrolled V2G program using the AC EVSE. This can be done as a background update during another charging event or at the start of the first session during which the PEV will participate in this new V2G program.
3 - Session			
	3.1 - Plug-in PEV	PEV Owner	PEV is connected to an AC Level 2 EVSE that allows the PEV to participate as a DER.
	3.2 - Session Setup	PEV Owner PEV	PEV owner enters session settings using PEV controls and displays to allow the PEV to participate as a DER device in the enrolled V2G program. Communication may need to be established to complete the activity. It may be started before plugging connecting to the EVSE.
	3.3 - Establish Communication	PEV EMS	PEV and EMS establish secure communications and enable the PEV to engage as a DER device under control of the EMS for the enrolled V2G program.
	3.4 - Initialize V2G	PEV EMS	Prior to or immediately at the start of the active V2G engagement of the PEV as a DER, the PEV and EMS exchange information that is expected to remain constant during the execution phase
	3.5 - Execute V2G	PEV EMS	EMS receives state information from PEV and provides DER control commands to PEV continually during the active engagement.

<i>Process Step</i>		<i>Actor(s)</i>	<i>Description</i>
	3.6 - Wrap up V2G	PEV EMS	EMS receives final state information from PEV. PEV may acquire information from meter or other devices to relay to EMS or EMS may directly engage other systems.
	3.7 - Updates	PEV Owner PEV EMS	PEV owner may perform data entry that is needed for a future V2G session. Automatic updates by the EMS of parameters or curves for a future session may also occur. If required for the current session this must have been done during a prior session or during the session setup phase.
	3.8 - Unplug PEV	PEV Owner PEV	The PEV is disconnected from the EVSE. The PEV should terminate and wrap up any V2G program that has not already ended before disconnect. If final information exchange with EMS has not been completed, information must be saved and provided to EMS during a future connection event.
4 - Post Session		EMS V2G Owner	EMS provides V2G engagement information for PEV to the V2G owner's back office systems for performance assessment and compensation of PEV owner.
5 - Termination		PEV Owner V2G Owner PEV EMS	PEV owner provides request to V2G owner to no longer participate in the enrolled V2G program in accordance with terms of enrollment. V2G owner accepts termination and resets EMS. PEV owner resets PEV to disable V2G program. This could be automatic for single event enrollments.

SAENORM.COM : Click to view the full PDF of J2836/3-201301

A.6 ASCENARIO NAME: PEV4 - EVSE DIRECT

A.6.1 Scenario Narrative

An owner of an EVSE with an inverter wishes to enroll and participate in a V2G application (program). This scenario describes the process steps for the EVSE owner to enroll in the program, perform the initial setup of the EVSE, engage in one or more V2G sessions, be compensated for participation, and terminate the participation in the V2G program sometime in the future.

Two business arrangements are required to engage in the V2G program: one between the EVSE owner and V2G owner (EVSE V2G Deal) and one between the EVSE owner and the PEV owner (PEV DC Deal). Just as with the PEV Direct scenario these agreements could be very formal agreements or they may be very informal. The owner of the EVSE receives value from the owner of the V2G program for participation. The owner or the PEV in turn receives some value from the owner of the EVSE, and this could be as simple as a preferred rate for parking and charging at a commercial parking garage.

If a commercial parking facility signs up to use all of its EVSEs to perform a DER application, this would be considered to be a Building to Grid (B2G) program. In this case it would use a facility EMS to manage the individual EVSE units. Each EVSE is enrolled with the facility EMS under this scenario. The facility itself is enrolled as a B2G provider using its EMS to communicate with the utility EMS. The individual V2G enrollments tier to a single B2G enrollment. The B2G enrollment for the facility with the utility would be formal. The internal agreements between the many EVSE units and the building EMS would be informal – just what is needed to set up the communication. Each PEV would have an arrangement with the facility, which operates the EVSE units, for the DC power transfer.

A.6.2 Preconditions

The EVSE has an inverter that is capable of communicating with the EMS of the V2G application (program) owner. The inverter has the required functionality to perform the intended V2G application. The PEV is capable of engaging with an external inverter for DC power flow.

A.6.3 Scenario Step-by-Step Description

TABLE A.3 - EVSE DIRECT SCENARIO

<i>Process Step</i>	<i>Actor(s)</i>	<i>Description</i>
1 - Enrollment	V2G Owner EVSE Owner	V2G Owner promotes a V2G program and makes enrollment materials available to EVSE owners. EVSE owner provides completed enrollment information to V2G owner. V2G owner accepts the application and provides V2G setup materials to the EVSE owner. V2G owner sets up the EVSE in the V2G EMS and other back office systems.
	EVSE Owner PEV Owner	EVSE owner promotes use of DC power flow and makes enrollment materials available to PEV owner. PEV owner provides completed enrollment information to EVSE owner. EVSE owner accepts the application and provides DC flow setup materials to the PEV owner. EVSE owner sets up the PEV in the EVSE and any back office systems.
2 - Initial Setup	EVSE Owner EVSE	The appropriate settings are manually entered using EVSE controls and displays to allow the EVSE to participate as a DER device in the enrolled V2G program. This can be done as a background update during another charging event or at the start of the first session for this new V2G program.
	PEV Owner PEV	The appropriate settings are manually entered using PEV controls and displays to allow the PEV to participate in DC charging, DC forward power flow, and DC reverse power flow with the designated EVSE inverter.
3 - Session		

<i>Process Step</i>		<i>Actor(s)</i>	<i>Description</i>
	3.1 - Plug-in PEV	PEV Owner	The PEV is connected to the DC EVSE
	3.2 - Session Setup	PEV Owner PEV EVSE	PEV owner enters session settings using PEV controls and displays and allows the PEV battery to be used by the EVSE inverter for DC power flow. EVSE retrieves information from PEV, as needed, to perform session setup of the EVSE for the V2G program.
	3.3 - Establish Communication	EVSE EMS	EVSE and EMS establish secure communications and enable the EVSE to engage as a DER device under control of the EMS for the enrolled V2G program.
		PEV EVSE	PEV and EVSE establish secure communications to allow for management and control of DC power flow by the EVSE inverter. J2847/2 governs communication.
	3.4 - Initialize V2G	EVSE PEV EMS	Prior to or immediately at the start of the active V2G engagement of the EVSE as a DER, the EVSE and EMS exchange information that is expected to remain constant during the execution phase. EVSE retrieves information from PEV as needed to provide to EMS or as needed by EVSE to manage DC power flow.
	3.5 - Execute V2G	EVSE PEV EMS	EMS receives state information from EVSE and provides DER control commands to EVSE continually during the active engagement. EVSE retrieves information from PEV as needed to provide to EMS or as needed by EVSE to manage DC power flow.
	3.6 - Wrap up V2G	EVSE PEV EMS	EVSE receives final state information from PEV and then EMS receives final consolidated state information from EVSE. EVSE may acquire information from PEV, meter, or other devices to relay to EMS or EMS may directly engage other systems.
	3.7 - Updates	EVSE Owner EVSE EMS	EVSE owner may perform data entry that is needed for a future V2G session. Automatic updates by the EMS of parameters or curves for a future session may also occur. If required for the current session this must have been done during a prior session or during the session setup phase.
4 - Post Session	3.8 - Unplug PEV	PEV Owner EVSE	The PEV is disconnected from the EVSE. The EVSE should terminate and wrap up any V2G program that has not already ended.
		EMS V2G Owner	EMS provides V2G engagement information for EVSE to the V2G Owner back office systems for performance assessment and compensation of EVSE owner.
5 - Termination		EVSE EVSE Owner	EVSE provides PEV engagement information to EVSE owner's back office systems for performance assessment and compensation of PEV owner.
		PEV Owner EVSE Owner PEV EVSE	PEV owner provides request to EVSE owner to no longer participate in the DC flow program in accordance with terms of enrollment. EVSE owner accepts termination and resets EVSE. PEV owner resets PEV to disable DC program. This could be automatic for single event enrollments.
		EVSE Owner V2G Owner EVSE EMS	EVSE owner provides request to V2G owner to no longer participate in the enrolled V2G program in accordance with terms of enrollment. V2G owner accepts termination and resets EMS. EVSE owner resets EVSE to disable V2G program. This could be automatic for single event enrollments.

A.7 SCENARIO NAME: PEV4 - PEV EVSE DIRECT

A.7.1 Scenario Narrative

An owner of a PEV wishes to directly enroll and participate in a V2G application (program) but plans to use an inverter in an EVSE. The EVSE is setup to communicate directly with the V2G EMS. This scenario describes the process steps for the PEV owner to enroll in the program, perform the initial setup of the PEV, engage in one or more V2G sessions, be compensated for participation, and terminate the participation in the V2G program sometime in the future.

This scenario requires the EVSE be used in the PEV's V2G program to be approved by the V2G owner to directly participate with the EMS for control of the DER. Three arrangements are used: one between the PEV and V2G owners (PEV EVSE Direct V2G Deal), another between the EVSE and V2G owners (EVSE DER Deal), and a third between the PEV and EVSE owners (EVSE DC Deal). This last agreement allows the EVSE to use the PEV as a DC power source and defines the compensation arrangement of the EVSE owner for allowing the PEV to engage in the V2G application.

A.7.2 Preconditions

The EVSE has an inverter that is capable of communicating with the EMS of the V2G application (program) owner. The inverter has the required functionality to perform the intended V2G application. The PEV is capable of engaging with an external inverter for DC power flow.

A.7.3 Scenario Step-by-Step Description

TABLE A.4 - PEV EVSE DIRECT SCENARIO

<i>Process Step</i>		<i>Actor(s)</i>	<i>Description</i>
1 - Enrollment		V2G Owner PEV Owner	V2G owner promotes a V2G program and makes enrollment materials available to PEV owners. PEV owner provides completed enrollment information to V2G owner. V2G Owner accepts the application and provides V2G setup materials to the PEV owner. V2G owner sets up the PEV in the V2G EMS and other back office systems.
		V2G Owner EVSE Owner	V2G owner promotes a V2G program and makes enrollment materials available to EVSE owners. EVSE owner provides completed enrollment information to V2G owner. V2G Owner accepts the application and provides V2G setup materials to the EVSE owner. V2G owner sets up the EVSE in the V2G EMS.
		EVSE Owner PEV Owner	EVSE owner promotes use of EVSE inverter for use by PEVs that wish to directly enroll in a V2G program. PEV owner provides completed enrollment information to EVSE owner. EVSE owner accepts the application and provides DC power flow setup materials to the PEV owner. EVSE owner sets up the PEV in the EVSE to allow DC flow.
2 - Initial Setup		PEV Owner PEV	The appropriate settings are manually entered using PEV controls and displays to allow the PEV to participate as a DER device in the enrolled V2G program and to allow the PEV to participate in DC charging, DC forward power flow, and DC reverse power flow with the EVSE inverter. This can be done as a background update during another charging event or at the start of the first session for this new V2G program.
3 - Session			
	3.1 - Plug-in PEV	PEV Owner	The PEV is connected to the DC EVSE
	3.2 - Session Setup	PEV Owner PEV EVSE	PEV owner enters session settings using PEV controls and displays to allow the PEV battery to be used by the EVSE inverter for DC forward and reverse power flow. The EVSE retrieves information from PEV, as needed, to perform session setup of the EVSE for the V2G program. Initial setup information for EVSE inverter may need to be transferred from PEV to EVSE.

<i>Process Step</i>		<i>Actor(s)</i>	<i>Description</i>
	3.3 - Establish Communication	PEV EVSE	PEV and EVSE establish secure communications to allow for management and control of DC power flow by the EVSE inverter and the relay of information between the EMS and the EVSE for V2G DER messages. SAE J2847/2 governs communication for power flow control.
		EVSE EMS	EVSE and EMS establish secure communications and enable the EVSE to engage as a DER device under control of the EMS for the PEV's enrolled V2G program.
	3.4 - Initialize V2G	EVSE PEV EMS	Prior to or immediately at the start of the active V2G engagement of the EVSE as a DER, the EVSE and EMS exchange information that is expected to remain constant during the execution phase. EVSE retrieves information from PEV as needed to provide to EMS or as needed by EVSE to manage DC power flow.
	3.5 - Execute V2G	EVSE PEV EMS	EMS receives state information from EVSE and provides DER control commands to EVSE continually during the active engagement. EVSE retrieves information from PEV as needed to provide to EMS or as needed by EVSE to manage DC power flow.
	3.6 - Wrap up V2G	EVSE PEV EMS	EVSE receives final state information from PEV and then EMS receives final consolidated state information from EVSE. EVSE may acquire information from PEV, meter, or other devices to relay to EMS or EMS may directly engage other systems.
	3.7 - Updates	EVSE Owner EVSE EMS	EVSE owner may perform data entry that is needed for a future V2G session. Automatic updates by the EMS of parameters or curves for a future session may also occur. If required for the current session this must have been done during a prior session or during the session setup phase.
		PEV Owner PEV EMS	PEV owner may perform data entry that is needed for a future V2G session. If required for the current session this must have been done during a prior session or during the session setup phase
	3.8 - Unplug PEV	PEV Owner PEV EVSE	The PEV is disconnected from the EVSE. The EVSE and PEV should terminate and wrap up any V2G program that has not already ended. If final information exchange with EMS has not been completed, information must be saved and provided to EMS during a future connection event.
4 - Post Session		EMS V2G Owner	EMS provides V2G engagement information for PEV to V2G Owner back office systems for performance assessment and compensation of PEV owner.
		EVSE EVSE Owner	EVSE provides PEV engagement information to EVSE owner's back office systems for performance assessment and compensation of EVSE owner by PEV owner.
5 - Termination		PEV Owner EVSE Owner PEV EVSE	PEV owner provides request to EVSE owner to no longer participate in the DC flow program and V2G program accordance with terms of enrollment. EVSE owner accepts termination and resets EVSE. PEV owner resets PEV to disable DC program and V2G program. This could be automatic for single event enrollments.
		PEV Owner V2G Owner PEV EMS	PEV owner provides request to V2G owner to no longer participate in the enrolled V2G program in accordance with terms of enrollment. V2G owner accepts termination and resets EMS. PEV owner resets PEV to disable V2G program. This could be automatic for single event enrollments.
		EVSE Owner V2G Owner EVSE EMS	EVSE owner provides request to V2G owner to no longer participate in the enrolled V2G program in accordance with terms of enrollment. V2G owner accepts termination and resets EMS. EVSE owner resets EVSE to disable V2G program.